

UBON SP-43

UBON SP-43 TWS Lightup 5W Bluetooth Speaker User Manual

Model: SP-43

1. INTRODUCTION

Thank you for choosing the UBON SP-43 TWS Lightup 5W Bluetooth Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it carefully before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water and liquids, despite its waterproof rating, to prevent damage to internal components.
- Do not attempt to disassemble, repair, or modify the speaker yourself. This will void the warranty and may cause damage or injury.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- UBON SP-43 TWS Lightup 5W Bluetooth Speaker
- USB Charging Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the buttons and ports on your UBON SP-43 speaker:



Image: Rear view of the UBON SP-43 speaker, highlighting the various ports and control buttons. Labels include Wireless, USB, TF Card, Radio, AUX, Play/Pause/Call Receive, TF Card slot, Volume Up, DC/5V charging port, Mode button, AUX input, On/Off switch, Volume Down, and USB port.

- **PLAY/PAUSE / CALL RECEIVE Button:** Controls music playback and phone calls.
- **TF CARD Slot:** For inserting a MicroSD card to play music.
- **VOL (+) Button:** Increases volume; long press for next track.
- **DC/5V Port:** Charging input for the speaker.
- **MODE Button:** Switches between Bluetooth, TF Card, AUX, and FM Radio modes.
- **AUX Port:** 3.5mm audio input for wired connection.
- **ON/OFF Switch:** Powers the speaker on or off.
- **VOL (-) Button:** Decreases volume; long press for previous track.

- **USB Port:** For USB drive playback.

5. SETUP

5.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the **DC/5V** port on the speaker.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.
4. A full charge typically takes 2-3 hours.

5.2 Power On/Off

- To power on, slide the **ON/OFF** switch to the 'ON' position. You will hear an audible prompt.
- To power off, slide the **ON/OFF** switch to the 'OFF' position.

5.3 Bluetooth Pairing

SMART AND EASY TO USE

Connect your bluetooth device anywhere

BLUETOOTH (1-10)mtr. (TWS Function)



Image: The UBON SP-43 speaker with a Bluetooth icon, a TF card, and a smartphone displaying a call screen, illustrating its connectivity features.

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED or an audible prompt). If not, press the **MODE** button to switch to Bluetooth mode.
2. Enable Bluetooth on your smartphone or other audio device.
3. Search for available Bluetooth devices. You should see "**UBON SP-43**" in the list.
4. Select "**UBON SP-43**" to connect. Once paired, you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device if it is within range and Bluetooth is enabled.

5.4 TWS (True Wireless Stereo) Function

The TWS function allows you to pair two UBON SP-43 speakers together for a stereo sound experience.

1. Ensure both UBON SP-43 speakers are powered on and in Bluetooth mode, but not yet connected to any device.
2. On one of the speakers (this will be the primary speaker), long press the **MODE** button for 3-5 seconds. You will hear a pairing tone.

3. The two speakers will automatically search and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your smartphone or audio device to the primary speaker via Bluetooth as described in section 5.3.
5. Audio will now play in stereo through both speakers.

6. OPERATING INSTRUCTIONS

6.1 Music Playback

- **Play/Pause:** Short press the **PLAY/PAUSE** button.
- **Volume Up:** Short press the **VOL (+)** button.
- **Volume Down:** Short press the **VOL (-)** button.
- **Next Track:** Long press the **VOL (+)** button.
- **Previous Track:** Long press the **VOL (-)** button.

6.2 Call Handling

When connected to a smartphone via Bluetooth:

- **Answer/End Call:** Short press the **PLAY/PAUSE** button.
- **Reject Call:** Long press the **PLAY/PAUSE** button.

6.3 Mode Switching

Press the **MODE** button repeatedly to cycle through available input modes:

- Bluetooth Mode
- TF Card Mode
- AUX Mode
- FM Radio Mode

6.4 TF Card Playback

Insert a MicroSD (TF) card with MP3 audio files into the **TF CARD** slot. The speaker will automatically switch to TF Card mode and begin playback.

6.5 AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the **AUX** port using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode or can be manually selected using the **MODE** button.

6.6 FM Radio

1. Switch to FM Radio mode using the **MODE** button.
2. Short press the **PLAY/PAUSE** button to automatically scan and save available FM stations.
3. Once scanning is complete, short press the **VOL (+)** or **VOL (-)** buttons to navigate between saved stations.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place when not in use for extended periods.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to maintain battery health.

8. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable.
No sound from the speaker.	Check the speaker's volume level and your connected device's volume. Ensure the correct input mode (Bluetooth, TF Card, AUX) is selected.
Bluetooth connection fails or disconnects frequently.	Ensure the speaker is in Bluetooth pairing mode. Move your device closer to the speaker. Try unpairing and re-pairing the speaker from your device's Bluetooth settings.
Poor FM radio reception.	Try repositioning the speaker to improve signal reception. Ensure you have performed an auto-scan for stations.
TWS pairing fails.	Ensure both speakers are powered on and not connected to any other Bluetooth device. Repeat the TWS pairing steps carefully.

9. SPECIFICATIONS

- **Brand:** UBON
- **Model Name:** SP-43
- **Speaker Maximum Output Power:** 5 Watts
- **Connectivity Technology:** Bluetooth
- **Audio Output Mode:** Stereo
- **Is Waterproof:** TRUE
- **Control Method:** Touch
- **Power Source:** Battery Powered
- **Compatible Devices:** Smartphone, Tablet

10. WARRANTY INFORMATION



LIGHTUP

WIRELESS SPEAKER



SP-43



Image: Packaging of the UBON SP-43 speaker, prominently displaying a '6 Months Warranty' badge against manufacturing defects.

The UBON SP-43 TWS Lightup 5W Bluetooth Speaker comes with a **6-month warranty** against manufacturing defects from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damages resulting from:

- Accidental damage, misuse, abuse, neglect.
- Unauthorized repair or modification.
- Normal wear and tear.
- Damage caused by external factors such as power surges or natural disasters.

Please retain your purchase receipt as proof of purchase for warranty claims.

11. SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact UBON customer

support. Refer to the product packaging or the official UBON website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question