

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AUNA](#) /

› [auna pro DisGo Box DVD Mobile PA System User Manual](#)

AUNA PAS5_Disgobox DVD

auna pro DisGo Box DVD Mobile PA System User Manual

Model: PAS5_Disgobox DVD

1. INTRODUCTION

Thank you for purchasing the auna pro DisGo Box DVD Mobile PA System. This versatile audio system is designed for karaoke events, presentations, and various mobile sound applications, featuring an integrated DVD player, Bluetooth connectivity, USB/SD slots, and wireless UHF microphones. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before operating the device. Keep this manual for future reference.

- **Power Source:** Only connect the device to a power supply as indicated on the rating label. Ensure the voltage is compatible.
- **Battery Safety:** Do not expose the battery to excessive heat or direct sunlight. Do not short-circuit the battery terminals. Fully charge the battery before first use.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the device to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids on the device.
- **Cleaning:** Disconnect the power before cleaning. Use a dry, soft cloth. Do not use liquid cleaners or aerosols.
- **Servicing:** Do not attempt to repair the unit yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, flat surface. Avoid placing it near heat sources or in direct sunlight.
- **Microphone Batteries:** Use the correct type and size of batteries for the wireless microphones. Insert batteries with correct polarity.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x PA System Unit
- 1 x Power Cable
- 2 x UHF Wireless Microphones

- 1 x Remote Control
- 1 x User Manual (this document)



Figure 3.1: The auna pro DisGo Box DVD PA system, showing the main unit, two wireless microphones, and the remote control.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your DisGo Box DVD PA system.

4.1 Key Features



- **Powerful Sound:** Equipped with 2 x 10" (25.5 cm) subwoofers for robust audio output.
- **XMR Bass Technology:** Delivers full, deep bass for an immersive sound experience.
- **Integrated DVD Player:** Supports DVD playback for video content.
- **Versatile Connectivity:** Features MP3-compatible USB ports and an SD card slot for diverse music sources.
- **Wireless Microphones:** Includes two UHF wireless microphones for stable, noise-free transmission up to 50 meters.
- **Bluetooth Interface:** Seamlessly stream music from smartphones or tablets.
- **Long Battery Life:** Integrated 7A/12V battery provides approximately 3-5 hours of continuous operation.
- **Portable Design:** Features a retractable trolley handle and smooth-running floor rollers for easy transport.



POWERFUL SOUND

Mobile PA system for karaoke
and moderation events
with 2 x 10" (25.5 cm) subwoofer

Figure 4.1: The system delivers powerful sound, suitable for karaoke and events.

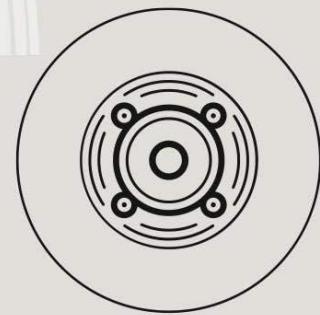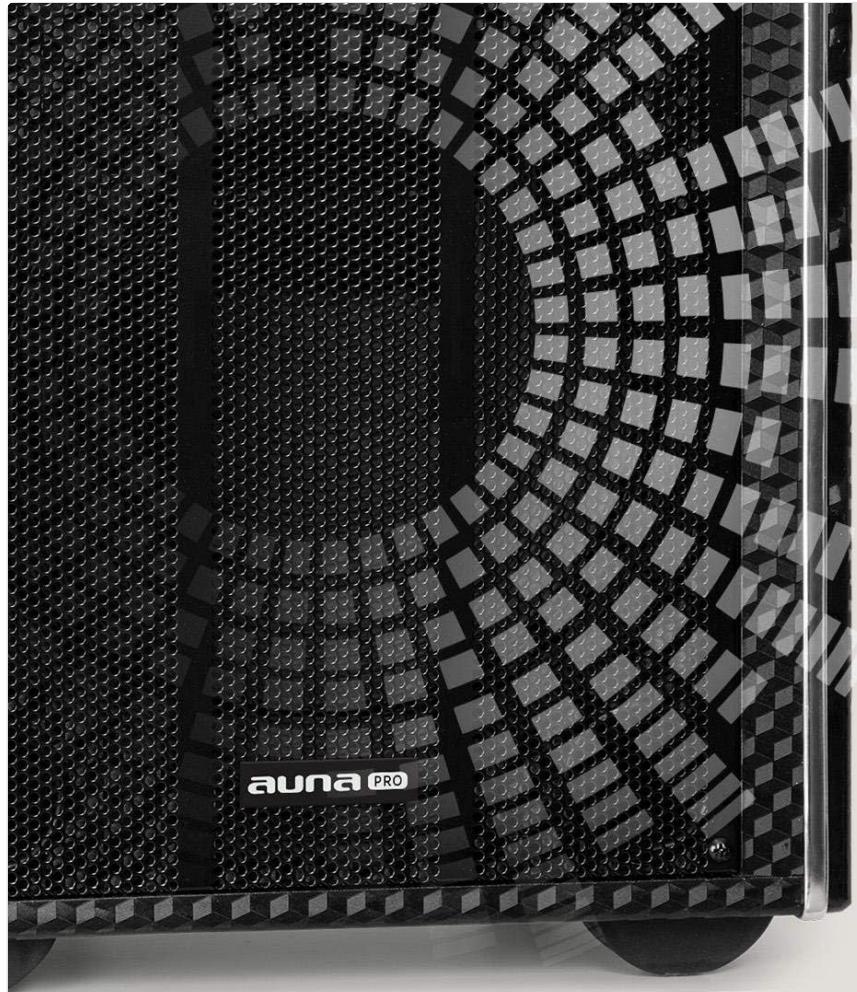

**XMR-Bass
Technology**

FULL POWER

Deep lows thanks to *XMR Bass Technology*

Figure 4.2: XMR Bass Technology ensures full and deep low frequencies.



LONG ENDURANCE

7A/12V battery enables continuous operation of 3 to 5 hours

Figure 4.3: The integrated battery provides extended operating time.



HIGHLY MOBILE

With smooth-running floor rollers
and pull-out trolley handle

Figure 4.4: The system is highly mobile with smooth-running rollers and a pull-out trolley handle.

4.2 Control Panel and Connections

The control panel provides access to all functions and inputs/outputs.

- **Inputs:**

- 1 x 6.3 mm Microphone Input
- 1 x 6.3 mm Guitar Input
- 1 x RCA Line-in
- 3 x USB Ports (MP3 compatible)
- 1 x SD Slot

- **Outputs:**

- 1 x RCA DVD-out
- 1 x RCA Video-out

- 1 x Speaker Terminals
- **Controls:**
 - Volume Controls
 - 2-band Equalizer (Bass and Treble)
 - Microphone Volume and Echo Controls
 - DVD Player Controls
 - Input Selector

WELL CONNECTED

With 1 x 6.3 mm microphone input, 1 x 6.3 mm guitar input, 1 x RCA line-in, 1 x RCA video-out, 1 x RCA DVD-out



Figure 4.5: The top control panel with various inputs and sound adjustments.



CAN BE CONNECTED ANYWHERE

DVD player, MP3-compatible USB ports and SD memory card slot for musical variety

Figure 4.6: The front panel features the DVD player, USB ports, and SD card slot for diverse media playback.

5. SETUP

Follow these steps for initial setup of your PA system.

- Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future transport or storage.
- Initial Battery Charge:** Before first use, fully charge the integrated battery for 5-8 hours using the provided power cable. The battery indicator will show charging status.
- Microphone Batteries:** Open the battery compartment of each UHF wireless microphone and insert 2 x 1.5V AA batteries, observing correct polarity.
- Placement:** Position the PA system on a stable, flat surface. Ensure there is sufficient space around the unit for ventilation.
- Power Connection:** Connect the power cable to the unit and then to a suitable power outlet (220-240 V~ | 50/60 Hz). The unit can operate on mains power or its internal battery.

6. OPERATING INSTRUCTIONS

This section details how to operate the various functions of your DisGo Box DVD PA system.

6.1 Power On/Off

Locate the power switch on the unit. Press to turn the system ON or OFF.

6.2 Media Playback (DVD, USB, SD)

1. **DVD Playback:** Insert a DVD into the DVD slot. Use the remote control or front panel buttons to control playback (Play, Pause, Stop, Skip). Connect the RCA video-out to an external display for video.
2. **USB/SD Playback:** Insert a USB flash drive into one of the USB ports or an SD card into the SD slot. The system will automatically detect and play compatible MP3 files. Use the control panel or remote for navigation.

6.3 Bluetooth Connection

Connect your smartphone or tablet wirelessly via Bluetooth.

1. Ensure the PA system is powered on.
2. Select the Bluetooth input mode on the PA system.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "auna pro DisGo Box DVD" (or similar name) from the list to pair.
5. Once paired, you can stream audio from your device to the PA system.

WIRELESS AND CONVENIENT

Bluetooth interface for music playback from smartphone or tablet



Figure 6.1: Easily connect your smartphone or tablet via Bluetooth for wireless audio streaming.

6.4 Using Wireless Microphones

The system includes two UHF wireless microphones for vocal performances.

1. Ensure batteries are inserted correctly into the microphones.
2. Turn on the microphones using their respective power switches.
3. The microphones will automatically connect to the PA system.
4. Adjust microphone volume and echo effects using the dedicated controls on the PA system's control panel.



Figure 6.2: The UHF radio microphones provide wireless performance for singing or speaking.

6.5 Sound Adjustment

Use the equalizer controls to fine-tune the audio output.

- **Bass Control:** Adjusts the low-frequency output.
- **Treble Control:** Adjusts the high-frequency output.
- **Master Volume:** Controls the overall output volume of the system.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your PA system.

- **Cleaning:** Disconnect the power cable before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Care:** To maximize battery life, avoid fully discharging the battery frequently. Recharge the battery regularly, even if the unit is not in use for extended periods (e.g., every 3 months). Store the unit in a cool, dry place.

- Storage:** When not in use, store the unit in a dust-free environment. If storing for a long time, ensure the battery is partially charged.

8. TROUBLESHOOTING

If you encounter issues with your PA system, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cable not connected; battery discharged; power switch off.	Ensure power cable is securely connected. Charge the battery. Turn the power switch ON.
No sound output	Volume too low; incorrect input selected; audio source issue.	Increase master volume. Select the correct input source (DVD, USB, SD, Bluetooth, Line-in). Check audio source device.
Microphones not working	Microphone batteries low/dead; microphone power off; microphone volume low.	Replace microphone batteries. Turn on microphones. Increase microphone volume on the PA system.
Bluetooth connection issues	Device not in pairing mode; previously paired device interfering; distance too far.	Ensure PA system is in Bluetooth pairing mode. Turn off Bluetooth on previously paired devices. Move mobile device closer to the PA system.
DVD not playing	Disc dirty/scratched; incorrect format; disc inserted incorrectly.	Clean the disc. Ensure the disc format is supported. Re-insert the disc correctly.

9. SPECIFICATIONS

Detailed technical specifications for the auna pro DisGo Box DVD Mobile PA System.

Feature	Specification
Model Number	PAS5_Disgobox DVD
Brand	AUNA
Power Output	Max. 300 Watt / 150 Watt RMS
Subwoofer Size	2 x 10" (25.5 cm)
Connectivity	Bluetooth, USB, SD, 6.3mm Microphone, 6.3mm Guitar, RCA Line-in
Outputs	RCA DVD-out, RCA Video-out, Speaker Terminals
Equalizer	2-band (Bass, Treble)
Wireless Microphones	UHF, Handheld type, Range up to 50m
Microphone Power	2 x 1.5V AA Battery per microphone
Battery Type	7A 12V (integrated)
Battery Run Time	Approx. 3 - 5 hours (volume dependent)
Battery Charge Time	5 - 8 hours
Power Supply	220-240 V~ 50/60 Hz (Mains) or 7A 12V Battery

Feature	Specification
Dimensions (WxHxD)	Approx. 37.5 x 59.5 x 30 cm
Dimensions (Trolley Function)	Approx. 37.5 x 89.5 x 30 cm
Weight	Approx. 13.5 kg

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact your retailer or the manufacturer directly. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the official AUNA website or contact their customer service department.

© 2024 AUNA. All rights reserved.

This manual is subject to change without notice.