

HOT TOOLS HT1191

Hot Tools Professional 24K Gold 3-in-1 Crimper and Flat Iron Combo Instruction Manual

Brand: **HOT TOOLS** | Model: **HT1191**

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER** – As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:
 - Always unplug this appliance immediately after using.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
 - Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
 - Never use while sleeping.
 - Never drop or insert any object into any opening.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 - Do not use an extension cord with this appliance.
 - This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
 - Do not place the appliance on any surface while it is operating.

- Do not touch hot surfaces. Use handles or knobs.
- Before plugging in, read the information about dual voltage contained in the operating instruction section of this manual.

Please refer to the product manual included with your item for all specific safety warnings and detailed instructions.

2. PRODUCT OVERVIEW

The Hot Tools Professional 24K Gold 3-in-1 Crimper and Flat Iron Combo is a versatile hair styling tool designed to create various looks, including smooth straight styles, and different crimped textures. It features a 24K Gold styling surface for even heat distribution and adjustable heat settings up to 430°F, suitable for all hair types and textures.



Image: The Hot Tools Professional 24K Gold 3-in-1 styling tool, shown with flat iron plates installed and two crimping plates detached, ready for interchangeability.

Key Features:

- **3-in-1 Functionality:** Easily switch between flat iron and two crimping plate styles.

- **24K Gold Styling Surface:** Ensures even heat distribution for consistent results and long-lasting styles.
- **Variable Heat Settings:** Adjustable temperature up to 430°F (220°C) to accommodate all hair types and textures.
- **Interchangeable Plates:** Allows for creation of smooth, straight hair or various crimped textures.
- **Professional Design:** Durable construction for regular use.

3. COMPONENTS AND CONTROLS

Familiarize yourself with the different parts of your Hot Tools Professional 3-in-1 styling tool.

Components:

- Main Styling Unit
- Flat Iron Plates (1 pair)
- Crimping Plates (2 pairs, different sizes)
- Power Cord



Image: The three types of interchangeable plates: a smooth flat iron plate, a fine crimping plate, and a wider crimping plate.

Controls:

- **Power On/Off Switch:** Integrated with the temperature dial.
- **Temperature Control Dial:** Allows selection of desired heat setting from 310°F to 430°F.
- **Indicator Light:** Illuminates when the tool is heating up and reaches the set temperature.
- **Plate Release Buttons:** Located on the sides of the styling unit for easy plate interchangeability.



Image: A detailed view of the temperature control dial, ranging from 310°F to 430°F, and the red indicator light.

4. SETUP

1. **Unboxing:** Carefully remove the styling tool and all accessories from the packaging. Ensure all components listed in Section 3 are present.
2. **Plate Installation:**
 - Ensure the appliance is unplugged and cool before changing plates.

- Press the plate release buttons on the sides of the styling unit to remove any currently installed plates.
- Select the desired plates (flat iron or crimping).
- Align the chosen plates with the slots in the styling unit and gently slide them in until they click securely into place. Ensure both plates are firmly seated.

3. **Placement:** Place the styling tool on a heat-resistant surface, away from water and flammable materials.

5. OPERATING INSTRUCTIONS

General Operation:

1. **Plug In:** Insert the power cord into a standard electrical outlet.
2. **Turn On and Set Temperature:** Rotate the temperature control dial to your desired heat setting. The indicator light will illuminate and blink until the selected temperature is reached, then it will remain solid.
3. **Pre-heat:** Allow the tool a few moments to reach the set temperature.
4. **Hair Preparation:** Ensure hair is clean, dry, and free of tangles. For best results, apply a heat protectant spray.

Using as a Flat Iron:

With the flat iron plates installed:

1. Section your hair into manageable strands, approximately 1-2 inches wide.
2. Place a section of hair between the heated plates, close to the roots.
3. Gently glide the iron down the length of the hair, from roots to ends, in a smooth, continuous motion.
4. Repeat on all sections until desired straightness is achieved.

UP TO 430°F
FOR ALL HAIR TYPES
AND TEXTURES



Image: A model showcasing hair styled with a smooth, straight finish, achieved using the flat iron plates.

Using as a Crimper:

With the desired crimping plates installed:

1. Section your hair into manageable strands. For a subtle crimp, use larger sections; for a more defined crimp, use smaller sections.
2. Place a section of hair between the heated crimping plates, close to the roots.
3. Press the plates together firmly for a few seconds, then release.
4. Move the crimper down the hair shaft, overlapping the previous crimped section slightly, and repeat the pressing motion until the entire section is crimped.
5. Continue on all sections until desired crimped style is achieved.

CREATE LIGHT, TEXTURED CRIMPS AND ADDED VOLUME



Image: A model displaying hair with a textured, crimped style, created using the crimping plates.

After Use:

1. Rotate the temperature dial to the "OFF" position.
2. Unplug the appliance from the electrical outlet.
3. Allow the tool to cool completely before handling or storing.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your styling tool.

• Cleaning:

- Ensure the appliance is unplugged and completely cool before cleaning.
- Wipe the exterior of the styling tool and the plates with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals, as these can damage the finish and styling surface.

- Do not immerse the appliance in water or any other liquid.
- **Storage:**
 - Store the appliance in a cool, dry place.
 - Do not wrap the cord around the appliance, as this can cause wear and damage to the cord.
 - Keep out of reach of children.

7. TROUBLESHOOTING

If you encounter issues with your Hot Tools Professional 3-in-1 styling tool, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Plates are difficult to change.	Plates not aligned correctly; release buttons not fully pressed.	Ensure the appliance is cool. Press the release buttons firmly and align the plates carefully before sliding them in or out. Do not force the plates.
Hair gets snagged or pulled.	Plates not fully closed; hair not properly detangled; plates not clean.	Ensure plates are fully closed around the hair section. Detangle hair thoroughly before styling. Clean plates regularly to remove product buildup.
Indicator light not working.	Appliance not powered on; malfunction.	Ensure the temperature dial is turned to an ON position. If the appliance heats but the light does not work, contact customer support.

If you experience any issues not covered here, please contact Hot Tools customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	HOT TOOLS
Model Number	HT1191
UPC	078729211915
Product Dimensions	2.35 x 12.6 x 5.15 inches
Item Weight	1.54 Pounds
Material	Iron (24K Gold styling surface)
Color	Gold
Max Temperature	430°F (220°C)
Product Benefits	Interchangeable flat iron and crimping plates for versatile styling

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card or documentation included with your product at the time of purchase. Warranty terms and conditions may vary.

If you require technical assistance, have questions about your product, or need to inquire about warranty service, please contact Hot Tools customer support through their official website or the contact information provided in your product packaging.

Protection plans may be available for purchase separately to extend coverage beyond the manufacturer's warranty. Please check with your retailer for available options.

© 2023 HOT TOOLS. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question