

[manuals.plus](#) /› [Princess](#) /› [Princess 117310 Digital Grill Master Pro Contact Grill Instruction Manual](#)

## Princess 117310

# Princess 117310 Digital Grill Master Pro Contact Grill Instruction Manual

Model: 117310

## INTRODUCTION

Thank you for purchasing the Princess 117310 Digital Grill Master Pro Contact Grill. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is intended for household use only.

## PRODUCT OVERVIEW

The Princess 117310 Digital Grill Master Pro is a versatile contact grill designed for various grilling tasks. It features individually adjustable thermostats for the top and bottom plates, a digital control panel, and the ability to open 180 degrees for use as a table grill.

## Components

- Main Grill Unit with Digital Control Panel
- Upper Grill Plate
- Lower Grill Plate
- Fat Collection Tray
- Power Cord



Figure 1: Princess 117310 Digital Grill Master Pro Contact Grill, shown partially open.



Figure 2: Close-up view of the digital control panel with temperature and timer settings.

## SETUP

- 1. Unpacking:** Carefully remove the grill and all accessories from the packaging. Retain packaging for storage or disposal.
- 2. Initial Cleaning:** Before first use, wipe the grill plates with a damp cloth. Ensure all parts are completely dry. The removable grill plates are dishwasher safe (see Maintenance section).
- 3. Placement:** Place the grill on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
- 4. Fat Collection Tray:** Insert the fat collection tray into its designated slot at the front or side of the grill.
- 5. Power Connection:** Plug the power cord into a grounded wall outlet.

## OPERATING INSTRUCTIONS

### Basic Operation

- 1. Power On:** Plug the appliance into a suitable power outlet. The digital display will illuminate.

2. **Setting Temperature:** Use the two separate temperature dials to set the desired temperature for the upper and lower grill plates individually. The digital display will show the set temperatures.
3. **Preheating:** Allow the grill to preheat until the set temperature is reached. The indicator light will typically change or the display will confirm readiness.
4. **Placing Food:** Carefully place your food onto the lower grill plate.
5. **Grilling:** Close the top plate for contact grilling or leave it open for table grilling (see below).
6. **Timer Function:** Use the timer function on the digital control panel to set a cooking duration. The grill will automatically switch off when the timer expires.
7. **Power Off:** After use, unplug the appliance from the power outlet.

## Using as a Contact Grill

For items like sandwiches, paninis, or thinner cuts of meat, use the grill in its closed position. The floating top plate adjusts to the thickness of your food, ensuring even cooking.



Figure 3: The grill in contact mode, preparing a panini.

## Using as a Table Grill (180° Open Position)

The grill can be opened 180 degrees to create a larger grilling surface, ideal for family meals or grilling different types of food simultaneously (e.g., meat on one plate, vegetables on the other). This is possible due to the two individually adjustable thermostats.



Figure 4: The grill fully opened to 180 degrees, functioning as a table grill.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your grill.

- 1. Before Cleaning:** Always unplug the grill from the power outlet and allow it to cool completely before cleaning.
- 2. Removing Grill Plates:** The grill plates are removable for easy cleaning. Press the release buttons (usually located on the side or front) to detach them.
- 3. Cleaning Grill Plates:** The non-stick grill plates are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- 4. Cleaning Fat Collection Tray:** Empty and wash the fat collection tray after each use. It is also dishwasher safe.
- 5. Cleaning Exterior:** Wipe the exterior of the grill with a damp cloth. Do not use harsh chemicals or abrasive materials. Never immerse the main unit in water or any other liquid.
- 6. Storage:** Ensure all parts are clean and dry before storing. The grill can be stored vertically to save space.





Figure 5: The grill can be stored vertically to optimize space.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the problem persists, contact customer support.
Grill not heating up sufficiently.	Incorrect temperature setting; insufficient preheating time.	Verify the temperature settings on the digital display. Allow adequate time for the grill to preheat to the desired temperature.
Food sticks to grill plates.	Non-stick coating damaged; plates not clean; food not suitable for dry grilling.	Ensure plates are clean before use. For some foods, a light brushing of oil may be necessary, even with non-stick. If coating is damaged, contact support for replacement plates.
Smoke or unusual odor during operation.	Food residue on plates; new appliance odor; excessive fat.	Ensure plates are clean. A slight odor is normal during first use. Empty the fat collection tray regularly. If smoke is excessive or odor is burning, unplug immediately and contact support.

## SPECIFICATIONS

Feature	Detail
Brand	Princess
Model Number	01.117310.01.001
Dimensions (L x W x H)	31.5 x 35.5 x 15.5 cm
Weight	4 Kilograms
Color	Black
Material	Stainless steel, Plastic
Power	2000 Watts
Voltage	230V
Special Features	2 individual heating plates, 2 thermostats, Dishwasher safe removable plates, 180° open function

## WARRANTY AND SUPPORT

### Warranty Information

This Princess appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. The availability of spare parts is typically 1 year from the date of purchase.

### Customer Support

For technical assistance, troubleshooting, or spare parts, please contact Princess customer service. You can usually find contact information on the official Princess website or on your product packaging.

**Website:** [www.princesshome.eu](http://www.princesshome.eu) (Example link, please refer to actual brand website)