

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY RC-1173 Replacement Remote Control User Manual for Denon Amplifiers](#)

ALLIMITY RC-1173

ALLIMITY RC-1173 Replacement Remote Control User Manual

For Denon Integrated Stereo Amplifiers PMA-720AE and PMA-520AE

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your ALLIMITY RC-1173 Replacement Remote Control. This remote is designed to function as a direct replacement for the original remote controls of Denon Integrated Stereo Amplifiers, specifically models PMA-720AE and PMA-520AE.

SETUP

1. Battery Installation

The RC-1173 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the RC-1173 remote control with the battery compartment open, illustrating the correct orientation for AAA battery installation.

2. Initial Use

Once batteries are installed, the remote control is ready for use. No programming is typically required for this replacement remote. It operates using infrared (IR) technology.

OPERATING INSTRUCTIONS

To operate your Denon amplifier with the RC-1173 remote control, ensure a clear line of sight between the remote and the amplifier's remote control sensor. Obstacles can block the infrared signal.





Image: Front view of the RC-1173 remote control, displaying the layout of all function buttons.

Key Functions:

- **POWER / AMP POWER:** Turns the amplifier on or off.
- **REMOTE MODE (CD, NET, AMP):** Selects the device to be controlled by the remote. Ensure 'AMP' is selected for amplifier functions.
- **SOURCE (CD, PHONO, AUX, TUNER, RECORDER, NETWORK):** Selects the input source on your amplifier.
- **VOLUME (+/-):** Adjusts the amplifier's output volume.
- **MUTE:** Silences the audio output. Press again to restore sound.
- **NAVIGATION (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **MENU:** Accesses the amplifier's menu system.
- **INFO:** Displays information on the amplifier's display.
- **PRESET (+/-):** Navigates through radio presets (if applicable to your amplifier model).
- **NUMBER BUTTONS (0-9, +10, CLEAR):** For direct input of numbers, such as radio frequencies or track numbers.
- **TRANSPORT CONTROLS (Play, Pause, Stop, Skip, Fast Forward/Rewind):** Controls playback for connected devices like CD players.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are correctly installed and not depleted. Replace if necessary.
- Ensure there are no obstacles between the remote control and the amplifier's sensor.
- Verify that the remote control is pointed directly at the amplifier's sensor.
- Confirm that the 'REMOTE MODE' is set to 'AMP' if your amplifier requires this selection.

- **Specific functions not working:**

- Ensure the amplifier is powered on and functioning correctly.
- Some functions may be specific to certain amplifier models or connected devices. Refer to your amplifier's original manual for detailed function compatibility.

If your amplifier model is not PMA-720AE or PMA-520AE, or if you continue to experience issues after following these troubleshooting steps, please contact the seller for assistance.

SPECIFICATIONS

Model Number	RC-1173
Product Material	Plastic
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	3.1 ounces (approx.)
Compatible Amplifiers	Denon PMA-720AE, PMA-520AE

WARRANTY INFORMATION

Specific warranty details for this replacement remote control are not provided in the product information. Please refer to the seller's return policy or contact the seller directly for information regarding warranty coverage and terms.

SUPPORT

For further assistance, questions, or if your specific Denon amplifier model is not listed as compatible, please contact the ALLIMITY customer support or the seller through your purchase platform. Providing your product's model number and a detailed description of the issue will help expedite support.

