

Genius A29188

Genius Nicer Dicer Twist Universal Chopper Set Instruction Manual

Model: A29188

1. PRODUCT OVERVIEW

The Genius Nicer Dicer Twist is a versatile 9-piece manual food preparation system designed to simplify chopping, mixing, puréeing, and spinning tasks in the kitchen. It features a hand-pull lid mechanism for controlled processing and two adjustable speed settings to handle various food types.

Key Features:

- **3-Blade Knife Insert:** For efficient chopping, mixing, crushing, and puréeing of various ingredients.
- **Blender Insert:** Ideal for whipping cream, egg whites, and creating smooth desserts.
- **Centrifugal Sieve:** Perfect for drying herbs, berries, and other small ingredients.
- **Hand-Pull Lid:** Allows precise control over the consistency and fineness of processed food.
- **Two Speed Settings:**
 - **EASY Mode:** Lower speed for crushing harder foods like ice cubes, nuts, and carrots, or larger quantities.
 - **Normal Mode:** Faster speed for effortless chopping of softer foods such as onions and herbs, and for whipping or spinning.
- **1000 ml Container:** BPA-free plastic container with a non-slip silicone coating.
- **Fresh-Keeping Lid:** For convenient storage of prepared ingredients.




The Genius Nicer Dicer Twist Universal Chopper Set, showcasing its main components and a bowl of freshly chopped vegetables. This image illustrates the product's primary function for preparing various ingredients.

2. PACKAGE CONTENTS

Please ensure all the following components are present in your package:

- 1 x Hand-Pull Lid
- 1 x 3-Blade Knife Insert
- 1 x Blender Insert
- 1 x Centrifugal Sieve
- 1 x Cover for Spinning Sieve
- 1 x Fresh-Keeping Lid
- 1 x Container (1000 ml capacity)
- 1 x Recipe Booklet
- 1 x Spatula

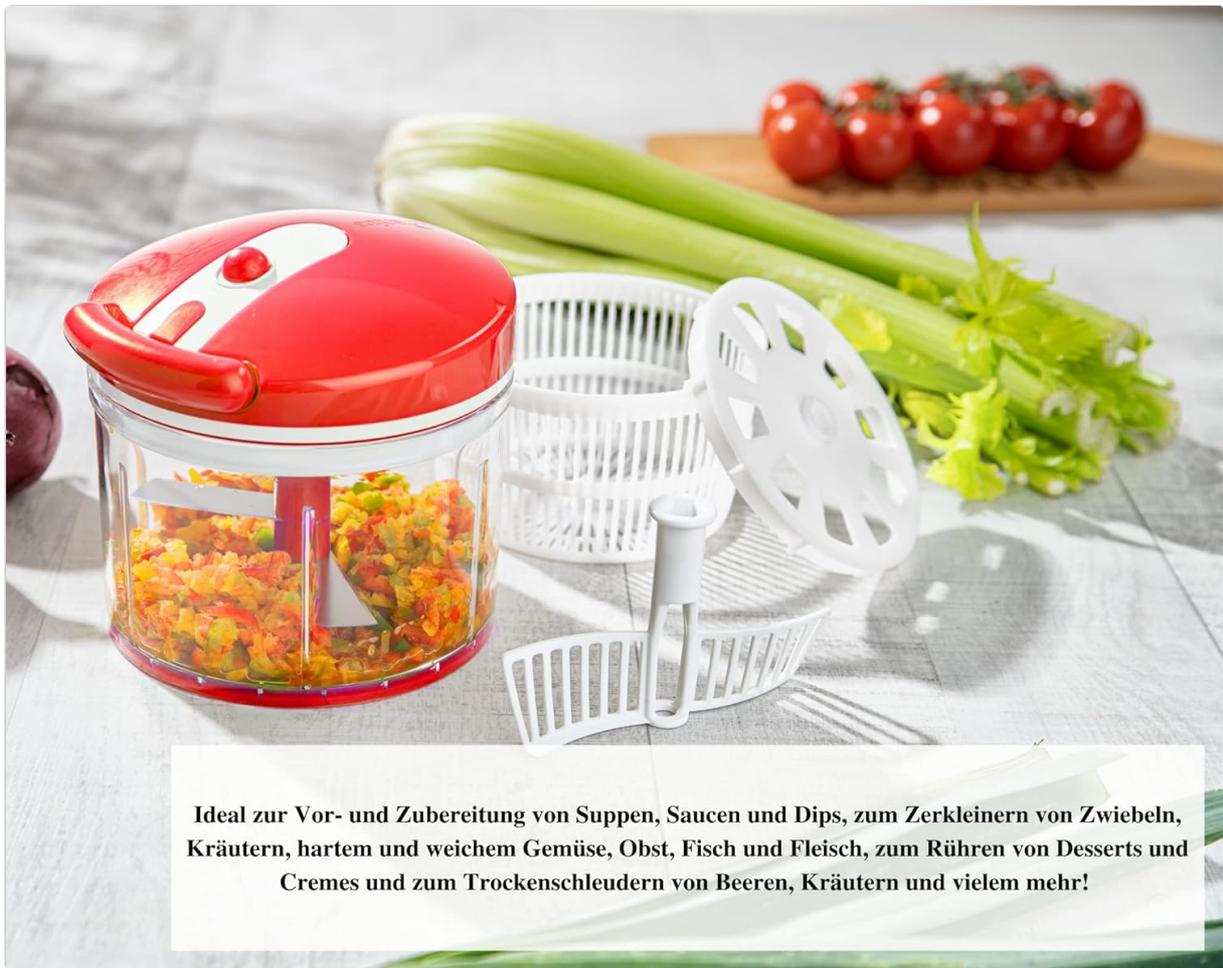

Ideal zur Vor- und Zubereitung von Suppen, Saucen und Dips, zum Zerkleinern von Zwiebeln, Kräutern, hartem und weichem Gemüse, Obst, Fisch und Fleisch, zum Rühren von Desserts und Cremes und zum Trockenschleudern von Beeren, Kräutern und vielem mehr!

An exploded view of the Genius Nicer Dicer Twist components, including the hand-pull lid, container, blade inserts, and sieve. This image helps in identifying all parts included in the set.

3. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using the Nicer Dicer Twist. Failure to follow these instructions may result in injury or damage to the product.

- **Sharp Blades:** The blade insert contains very sharp blades. Handle with extreme care to prevent cuts. Always hold the blade insert by its plastic top.
- **Keep Away from Children:** This appliance is not a toy. Keep all components, especially the blade inserts, out of reach of children.
- **Proper Assembly:** Ensure all parts are correctly assembled before use. Do not operate the device if any part is damaged or improperly fitted.
- **Stable Surface:** Always use the Nicer Dicer Twist on a stable, flat, and dry surface.
- **Do Not Overfill:** Do not exceed the maximum fill line of the container to ensure proper operation and prevent spills.
- **Hand Wash Only:** All components are designed for hand washing. Do not place in a dishwasher unless explicitly stated.
- **Avoid Hot Liquids:** Do not use with extremely hot liquids, as this may cause steam buildup or damage to the plastic components.
- **Inspect Before Use:** Before each use, inspect the blades and all components for any damage. Do not use if damaged.

4. SETUP

Before first use, wash all components thoroughly with warm soapy water and rinse well. Dry completely.

1. **Place Container:** Position the 1000 ml container on a stable, flat surface. The non-slip silicone coating on the base will help keep it secure.
2. **Insert Blade/Blender/Sieve:** Depending on your task, carefully place the desired insert (3-blade knife insert, blender insert, or centrifugal sieve) into the center of the container. Ensure it sits securely on the central pin.
3. **Add Ingredients:** Place your ingredients into the container around the chosen insert. Do not overfill. For chopping, cut larger ingredients into smaller pieces (approx. 2-3 cm) to ensure efficient processing.
4. **Attach Hand-Pull Lid:** Carefully place the hand-pull lid onto the container, aligning the tabs on the lid with the grooves on the container. Twist slightly to lock it into place. Ensure the lid is securely fastened before operating.

5. OPERATING INSTRUCTIONS

The Nicer Dicer Twist offers two speed settings for optimal results:

- **EASY Mode:** For harder ingredients (e.g., ice cubes, carrots, nuts) or larger quantities. This mode provides more power with fewer rotations.
- **Normal Mode:** For softer ingredients (e.g., onions, herbs, fruits) and for whipping or spinning. This mode provides faster rotations.

To switch between modes, rotate the red knob on the hand-pull lid. The knob will click into place for each mode.

General Operation:

1. After setup (Section 4), ensure the hand-pull lid is securely locked.
2. Hold the container firmly with one hand on a stable surface.
3. With your other hand, grasp the pull handle on the lid.
4. Pull the handle horizontally away from the lid in a swift, continuous motion. The blades/insert will rotate.
5. Allow the cord to retract fully before pulling again.
6. Repeat pulling until the desired consistency is achieved. The more pulls, the finer the result.
7. Once finished, carefully unlock and remove the hand-pull lid.
8. Carefully remove the blade/blender/sieve insert by holding its plastic top.
9. Use the included spatula to remove processed food from the container.

Specific Applications:

- **Chopping/Puréeing:** Use the 3-blade knife insert. Select Normal Mode for quick chopping of onions, herbs, garlic, or Easy Mode for harder vegetables like carrots.
- **Mixing/Whipping:** Use the blender insert. Select Normal Mode for whipping cream, egg whites, or mixing sauces and dressings.
- **Salad Spinning:** Use the centrifugal sieve with its cover. Place washed herbs or berries inside the sieve. Select Normal Mode and pull the handle to spin dry.



Highlights

- 3-Klingen-Messereinsatz in G-NOX-Qualität
- Vielseitigkeit dank Mixereinsatz und Schleudersieb
- Dank Handzugdeckel selbst über Konsistenz und Feinheitsgrad bestimmen
- Enorme Arbeitserleichterung in der Küche

Fresh berries in the centrifugal sieve, demonstrating its use for drying ingredients. This function is ideal for herbs and small fruits.



2 einstellbare Geschwindigkeitsstufen

- **EASY Modus:** Geringere Geschwindigkeit mit noch mehr Power! Perfekt zum einfachen Zerkleinern härterer Lebensmittel wie z.B. Karotten oder Eiswürfel oder größerer Mengen
- **Normaler Modus:** Schnelle Geschwindigkeit zum mühelosen Zerkleinern von Lebensmitteln wie z.B. Zwiebeln und Kräutern, zum schaumigen Aufschlagen und zum Trockenschleudern

A bowl of yogurt garnished with berries and mint, showcasing a potential dessert prepared with the Nicer Dicer Twist's mixing capabilities.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic use of your Nicer Dicer Twist.

- **Disassembly:** After each use, disassemble all removable parts: the hand-pull lid, blade/blender/sieve insert, and container.
- **Hand Washing:** All components are recommended for hand washing. Use warm water and a mild dish soap.
- **Blade Care:** Exercise extreme caution when cleaning the blade insert due to its sharpness. Use a brush to remove food residue from the blades, avoiding direct contact with your fingers.
- **Lid Cleaning:** The hand-pull lid can be wiped clean with a damp cloth. Do not immerse the hand-pull lid in water, as this may damage the pulling mechanism.
- **Rinsing and Drying:** Rinse all washed components thoroughly under running water. Allow all parts to air dry completely before reassembling or storing to prevent mold or odors.
- **Storage:** Store the Nicer Dicer Twist in a clean, dry place. You can store the blade insert safely within the container with its protective cover.

7. TROUBLESHOOTING

If you encounter issues with your Nicer Dicer Twist, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blades not rotating or rotating slowly.	Container overfilled; ingredients too large/hard; lid not properly secured; pull cord jammed.	Reduce ingredient quantity; cut ingredients into smaller pieces; ensure lid is locked; gently pull cord to free it.
Food not chopped evenly.	Ingredients not evenly distributed; too few pulls; wrong speed mode.	Ensure ingredients are spread around the blade; pull more times for finer chop; use appropriate speed mode (Normal for most chopping).
Lid difficult to attach or remove.	Lid or container grooves are dirty; misalignment.	Clean lid and container grooves; ensure proper alignment before twisting to lock/unlock.
Pull cord not retracting fully.	Cord is tangled or mechanism is dirty.	Gently pull and release the cord several times. If issue persists, contact customer support. Do not force.

8. SPECIFICATIONS

Brand	Genius
Model Name	Nicer Dicer Twist
Item Model Number	A29188
Color	Red

Material	ABS, PS, PP, Stainless Steel
Bowl Capacity	1 Liter (1000 ml)
Number of Speeds	2 (Easy Mode, Normal Mode)
Special Feature	Adjustable Speed Control
Product Care Instructions	Hand Wash
Item Weight	1.81 pounds
Package Dimensions	9.33 x 6.02 x 5.94 inches

9. WARRANTY AND SUPPORT

The Genius Nicer Dicer Twist Universal Chopper Set is designed for durability and performance. For information regarding warranty coverage and customer support, please refer to the contact details provided with your purchase or visit the official Genius website.

Spare parts availability is typically supported for a duration of 2 years from the date of purchase within the EU. For any questions, technical assistance, or to report a defect, please contact Genius customer service.