

[Manuals.plus](#) /

> [Kichler](#) /

> Kichler Mercer 16-inch Outdoor Wall Light (Model 59061OZ) Instruction Manual

Kichler 59061OZ

Kichler Mercer 16-inch Outdoor Wall Light (Model 59061OZ) Instruction Manual

Brand: Kichler | Model: 59061OZ

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Kichler Mercer 16-inch Outdoor Wall Light. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Kichler Mercer 16-inch Outdoor Wall Light features a durable Olde Bronze finish and clear seeded glass, designed to withstand outdoor elements. This fixture is suitable for various exterior applications.

SAFETY INFORMATION

- Always turn off the electrical supply at the main fuse or circuit breaker box before beginning installation or maintenance.
- Consult a qualified electrician if you are unsure about the installation process.
- Use only the specified bulb type and wattage to avoid overheating.
- Do not connect this fixture to an ungrounded electrical system.
- Keep flammable materials away from the light fixture.
- This fixture is rated for outdoor use. Ensure all connections are properly sealed to prevent water intrusion.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Mercer 16-inch Outdoor Wall Light Fixture (1)
- Clear Seeded Glass Shade (1)
- Mounting Hardware Kit (1)
- Instruction Manual (1)

SETUP AND INSTALLATION

Tools Required: Screwdriver, Wire Strippers, Pliers, Electrical Tape, Safety Glasses, Ladder.

Before You Begin: Ensure the power is OFF at the circuit breaker. Read all instructions thoroughly.

Step 1: Prepare the Mounting Surface

Ensure the electrical box is securely mounted and capable of supporting the fixture's weight. The fixture is designed for wall mounting.



Image: Kichler Mercer 16-inch Outdoor Wall Light showing its overall dimensions: 16 inches in height, 7 inches in width, and 8.5 inches in depth.

Step 2: Wiring the Fixture

Connect the fixture's wires to the corresponding house wires (black to black, white to white, ground to ground) using wire connectors. Secure connections with electrical tape.

Step 3: Mounting the Fixture

Attach the fixture to the electrical box using the provided mounting hardware. Ensure it is flush against the wall and securely fastened.



Image: A detailed view of the clear seeded glass shade and the bulb socket inside the Kichler Mercer outdoor wall light. The glass features small bubbles for a textured appearance.

Step 4: Installing the Glass Shade and Bulb

Carefully insert the clear seeded glass shade into the fixture. Install one (1) E26 Medium base bulb, up to 100 watts (not included). Do not overtighten.



Image: Top-down perspective of the Kichler Mercer outdoor wall light, highlighting the open frame and the upper section of the glass shade and bulb.



Image: Bottom-up perspective of the Kichler Mercer outdoor wall light, illustrating the open frame and the lower section of the glass shade.

Kichler Brand Overview

Your browser does not support the video tag.

Video: An overview of Kichler Lighting, showcasing various lighting products and design philosophies. This video provides context about the brand's commitment to quality and design in lighting solutions.

OPERATING INSTRUCTIONS

Once installed, restore power at the circuit breaker. The light fixture can be operated via a standard wall switch. If connected to a compatible dimmer switch, the light output can be adjusted.

MAINTENANCE

- **Cleaning:** Be certain the electric current is turned off before cleaning. Wipe clean with a damp cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Turn off power before replacing the bulb. Allow the bulb to cool completely. Replace with an E26 Medium base bulb, up to 100 watts.
- **Inspection:** Periodically inspect the fixture for any signs of wear, damage, or loose connections.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture	Check circuit breaker and wall switch. Ensure all wiring connections are secure.
Bulb not working	Bulb is loose or burned out	Tighten or replace the bulb.
Light flickers	Loose wiring connection or incompatible dimmer switch	Turn off power, check all wiring connections. If using a dimmer, ensure it is compatible with the bulb type.

SPECIFICATIONS

- **Model Number:** 59061OZ
- **Brand:** Kichler
- **Dimensions (H x W x D):** 16 inches x 7 inches x 8.5 inches
- **Material:** Climates material (fixture), Clear Seeded Glass (shade)
- **Finish:** Olde Bronze
- **Light Source:** 1 x E26 Medium Base (bulb not included)
- **Max Wattage:** 100 Watts
- **Voltage:** 120 Volts
- **Usage:** Outdoor
- **Mounting Type:** Wall Mount
- **Item Weight:** 6.3 Pounds
- **GTIN:** 783927801386

WARRANTY INFORMATION

This Kichler product is covered by a one (1) year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty inquiries, please contact Kichler customer service. Refer to the official Kichler website for current contact information.

Online Resources: www.kichler.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08G1WKNNM>

More documents and user manuals: <https://manuals.plus/>