

[Manuals.plus](#) /

› [Anne Klein](#) /

› Anne Klein Women's Bracelet Watch AK/3775SVTT Instruction Manual

Anne Klein AK/3775SVTT

Anne Klein Women's Bracelet Watch

MODEL: AK/3775SVTT

Introduction

This manual provides essential information for the proper use and care of your Anne Klein Women's Bracelet Watch, Model AK/3775SVTT. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.







Image: Anne Klein Women's Bracelet Watch, Two-Tone, featuring a rectangular face with Roman numerals and a combination of gold and silver-tone links.

Product Features

- **Case Diameter:** 24mm
- **Mineral Crystal Lens:** Provides durability and scratch resistance.
- **Dial:** Silver-tone textured dial with gold-tone hands and markers.
- **Bracelet:** Two-tone adjustable link bracelet with a jewelry clasp and extender.
- **Inner Bracelet Circumference:** 7 inches.
- **Water Resistance:** Water resistant to 30 meters (99 feet).
- **Movement:** Japanese Quartz movement for accurate timekeeping.
- **Power Source:** Battery Powered (1 D battery included).

Setup

Setting the Time

1. Gently pull the crown (small knob on the side of the watch case) outwards until it clicks.
2. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch.

Bracelet Adjustment

The watch features an adjustable link bracelet. If the bracelet is too loose, links can be removed to achieve a more comfortable fit. This process typically requires specialized tools and is best performed by a professional jeweler to avoid damage. An extra link is included for minor adjustments.

Video: A close-up demonstration of the Anne Klein watch on a wrist, showing the two-tone bracelet and how the clasp operates for easy wearing and removal.

Operating Instructions

Your Anne Klein watch is designed for reliable timekeeping. Once the time is set and the crown is pushed back in, the watch will operate continuously. The Japanese Quartz movement ensures accurate display of hours, minutes, and seconds.

Maintenance and Care

- **Cleaning:** Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dust and smudges. For

stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.

- **Avoid Chemicals:** Do not expose the watch to harsh chemicals, solvents, or detergents, as these can damage the finish and internal components.
- **Storage:** When not in use, store your watch in its original box or a soft pouch to protect it from scratches and impacts.
- **Battery Replacement:** The watch uses one D battery. When the watch stops running, it indicates the battery needs replacement. This should be done by a qualified watch technician to ensure proper sealing and function.



Image: The Anne Klein watch presented in its white box, suitable for storage and protection.

Water Resistance Guidelines

Your Anne Klein watch is water resistant to 30 meters (99 feet). This means it can withstand splashes or brief immersion in water, such as during hand washing or light rain. It is **not suitable** for swimming, bathing, showering, or any prolonged water activities.

WATER RESISTANT CHART	
 NOT WATER RESISTANT	NOT WATER RESISTANT
 ACCIDENTAL SPLASHES	WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
 SWIMMING	WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling
 SNORKELING	WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving

Image: A water resistance chart illustrating various levels of water protection for watches, indicating that 30M (100FT) is suitable for accidental splashes but not swimming or bathing.

Specifications

Feature	Detail
Product Dimensions	2.95 x 3.15 x 4.13 inches
Item Model Number	AK/3775SVTT
Item Weight	6.74 ounces (191 Grams)
Department	Womens
Batteries	1 D battery required (included)
Manufacturer	Anne Klein
Display Type	Analog
Watch Movement Type	Japanese Quartz
Strap Type	Bracelet
Clasp Type	Jewelry Clasp
Water Resistance Depth	100 Feet (30 Meters)
Band Material Type	Metal

Feature	Detail
Case Material Type	Metal
Crystal	Mineral
Case Diameter	24 Millimeters
Band Width	14 Millimeters
Case Thickness	7.5 Millimeters
Band Length	7 Inches
UPC	086702676330

Troubleshooting

- **Watch Not Running:** Ensure the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Inaccurate Time:** If the time is consistently inaccurate, the battery may be low, or the watch may require servicing by a professional.
- **Bracelet Discomfort:** If the bracelet feels too tight or too loose, consider having links added or removed by a jeweler.

Warranty and Support

Your Anne Klein watch comes with a manufacturer's warranty. For specific details regarding warranty coverage, duration, and how to make a claim, please refer to the warranty card included with your purchase or visit the official Anne Klein website. For further assistance or service inquiries, please contact Anne Klein customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question