

[Manuals.plus](#) /

› [Anne Klein](#) /

› Anne Klein Women's Bracelet Watch AK/3774BKGB Instruction Manual

Anne Klein AK/3774BKGB

Anne Klein Women's Bracelet Watch

MODEL: AK/3774BKGB

Instruction Manual

1. Product Overview

The Anne Klein Women's Bracelet Watch, model AK/3774BKGB, is a stylish timepiece designed for everyday wear. It features a durable mineral crystal lens, a glossy black dial with gold-tone hands and markers, and a gold-tone adjustable link bracelet. This watch is water resistant up to 30 meters (99 feet).

Key Features:

- Mineral crystal lens for enhanced durability.
- Glossy black dial with elegant gold-tone hands and markers.
- Gold-tone adjustable link bracelet with a jewelry clasp and extender link.
- Case Diameter: 24mm.
- Water resistant to 30 meters (99 feet), suitable for splashes or brief immersion, but not for swimming or bathing.





Front view of the Anne Klein Women's Bracelet Watch in Gold/Black.

2. Setup and Initial Use

2.1 Unboxing and Inspection

Upon receiving your Anne Klein watch, carefully remove it from its packaging. Inspect the watch for any visible damage. The watch should be securely placed on a cushion within its box.



The Anne Klein watch presented in its box.

2.2 Setting the Time

1. Locate the crown (small knob) on the right side of the watch case.
2. Gently pull the crown outwards until you feel a click. This is the time-setting position.
3. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position to engage the movement and start the watch.





Side view of the watch, highlighting the crown for time adjustment.

2.3 Adjusting the Bracelet Length

The bracelet features adjustable links and an extender link for a comfortable fit. If the watch is too loose or too tight, links may need to be added or removed. It is recommended to have this adjustment performed by a professional jeweler to prevent damage to the bracelet.

Your browser does not support the video tag.

Video demonstrating the Anne Klein Dress Watch, including views of the watch on a stand and worn on a wrist. This video provides a general overview of the watch's appearance and fit.

3. Operating Instructions

This watch operates using a Japanese Quartz movement, providing accurate timekeeping. Once the time is set as described in Section 2.2, the watch will continuously display the current time. There are no additional complex operating functions beyond setting the time.

3.1 Reading the Time

The watch features a classic analog display with Roman numerals at the XII and VI positions, and stick markers for the remaining hours. The longer hand indicates minutes, and the shorter hand indicates hours. A thin second hand sweeps around the dial.

4. Maintenance and Care

4.1 Water Resistance

The watch is water resistant to 30 meters (99 feet). This means it can withstand splashes, rain, or brief immersion in water. However, it is **not** suitable for swimming, bathing, showering, or diving. Avoid pressing the crown or operating the watch underwater.

4.2 Cleaning

To maintain the watch's appearance, wipe the case and bracelet with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

4.3 Battery Replacement

The watch is powered by a D battery (included). When the watch stops running or the second hand begins to skip, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5. Troubleshooting

5.1 Watch Not Running

- Ensure the crown is fully pushed in. If it is pulled out, the watch will not run.
- The battery may be depleted. Refer to Section 4.3 for battery replacement information.

5.2 Time is Inaccurate

- Check if the crown is fully pushed in. If it is partially pulled out, the time may not be accurate.
- Extreme temperatures or strong magnetic fields can affect quartz watch accuracy. Avoid exposing the watch to such conditions.
- If the issue persists after checking the above, the watch may require servicing by a professional.

6. Specifications

Model Number	AK/3774BKGB
Case Diameter	24 Millimeters
Case Thickness	7.5 Millimeters
Band Width	14 Millimeters
Band Length	7 Inches
Band Material Type	Metal
Case Material Type	Metal
Crystal Type	Mineral
Watch Movement Type	Japanese Quartz
Water Resistance Depth	30 Meters (99 Feet)
Power Source	Battery Powered (1 D battery included)
Clasp Type	Jewelry Clasp
Item Weight	191 Grams

7. Warranty and Support

This Anne Klein watch comes with a manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase or visit the official Anne Klein website. For product support, please contact Anne Klein customer service.

Return Policy: Products purchased from Amazon typically have a 30-day return/replacement policy. Please check your Amazon order details for the most accurate return information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question