

[Manuals.plus](#) /

› [TOSHIBA](#) /

› TOSHIBA ML2-EC10SA Air Fryer Combo Countertop Microwave Oven User Manual

TOSHIBA ML2-EC10SA

TOSHIBA ML2-EC10SA Air Fryer Combo Countertop Microwave Oven User Manual

Model: ML2-EC10SA

[Introduction](#)

[Safety](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your TOSHIBA ML2-EC10SA Air Fryer Combo Countertop Microwave Oven. This appliance combines multiple cooking functions, including microwave, air fry, convection, broil, combination cooking, low temperature cooking, defrost, and odor removal, into a single unit. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: Front view of the TOSHIBA ML2-EC10SA Air Fryer Combo Countertop Microwave Oven.

Key Features:

- **8-in-1 Multifunctionality:** Microwave, Air Fry, Bake (Convection), Broil (Grill), Combi, Low Temperature, Odor Removal, Defrost.
- **Healthy Air Fry:** Enjoy crispy results with less oil.
- **Spacious Interior:** 1.0 Cu.ft capacity with a 12.4-inch position memory turntable.
- **User-Friendly Design:** Bright LED digital display, easy-to-turn knobs, and touch control panel.
- **Convenience Functions:** One-touch popcorn, speedy cooking, multistage cooking, clock, kitchen timer, and mute function.
- **Easy Maintenance:** Stainless steel cavity for easy cleaning.

COOK LIKE A PRO



Figure 2: Overview of the 8-in-1 cooking functions.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using the appliance.
2. Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
3. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
4. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
5. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
6. Ensure proper ventilation around the appliance.
7. Always use oven-safe cookware. Metal containers are not suitable for microwave cooking but may be used for convection or broil functions.
8. Do not heat liquids or other foods in sealed containers as they are liable to explode.
9. Supervise children closely when the appliance is in use.
10. Always unplug the appliance when not in use and before cleaning.

3. SETUP AND INSTALLATION

Unpacking

- Carefully remove the oven and all materials from the carton.
- Remove any protective film from the keypad and other surfaces before first use.

- Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
- Retain packaging materials for potential future shipping or service needs.

Placement

Place the oven on a stable, level surface that can support its weight. Ensure adequate clearance for proper ventilation.



Figure 3: Product dimensions for placement planning.

RECOMMENDED MINIMUM CLEARANCE

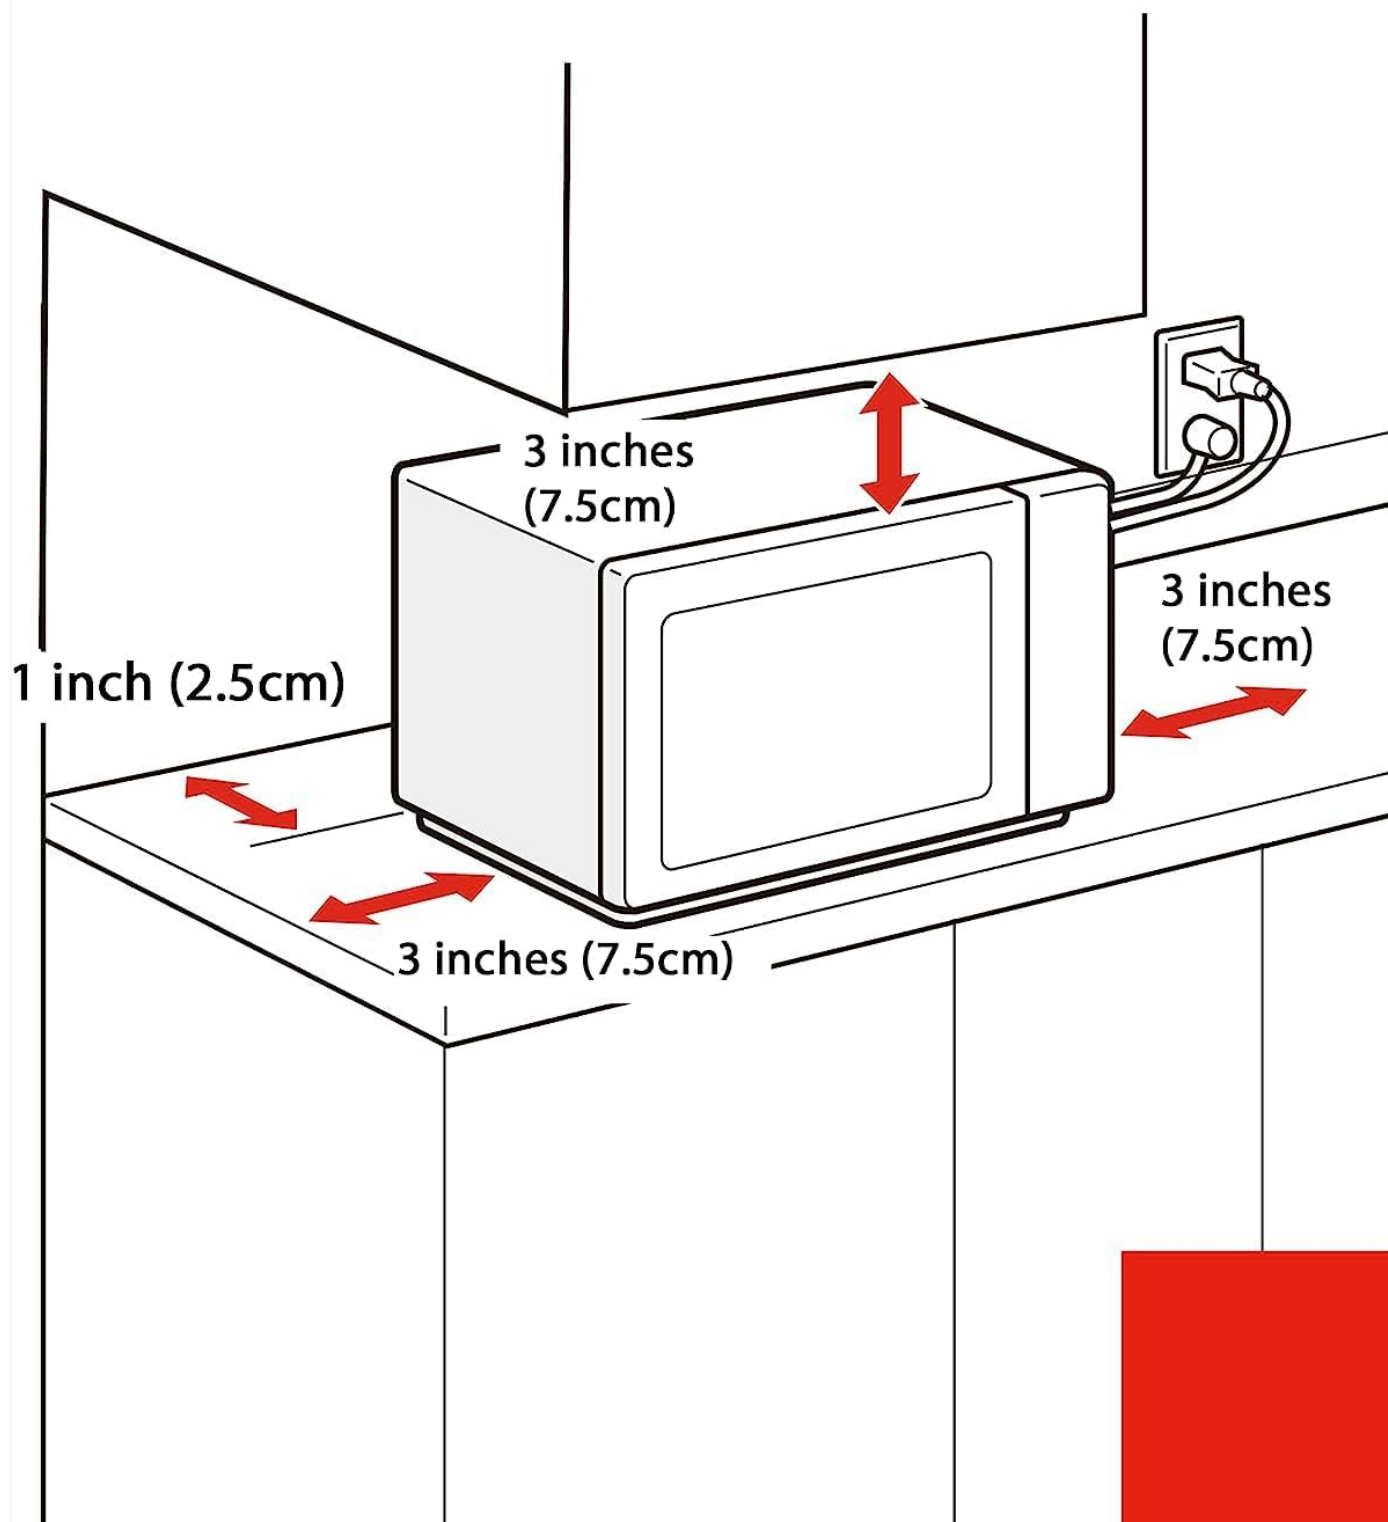


Figure 4: Recommended minimum clearance for ventilation.

- Maintain a minimum of 3 inches (7.5 cm) clearance on the top, back, and sides for proper airflow.
- Do not block any ventilation openings on the oven.
- Keep the oven away from heat sources and water.

Electrical Connection

Ensure the oven is plugged into a properly grounded 120V, 60Hz electrical outlet. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a bright LED digital display, function buttons, and an easy-to-turn knob for setting time and selecting options.

Basic Operation

- **Setting Time:** Use the knob to set the desired cooking time.
- **Power Levels:** For microwave cooking, select the desired power level (1-10) after setting time.
- **Start/Stop:** Press the 'Start' button to begin cooking. Press 'Stop/Cancel/Eco' to pause or cancel a program.
- **Quick Start:** Press the knob for a quick 30-second microwave cook time.
- **Mute Function:** Press and hold the 'Stop/Cancel/Eco' button to mute the oven's sounds.
- **Eco Mode:** Activates a low-power standby mode to save electricity.



Figure 5: Eco Mode for energy saving.

Cooking Functions

This appliance offers 8 primary cooking functions:

1. **Microwave:** Standard microwave heating with 10 power levels. Features 11 preset menus for common items.
2. **Air Fry:** Utilizes 360° hot air circulation for crispy results with less oil. Includes 10 preset menus for items like French fries, chicken nuggets, and spring rolls.

CRISPY RESULT WITH AIR FRY

The 360° hot air brings crispy and even cooking result




Tested in comparison to conventional fried



Figure 6: Air Fry function for crispy, low-fat cooking.

EASY AIR FRY PRESET MENUS


10 air fry preset menus make cooking handy and easy

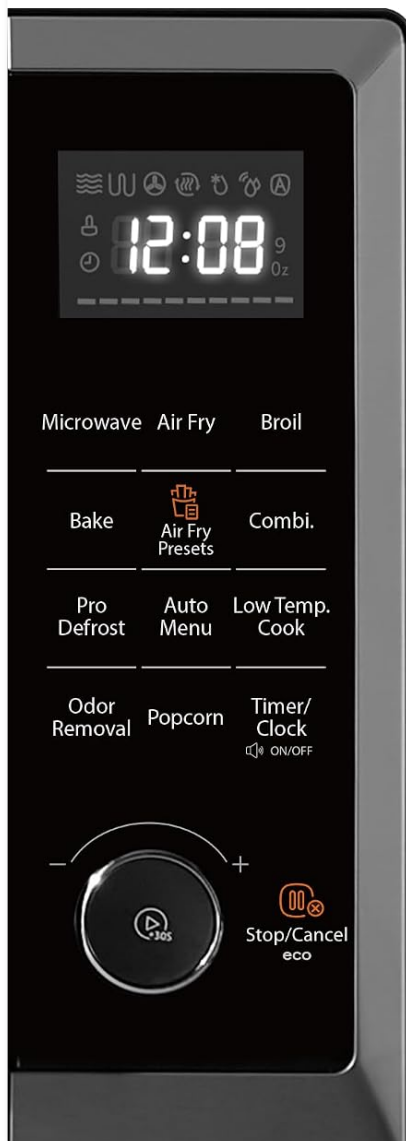

Crispy French Fries



Crispy onion rings

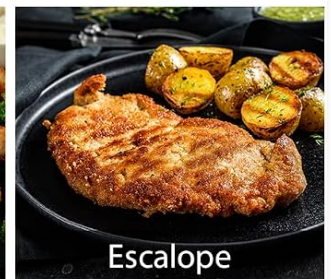

Escalope



Chicken nuggets



Chicken wings



Crispy Shrimps



Fish Sticks



Spring Rolls



Chicken legs



Mozzarella Sticks

Figure 7: Examples of Air Fry preset menus.

3. **Bake (Convection):** Uses a fan to circulate hot air for even baking.
4. **Broil (Grill):** Ideal for browning and toasting.
5. **Combi (Combination Cooking):** Combines microwave with convection or broil for faster cooking and browning.
6. **Low Temperature Cooking:** Suitable for slow cooking or keeping food warm. Includes 4 preset menus.

PRECISE NUTRIENT RETENTION

Low temperature function



Figure 8: Low Temperature function for delicate cooking.

7. **Defrost:** Features 'Pro Defrost by Time' and 7 preset menus for various food types.



Figure 9: Pro Defrost function for even thawing.

8. **Odor Removal:** Helps eliminate lingering food odors from the oven cavity.



Figure 10: Odor Removal function in action.

Preset Menus

The oven includes a variety of preset menus for different cooking functions to simplify operation. Refer to the detailed cooking chart in the full user manual for specific instructions on each preset.



ENJOY YOUR FAVORITE DISHES

25 easy and handy preset menus



Air Fry



Broil



Bake



and more...



Pro Defrost



Low Temp Cook



Popcorn



Figure 11: Examples of various preset menus.

Internal Lighting

The oven is equipped with a bright LED cavity light for clear visibility of your food during cooking.



Figure 12: Bright LED cavity light for visibility.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

Cleaning the Oven Interior

The stainless steel cavity is designed for easy cleaning.

- Always unplug the oven before cleaning.
- Wipe the interior with a dry or damp soft cloth after each use to prevent food buildup.

- For stubborn stains, use a mild detergent and a soft cloth, then wipe with a clean, damp cloth.
- Clean the waveguide cover, turntable, and grill rack regularly. The turntable and grill rack are removable for easier cleaning.
- Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the surfaces.

EASY TO CLEAN AND MAINTAIN

Dry or damp soft cloth to clean the waveguide cover, turntable and inner cavity.



Figure 13: Steps for easy cleaning and maintenance.

Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel gently with a soft, damp cloth. Avoid excessive moisture.

6. TROUBLESHOOTING

If you encounter issues with your oven, consult the following table for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating evenly	Improper stirring/turning; Food not suitable for microwave; Incorrect power level/time.	Stir or turn food halfway through cooking; Use microwave-safe dishes; Adjust power level and cooking time.
Excessive steam inside oven	High moisture content in food.	This is normal for foods with high moisture. Wipe the interior after use.

Problem	Possible Cause	Solution
Turntable not rotating	Turntable not properly placed; Obstruction under turntable.	Ensure turntable and ring are correctly positioned; Remove any obstructions.
Odor persists after cooking	Strong food odors.	Use the 'Odor Removal' function. Clean the oven interior thoroughly.

7. SPECIFICATIONS

Feature	Specification
Model Number	ML2-EC10SA
Capacity	1.0 Cubic Feet
Microwave Power	1000 Watts
Voltage	120 Volts
Product Dimensions (WxDxH)	20.57 x 17.95 x 11.82 inches
Internal Dimensions (WxDxH)	13.98 x 13.23 x 9.49 inches
Item Weight	40.8 Pounds
Turntable Diameter	12.4 inches
Color	Black Stainless Steel
Special Features	Air Fry, Convection, Broil, Low Temperature Cooking, Odor Removal, Mute Function, Position Memory Turntable, Eco Mode
Included Components	Manual, Turntable, Grill Rack, Grill Tray

8. WARRANTY AND CUSTOMER SUPPORT

Warranty Information

TOSHIBA products are manufactured with quality and care. For detailed warranty information, please refer to the warranty card included with your product or visit the official TOSHIBA website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

Should you require assistance with your TOSHIBA ML2-EC10SA oven, including troubleshooting, parts, or service, please contact TOSHIBA customer support. Contact details can typically be found on the official TOSHIBA website or in the documentation provided with your appliance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question