

HC1094

Generic HC1094 Home Barber Haircut Kit 14pc Instruction Manual

Model: HC1094

IMPORTANT SAFETY INFORMATION

WARNING: Keep blades away from children. Do not ingest or inhale small parts. Dispose of used blades safely. Keep cord away from heat sources and water.

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is for personal grooming and not for medical use.

PRODUCT OVERVIEW

The Generic HC1094 Home Barber Haircut Kit is designed for convenient at-home hair grooming. This 14-piece kit provides the essential tools for various haircut styles and lengths.

Included Components:

- Clipper
- 1" (25mm) Guide Comb
- 5/8" (16mm) Guide Comb
- 1/2" (12mm) Guide Comb
- 3/8" (9mm) Guide Comb
- 1/4" (6mm) Guide Comb
- 1/8" (3mm) Guide Comb
- Left Taper Guide Comb
- Right Taper Guide Comb
- Barber Comb
- Cleaning Brush
- Oil Bottle
- Blade Cap
- Storage Case



Image: The HC1094 Haircut Kit components, including the clipper, guide combs, and accessories.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the storage case. Inspect the clipper and accessories for any damage.
2. **Initial Blade Check:** Ensure the clipper blades are clean and properly aligned. If necessary, apply a small amount of the included oil to the blades before first use.
3. **Attach Guide Comb:** Select the desired guide comb for your haircut length. Align the comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely attached.
4. **Power Connection:** Plug the clipper's power cord into a standard electrical outlet.

Your browser does not support the video tag.

Video: Demonstrates the components of the Remington Home Barber Haircut Kit, including the clipper and various guide combs, and how to connect the power cord.

OPERATING INSTRUCTIONS

General Haircutting Tips:

- For best results, start with clean, dry hair.
- Always cut against the direction of hair growth.
- Use smooth, overlapping strokes for an even cut.
- Start with a longer guide comb than desired and gradually switch to shorter combs if needed.

Using Guide Combs:

The kit includes various guide combs (1", 5/8", 1/2", 3/8", 1/4", 1/8") to achieve different hair lengths. Select the appropriate comb and attach it securely to the clipper blade.

Taper Lever Adjustment:

The taper lever allows for fine-tuning the cutting length without changing guide combs. Move the lever up for a closer cut and down for a longer cut. This is ideal for blending and fading.

Left and Right Taper Combs:

Use the left and right taper guide combs for precise blending around the ears and neckline, creating a smooth transition from longer to shorter hair.

MAINTENANCE

Cleaning the Blades:

1. **Disconnect Power:** Always unplug the clipper before cleaning.
2. **Remove Hair:** Use the included cleaning brush to remove loose hair from the blades and the clipper body.
3. **Wipe Down:** Wipe the clipper body with a clean, damp cloth. Do not immerse the clipper in water.

Oiling the Blades:

- After each use, or at least once a month, apply 1-2 drops of the included blade oil across the top of the blades.
- Turn the clipper on for a few seconds to allow the oil to distribute evenly.
- Wipe off any excess oil with a soft cloth. Regular oiling ensures smooth operation and extends blade life.

Storage:

After cleaning and oiling, place the blade cap over the blades. Store the clipper and all accessories in the provided storage case in a cool, dry place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in correctly; power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Clipper pulls hair or cuts unevenly.	Blades are dull, dirty, or not oiled; guide comb not attached properly.	Clean and oil the blades. Ensure the guide comb is securely attached. If blades are dull, consider professional sharpening or replacement.
Clipper becomes hot during use.	Extended continuous use; blades need lubrication.	Allow the clipper to cool down. Apply blade oil to reduce friction. Avoid prolonged continuous operation.

SPECIFICATIONS

- **Model:** HC1094
- **Brand:** Generic (Manufacturer: REMINGTON)
- **Power Source:** Corded Electric
- **Blade Material:** Stainless Steel
- **Item Weight:** 1.6 Pounds
- **Package Dimensions:** 16 x 12 x 12 inches
- **Included Components:** Clipper, 7 Guide Combs, 2 Taper Combs, Barber Comb, Cleaning Brush, Oil Bottle, Blade Cap, Storage Case.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the manufacturer's official website. Keep your proof of purchase for any warranty claims.