



Manuals.plus /

› Jool Baby Products /

› Jool Baby Nova Electric Motorized Infant Swing User Manual

## Jool Baby Products GR-NOVA-1A-GY

# Jool Baby Nova Electric Motorized Infant Swing User Manual

Model: GR-NOVA-1A-GY

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before assembling and using the Jool Baby Nova Swing. Failure to follow these instructions could result in serious injury or death.

- **WARNING:** Never leave child unattended.
- **WARNING:** This product is intended for infants from birth up to 20 pounds (9 kg) or until the child can sit up unassisted, push up on hands and knees, or climb out, whichever comes first.
- **WARNING:** Always use the restraint system. Ensure it is properly adjusted and securely fastened.
- **WARNING:** Do not use this product if it is damaged or broken.
- **WARNING:** Do not move or lift the product with the child in it.
- **WARNING:** Keep the product away from open flames, heaters, and other strong heat sources.
- **WARNING:** Always place the product on a flat, level surface.
- **WARNING:** Do not use accessories or replacement parts other than those approved by the manufacturer.

Retain these instructions for future reference.

## 2. PRODUCT OVERVIEW

---

The Jool Baby Nova Swing is an electric motorized infant swing designed to provide a soothing environment for newborns. It features multiple swaying motions, integrated music options, and a comfortable design.



Image 2.1: The Jool Baby Nova Swing, showcasing its main components including the base, seat, canopy, and toy bar. An additional view shows the swing with its protective netting.

### Key Features:

- **5 Levels of Side-to-Side Swaying Motion:** Adjustable intensity for soothing comfort.
- **Bluetooth Speaker & USB Port:** Play custom music or sounds.
- **10 Preset Melodies:** Built-in calming tunes.
- **Easy Assembly:** Tool-free setup.
- **Lightweight & Portable:** Weighs 7.25 lbs with a compact frame.
- **Removable Canopy & Netting:** Provides shade and protection from insects.
- **5-Point Safety Harness:** Secure restraint system.
- **Head Support:** For infant comfort and safety.
- **Auto-Off Timer:** For convenience and energy saving.
- **Remote Control:** For convenient operation.

### 3. PARTS LIST

---

Before assembly, ensure all parts are present and undamaged:

- Swing Base
- Seat Unit with 5-point harness and head support
- Canopy
- Netting
- Toy Bar with Plush Toys
- AC Adapter
- Remote Control
- Instruction Manual (this document)

## 4. SETUP AND ASSEMBLY

---

The Jool Baby Nova Swing is designed for quick and easy assembly without the need for tools.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list.
2. **Attach Seat to Base:** Align the seat unit with the base. Push firmly until you hear a click, indicating it is securely locked.
3. **Install Canopy:** Slide the canopy frame into the designated slots on the seat unit until it clicks into place.
4. **Attach Toy Bar:** Insert the toy bar into the slots on the canopy or seat frame. Ensure it is stable.
5. **Connect Power:** Plug the AC adapter into the swing's power port and then into a standard electrical outlet.

# NOVA BABY SWING



Head support

Folds for easy storage

5-Point safety harness

Lightweight, portable

Skid-resistant base

Auto-off timer

Ideal For Babies

0-6 MONTHS | UP TO 20 POUNDS

Image 4.1: An infant resting comfortably in the Jool Baby Nova Swing, highlighting features such as head support, 5-point safety harness, and its lightweight, portable design. The image also indicates the auto-off timer and skid-resistant base.

**Note:** The netting can be attached over the canopy for added protection against insects or pets, as shown in Image 2.1.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off

- Press the power button on the control panel or remote control to turn the swing on or off.

### 5.2 Adjusting Swaying Motion

The Nova swing offers 5 levels of side-to-side swaying motion. Use the motion control buttons on the control panel or remote to increase or decrease the intensity.

# 5 RANGES OF GENTLE SWAYING MOTION



Image 5.1: The Jool Baby Nova Swing illustrating its five distinct ranges of gentle swaying motion, from 18° to 31°. The AC adapter is also shown as included.

## 5.3 Music and Sound Features

The swing includes a Bluetooth speaker, a USB port, and 10 preset melodies.

- **Preset Melodies:** Press the music button on the control panel or remote to cycle through the 10 built-in melodies.
- **Bluetooth Connectivity:**
  - a. Activate Bluetooth on your mobile device.
  - b. Select "Jool Baby Nova" from the list of available devices.
  - c. Once connected, you can stream audio from your device to the swing's speaker.
- **USB Playback:** Insert a USB drive containing audio files into the USB port on the control panel. The swing will automatically play compatible audio files.
- **Volume Control:** Adjust the volume using the dedicated buttons on the control panel or remote.



## YOUR BABY'S HAPPY PLACE



### Bluetooth Speaker

Play music from your device or one of the 10 preloaded melodies



### Colorful Plush toys

Delightful stuffed toys for hours of fun

Remote control



Image 5.2: An infant enjoying the Jool Baby Nova Swing, highlighting the Bluetooth speaker for custom music, 10 preloaded melodies, and colorful plush toys. A hand is shown operating the remote control.

## 5.4 Using the Remote Control

The included remote control allows for convenient adjustment of swing settings from a distance. Functions include power on/off, sway speed adjustment, music selection, and volume control.

## 5.5 Auto-Off Timer

The swing features an auto-off timer. Refer to the control panel display for timer settings and adjustment options. This feature helps conserve energy and can be set to automatically stop the swing after a predetermined period.

## 6. MAINTENANCE AND CARE

### 6.1 Cleaning the Seat Cover

The seat cover is machine washable for easy cleaning.

1. **Remove Seat Cover:** Carefully detach the seat cover from the swing frame.

- 2. Washing Instructions:** Machine wash cold on a gentle cycle with mild detergent. Do not bleach. Tumble dry low or air dry.
- 3. Reattach Cover:** Ensure the cover is completely dry before reattaching it to the swing frame.

Joolbaby®



**MACHINE  
WASHABLE**  
**SEAT COVER**

Gift friendly packaging

Image 6.1: A woman demonstrating the machine washable feature of the Jool Baby Nova Swing's seat cover by placing it into a washing machine.

## 6.2 Cleaning the Frame and Plastic Parts

Wipe the swing frame, control panel, and other plastic parts with a damp cloth and mild soap. Rinse thoroughly and dry completely. Do not immerse the base unit in water.

## 6.3 Storage

When not in use, store the swing in a clean, dry place away from direct sunlight and extreme temperatures. The swing can be folded for easier storage.

## 7. TROUBLESHOOTING

If you encounter issues with your Jool Baby Nova Swing, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Swing does not turn on.	Not plugged in; power outlet issue; damaged adapter.	Ensure AC adapter is securely plugged into the swing and a working electrical outlet. Try a different outlet. Inspect adapter for damage.
Swing motion is weak or inconsistent.	Weight limit exceeded; obstruction; low power.	Verify child's weight is within the 20 lbs limit. Check for any obstructions around the swing mechanism. Ensure power connection is stable.
No sound from speaker.	Volume too low; Bluetooth not connected; USB issue.	Increase volume. Re-pair Bluetooth device. Ensure USB drive is properly inserted and contains compatible audio files.
Remote control not working.	Dead batteries; obstruction; out of range.	Replace remote control batteries. Ensure no obstructions between remote and swing. Operate within recommended range.

If the problem persists after trying these solutions, please contact Jool Baby customer support.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	GR-NOVA-1A-GY
Product Dimensions	25"D x 23"W x 20"H (63.5 cm D x 58.4 cm W x 50.8 cm H)
Item Weight	7 pounds (3.17 kg)
Maximum Weight Recommendation	20 Pounds (9 kg)
Target Gender	Unisex
Material Type	Plastic, Metal
Power Source	Corded Electric (AC Adapter included)
Batteries Required	No (for swing operation), Yes (for remote control)
Portability	Yes
Color	Gray

## 9. WARRANTY AND SUPPORT

---

Jool Baby Products stands behind the quality of its products. For warranty information, product registration, or customer support, please visit our official website or contact our customer service team.

**Website:** Jool Baby Products Store

Please have your model number (GR-NOVA-1A-GY) and purchase date ready when contacting support.

