

## Chefman Air Fryer Toaster Oven XL 20L

# Chefman Toast-Air Convection Oven + Air Fryer Instruction Manual

Model: Air Fryer Toaster Oven XL 20L

### IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before operating your Chefman Toast-Air Convection Oven + Air Fryer. Failure to follow these instructions may result in property damage, injury, or death. Keep this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface.
- Ensure adequate ventilation around the appliance during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Keep children and pets away from the appliance during operation.
- The exterior surfaces may become hot during use. Use oven mitts when handling hot parts.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating.

### PRODUCT OVERVIEW AND FEATURES

The Chefman Toast-Air Convection Oven + Air Fryer is a versatile 7-in-1 countertop appliance designed to simplify your cooking experience. It combines multiple cooking functions in one compact unit.



Figure 1: Front view of the Chefman Toast-Air Convection Oven + Air Fryer with cooked chicken and vegetables.

### Key Features:

- **7-in-1 Functionality:** Air fry, bake, broil, convection bake, convection broil, toast, and warm.
- **Spacious Capacity:** 20-quart interior fits up to 4 slices of toast, a 10-inch pizza, or a 5.5lb chicken.
- **Adjustable Temperature:** Temperature range from 200-450°F for diverse cooking needs.
- **Healthier Cooking:** Air frying uses significantly less oil for healthier meals.
- **Integrated Timer:** 60-minute countdown timer with automatic shut-off for safety.
- **Cool-Touch Handle:** Designed for safe operation.
- **Interior Light:** For easy viewing of food during cooking.
- **Easy to Clean:** Dishwasher-safe accessories and removable crumb tray.

# CHEFMAN Toast-Air™

## 20-Quart Air Fryer + Oven

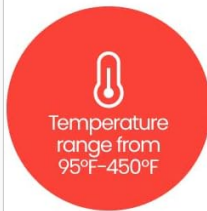 


Figure 2: Overview of the Chefman Toast-Air's 7 cooking functions and key features.



# 7-in-1 Functionality

Versatile cooking functions for air frying, baking, broiling, and toasting

## AIR FRY



## TOAST



## BAKE



## BROIL



Figure 3: Visual examples of dishes prepared using the Air Fry, Toast, Bake, and Broil functions.

## SETUP

### Unpacking and Initial Preparation:

1. Carefully remove the appliance and all packaging materials from the box.
2. Remove any protective film or stickers from the unit and accessories.
3. Wash the baking rack, air fry basket, broil pan, and removable crumb tray in warm, soapy water. Rinse thoroughly and dry completely.
4. Wipe the exterior of the oven with a damp cloth.

### Placement:

- Place the oven on a flat, stable, heat-resistant surface, such as a kitchen countertop.
- Ensure there is at least 4-6 inches of space on all sides of the oven for proper air circulation. Do not place directly under cabinets.

- Plug the power cord into a grounded electrical outlet.

## Countertop Cooking Made Easy



Figure 4: The compact design of the Chefman Toast-Air makes it suitable for various countertop spaces.

### OPERATING INSTRUCTIONS

#### Control Panel Overview:

The Chefman Toast-Air features intuitive dial controls for easy operation:

- **Timer Dial:** Sets cooking time (up to 60 minutes) or continuous operation.
- **Temperature Dial:** Adjusts cooking temperature from 200°F to 450°F.
- **Function Dial:** Selects desired cooking mode (Air Fry, Bake, Broil, Toast, Warm, Convection Bake, Convection Broil).
- **Toast Timer/Shade Dial:** Specifically for toast function, controls toast shade (light, medium, dark).
- **Power Button:** Turns the unit on/off.
- **Light Button:** Activates the interior oven light.



## General Operation:

1. Place food on the appropriate accessory (baking rack, air fry basket, or broil pan).
2. Insert the accessory into the desired rack position inside the oven.
3. Turn the Function Dial to select your cooking method.
4. Turn the Temperature Dial to set the desired temperature.
5. Turn the Timer Dial to set the cooking time. The oven will begin heating.
6. For Toast function, set the Function Dial to "Toast" and the Temperature Dial to "450°F Toast/Broil". Then use the Toast Timer/Shade Dial to select desired shade.
7. The oven will automatically shut off when the timer expires.

## Dinner Well Done

Integrated timer and auto-shutoff help prevent overcooking



*Figure 5: The oven's spacious interior allows for cooking larger items like a whole chicken.*

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your appliance.

 
- Always unplug the oven and allow it to cool completely before cleaning.
- **Removable Parts:** The baking rack, air fry basket, broil pan, and removable crumb tray are dishwasher-safe for easy cleaning.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Exterior:** Clean the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
- **Crumb Tray:** Pull out the crumb tray from the bottom of the oven and empty it after each use to prevent grease buildup.

## Dishwasher-Safe Accessories

Keep cooking and cleanup simple  
with 4 dishwasher-safe accessories



Drip Tray

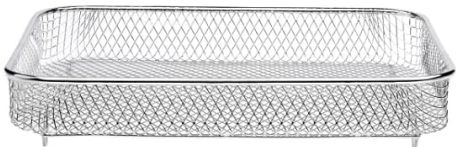

Broil Pan



Air Fry Basket



Baking Rack

Figure 6: All included accessories are designed for easy cleaning, including being dishwasher-safe.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure unit is properly plugged in. Check power outlet. Set the timer dial.

Problem	Possible Cause	Solution
Toast function not working.	Temperature dial not set correctly for toast.	Ensure the Temperature Dial is turned fully clockwise to "450°F Toast/Broil" when using the Toast function.
Food not cooking evenly.	Overcrowding; incorrect rack position.	Avoid overcrowding the basket/tray. Use recommended rack positions for different foods. Flip or shake food halfway through cooking.
Smoke coming from oven.	Food residue; excessive grease.	Clean the interior and crumb tray thoroughly. Ensure crumb tray is empty. Reduce amount of oil/grease in food.

## SPECIFICATIONS

- **Brand:** Chefman
- **Model Name:** Air Fryer Toaster Oven XL 20L
- **Product Dimensions:** 15.5"D x 16.75"W x 14"H
- **Color:** Stainless Steel
- **Capacity:** 20 Quarts (20 Liters)
- **Material:** Stainless Steel
- **Wattage:** 1800 Watts
- **Voltage:** 120 Volts
- **Item Weight:** 15.2 Pounds
- **Max Temperature Setting:** 450 Degrees Fahrenheit
- **Nonstick Coating:** Yes
- **Dishwasher Safe Parts:** Yes
- **UL Certified:** Yes
- **UPC:** 816458024327
- **Country of Origin:** China




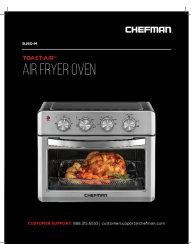 
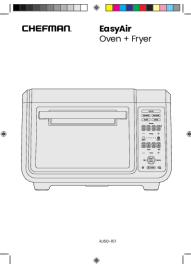 

## WARRANTY AND SUPPORT

The Chefman Toast-Air Convection Oven + Air Fryer comes with a 1-year assurance provided by Chefman. For detailed warranty information, product registration, or customer support, please refer to the official Chefman website or the User Guide (PDF) provided with your purchase.

You can also find the User Guide (PDF) online: [User Guide \(PDF\)](#)



## Related Documents - Air Fryer Toaster Oven XL 20L

	<p><a href="#">Chefman Toast-Air Touch Air Fryer Oven User Guide</a></p> <p>Comprehensive user guide for the Chefman Toast-Air Touch Air Fryer Oven (Model RJ50-SS-T), covering safety instructions, features, operating instructions for various cooking functions, cooking tips, cleaning and maintenance, and warranty information.</p>
	<p><a href="#">Chefman Toast-Air Touch Air Fryer Oven RJ50-SS-T User Manual &amp; Guide</a></p> <p>Comprehensive user guide for the Chefman Toast-Air Touch Air Fryer Oven (Model RJ50-SS-T), covering setup, operation of all 9 cooking functions, cleaning, maintenance, safety instructions, and warranty information.</p>
	<p><a href="#">Chefman Toast-Air Air Fryer + Oven User Guide and Recipes</a></p> <p>Comprehensive guide to the Chefman Toast-Air Air Fryer + Oven (Model RJ50-SS-M20), including operating instructions, features, cleaning, maintenance, troubleshooting, and a collection of recipes.</p>
	<p><a href="#">Chefman Toast-Air Air Fryer Oven RJ50-M User Manual and Guide</a></p> <p>Comprehensive user guide for the Chefman Toast-Air Air Fryer Oven (Model RJ50-M), covering features, operating instructions, safety precautions, cleaning, troubleshooting, and warranty information.</p>
	<p><a href="#">Chefman EasyAir Oven + Fryer RJ50-15T User Manual and Guide</a></p> <p>Comprehensive user manual for the Chefman EasyAir Oven + Fryer (Model RJ50-15T). This guide provides detailed instructions on setup, operation, safety precautions, cooking functions, tips, cleaning, troubleshooting, and warranty information for the appliance.</p>
	<p><a href="#">Chefman Toast-Air Touch Air Fryer+ Oven User Guide</a></p> <p>Comprehensive user guide for the Chefman Toast-Air Touch Air Fryer+ Oven (Model RJ50-SST2), covering safety instructions, features, operating procedures, cooking tips, troubleshooting, cleaning, and warranty information.</p>