

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NutriBullet](#) /

› [NutriBullet Juicer Pro NBJ50200 User Manual](#)

NutriBullet NBJ50200

NutriBullet Juicer Pro User Manual

Model: NBJ50200

INTRODUCTION

Welcome to the NutriBullet Juicer Pro experience. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new centrifugal juicer. Please read all instructions carefully before first use and retain this manual for future reference.

The NutriBullet Juicer Pro is designed for ultimate efficiency, engineered to produce smooth, flavorful, and delicious juice from fruits and vegetables. Its high-torque 1000W motor and turbo speed setting allow it to process a wide variety of ingredients with ease.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of serious injury, read all instructions carefully before operating your NutriBullet Juicer Pro.

- Always ensure the juicer is properly assembled and the safety locking arm is securely in place before operating.
- Do not place hands or other objects into the feed chute while the appliance is operating. Always use the food pusher provided.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Keep children away from the appliance during operation.
- The sieve contains sharp blades. Handle with extreme care.

WHAT'S INCLUDED

Your NutriBullet Juicer Pro package includes the following components:

- (1) 1000W Motor Base
- (1) 2L Pulp Basin with 3-inch wide feed chute

- (1) Stainless Steel Sieve
- (1) 27oz Juice Pitcher
- (1) Sealing pitcher lid with froth separator
- (1) Dual-size Food Pusher
- (2) Glass To-Go Bottles
- (1) 2 oz Freezer Tray
- (1) 4 oz Freezer Tray
- (1) Cleaning Brush
- User and Recipe Guides (this document serves as the user guide)

What's included:



800W Motor
Base



27oz Juice
Pitcher



1.5L Pulp Basin
with 3"-wide
Feed Chute



Sealing Pitcher
Lid with Froth
Separator



Stainless Steel
Sieve



Food Pusher

nutribullet

Image: All included components of the NutriBullet Juicer Pro, including the motor base, pulp basin, sieve, juice pitcher, food pusher, to-go bottles, and freezer trays.

SETUP AND ASSEMBLY

- Unpack:** Carefully remove all components from the packaging.
- Clean:** Wash all parts that will come into contact with food (pulp basin, sieve, juice pitcher, lid, food pusher, to-go bottles, freezer trays) in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
- Assemble Pulp Basin:** Place the 2L Pulp Basin onto the Motor Base, ensuring it is seated correctly.
- Insert Sieve:** Carefully place the Stainless Steel Sieve into the Pulp Basin, pressing down until it clicks into place. Ensure it is securely fitted.
- Attach Lid:** Place the Juicer Lid onto the Pulp Basin, aligning the spout with the juice outlet.
- Secure Locking Arm:** Raise the safety locking arm and secure it into the grooves on the lid. The juicer will not operate unless the locking arm is properly engaged.
- Position Juice Pitcher:** Place the 27oz Juice Pitcher under the juice spout.
- Insert Food Pusher:** Insert the Dual-size Food Pusher into the feed chute.



Image: The fully assembled NutriBullet Juicer Pro, ready for operation, with the juice pitcher in place.

OPERATING INSTRUCTIONS

Preparing Ingredients

- Wash all fruits and vegetables thoroughly.
- For most fruits and vegetables, peeling is not necessary. However, remove large seeds (e.g., peaches, mangoes) and hard pits.
- The 3-inch wide feed chute can accommodate whole fruits and vegetables up to 3 inches in diameter. For larger items, cut them into smaller pieces that fit comfortably into the chute.
- The dual-size food pusher allows you to choose between wide and narrow feed chutes for different ingredient sizes.

Fits whole fruits and vegetables.*

Dual-sized feed chute adjusts for narrow and wide ingredients.



***Fits certain whole fruits and vegetables that are less than 3" in diameter.**



Image: A hand demonstrating the use of the dual-size food pusher with an apple and celery, highlighting the wide and narrow feed chute options.

Juicing Process

1. Ensure the juicer is properly assembled and plugged into a standard electrical outlet.
2. Place the prepared ingredients into the feed chute.
3. Select your desired speed:
 - **LOW:** Ideal for softer fruits and vegetables (e.g., berries, tomatoes).
 - **HIGH:** Suitable for harder fruits and vegetables (e.g., apples, carrots, beets).
 - **TURBO:** Provides maximum power for the toughest ingredients.
4. Press the corresponding speed button (LOW, HIGH, or TURBO) to start the juicer.
5. Gently and slowly push the ingredients down the feed chute using the food pusher. Do not apply excessive force, as this can reduce juice yield or damage the motor.
6. The fresh juice will flow into the 27oz Juice Pitcher, while the pulp will collect in the 2L Pulp Basin.

7. When finished, press the power button to turn off the juicer and unplug it from the outlet.

Convenient accessories.

**Freezer Trays,
Storage Pitcher, &
To-Go Glass Bottles.**



nutribullet.



Image: Close-up of the NutriBullet Juicer Pro control panel, showing the LOW, HIGH, and TURBO speed buttons for precise control during juicing.

Juice Storage

The 27 oz. sealing juice pitcher allows you to store fresh juice for up to 48 hours. Use the included glass to-go bottles and freezer trays for convenient storage and portioning.

Easy to clean.

**No-drip Spout &
dishwasher-safe
Pulp Basin.**



nutribullet



Image: The NutriBullet Juicer Pro with its convenient accessories, including freezer trays, the storage pitcher, and two to-go glass bottles, all filled with juice.

CARE AND MAINTENANCE

Disassembly

1. Ensure the juicer is turned off and unplugged.
2. Release the safety locking arm.
3. Remove the food pusher.
4. Lift off the juicer lid.
5. Carefully remove the Stainless Steel Sieve. Handle with care due to sharp blades.
6. Lift off the 2L Pulp Basin from the Motor Base.

Cleaning

Prompt cleaning after each use is recommended to prevent pulp from drying and sticking, which can make cleaning more

difficult.

- **Dishwasher Safe Parts:** The sieve, pulp basin, juice pitcher, to-go bottles, and freezer trays are all dishwasher-safe (top rack recommended).
- **Hand Washing:** For hand washing, use warm, soapy water and the included cleaning brush to remove pulp from the sieve and other components. Rinse thoroughly.
- **Motor Base:** Wipe the Motor Base with a damp cloth. Never immerse the Motor Base in water or any other liquid.
- **No-Drip Spout:** The no-drip spout is designed for easy cleaning. Ensure no pulp or residue remains inside.

Simple,
powerful
1000W
juicer.

nutribullet



Image: The NutriBullet Juicer Pro's no-drip spout and pulp basin, highlighting their design for easy cleaning and maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in. Safety locking arm not engaged. Overheating protection activated.	Ensure the power cord is securely plugged into a working outlet. Check that the safety locking arm is fully secured in the lid grooves. Unplug the unit and allow it to cool down for at least 15-20 minutes before attempting to use again.
Low juice yield or wet pulp.	Ingredients pushed too quickly. Sieve is clogged. Incorrect speed setting for ingredients.	Push ingredients slowly and gently. Disassemble and clean the sieve thoroughly. Ensure you are using the appropriate speed (HIGH/TURBO for harder produce).
Excessive vibration or noise.	Sieve not properly seated. Too much produce in the feed chute.	Disassemble and re-seat the sieve, ensuring it clicks into place. Feed ingredients gradually, do not overfill the chute.

If you experience issues not listed here, or if the problem persists, please contact NutriBullet Customer Service.

PRODUCT SPECIFICATIONS

Feature	Specification
Model Name	NutriBullet Juicer Pro Centrifugal Juicer
Model Number	NBJ50200
Brand	NutriBullet
Power	1000 Watts
Voltage	120 Volts (North American and Canadian Electrical Standards)
Capacity (Pulp Basin)	2 Liters
Capacity (Juice Pitcher)	27 Ounces / 1.5 Liters
Speeds	3 (Low, High, Turbo)
Feed Chute Size	3 inches (wide) with dual-size food pusher
Blade Material	Stainless Steel
Product Dimensions	12.13"D x 12.83"W x 17.4"H
Item Weight	7.5 pounds
Color	Silver
Dishwasher Safe Parts	Sieve, Pulp Basin, Juice Pitcher, To-Go Bottles, Freezer Trays

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official NutriBullet website. Keep your proof of purchase for warranty claims.

For customer support, replacement parts, or additional information, please visit the NutriBullet Store or contact their customer service department.

NutriBullet Store: [Visit the NutriBullet Store on Amazon](#)

User Manual (PDF): [Download Official User Manual \(PDF\)](#)

User Guide (PDF): [Download Official User Guide \(PDF\)](#)

© 2025 NutriBullet. All rights reserved.

Related Documents - NBJ50200

 The image shows the cover of the NutriBullet Juicer User Guide. It features a red background with a white NutriBullet Juicer unit in the center. To the left is a pineapple and to the right is an orange. The text 'nutribullet JUICER' is at the top, and 'User guide', 'Gebrauchs- handbuch', 'Manuel d'utilisation', and 'Gebrauchs- anweisung' are listed at the bottom with their respective language icons.	<p>NutriBullet Juicer User Guide: Assembly, Operation, and Care Comprehensive user guide for the NutriBullet Juicer, covering assembly, operation, juicing tips, cleaning, and maintenance. Learn how to make healthy fruit and vegetable juices with your NutriBullet Juicer.</p>
 The image shows the cover of the Magic Bullet Quick Guide. It features a woman in a red shirt making a smoothie. The text 'ONLY ONE STEP TOWARDS OPTIMUM HEALTH' is prominently displayed in the center. Below it is 'CLICK GUIDE' with icons for various languages, and the 'magic bullet' logo.	<p>Magic Bullet Quick Guide: Blend, Mix, and Create Healthy Recipes Discover the versatility of the Magic Bullet blender with this quick guide. Learn essential techniques, usage tips, and how to create delicious recipes for a healthier lifestyle.</p>
 The image shows the cover of the NutriBullet Juicer Pro User Guide. It features a white NutriBullet Juicer Pro unit with a glass jar attached. The text 'nutribullet JUICER PRO' is at the top, and 'User guide.' is at the bottom.	<p>NutriBullet Juicer Pro User Guide: Assembly, Usage, and Maintenance Comprehensive user guide for the NutriBullet Juicer Pro, covering important safeguards, assembly, usage instructions, juicing tips, care, troubleshooting, and warranty information.</p>

	<p>NutriBullet User Guide: Safety, Cleaning, and Usage Instructions</p> <p>Comprehensive user guide for NutriBullet blenders, covering safety precautions, cleaning instructions, and best practices for optimal performance. Includes information for various models like Magic Bullet, Baby Bullet, and series 600, 900, 1000, and 1200.</p>
	<p>NutriBullet Juicer User Guide: Assembly, Operation, and Care</p> <p>Comprehensive user guide for the NutriBullet Juicer, covering important safeguards, assembly instructions, usage tips, juicing guides, cleaning, storage, and warranty information.</p>
	<p>NutriBullet Baby & Toddler Meal Prep Kit User Guide</p> <p>A comprehensive user guide for the NutriBullet Baby & Toddler Meal Prep Kit, detailing its components, usage, and cleaning instructions for preparing baby food.</p>

Documents - NutriBullet – NBJ50200



[\[pdf\] Instructions Guide](#)

anonymous User Guide NutriBullet Juicer Pro Centrifugal Machine for Fruit Vegetables and Food Prep 27 Ounces 1 5 Liters 1000 Watts Silver NBJ50200 Home Kitchen A1N25voSgqL m media amazon images I III

User guide. Important safeguards. Warning To avoid the risk of serious injury, carefully read al ... products, therefore the speci cations contained herein are subject to change without notice. 200603_NBJ50200 ...

lang:en **score:34** filesize: 1.43 M page_count: 32 document date: 2023-05-31

User guide.



[\[pdf\] User Manual Owner's Manual Instructions](#)

Owner ManualNutribullet NBJ50200 Juicer Pro Reviews Wayfair806 878652 nbj50200 user manualassets wfcdn dm document 3a362d8c 5c64 4215 8c08 37e4ebea500b 806 manual |||

User guide. Important safeguards. Warning To avoid the risk of serious injury, carefully read al ... roducts, therefore the specifications contained herein are subject to change without notice. 200603 **NBJ50200** ...

lang:en **score:29** filesize: 2.41 M page_count: 32 document date: 2020-06-03

User guide.

NutriBullet Juicer Pro™ one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET

**NutriBullet limited warranty
obligations are confined to the
terms set forth below:**

NutriBullet, LLC and Capital
Brands Distribution, LLC
("Together, "NutriBullet")
warrants this NutriBullet®
against defects in materials
and workmanship for a period
of one year from the date of
original retail purchase. This
limited warranty is valid only
in the country in which the
product is purchased and
comes with the product of no
extra charge, however shipping
and processing fees may apply.
Should you need a return,
replacements and/or refunds,
if a defect exists and subject
to this limited warranty, at the
option of NutriBullet, we will repair
the product at no charge,
using new or refurbished
replacement parts. (A
product is considered new if it
is a product that is new or that has
been manufactured from new
or serviceable used parts and is

at least functionally equivalent
to the original product or (3)
refund the purchase price of
the product. A replacement
product assumes the remaining
warranty of the original
product. A replaced product
has a one-year warranty from
the date of repair. When a
product or part is exchanged,
any replacement item becomes
your property and the replaced
item becomes NutriBullet's
property. When a refund is
given, your product becomes
NutriBullet's property.

OBTAINING WARRANTY SERVICE
For limited warranty service,
simply call our Customer Service
Department at (800) 221-5993
or contact us via email from our
website at nutribullet.com, simply
click the contact us link, fill out
and submit the online contact
form and we will be glad to
help you. When you contact our
Customer Service Department
you will be asked for your name,
address, telephone number
and to provide proof of the
original purchase (receipt)

27

[\[pdf\] Warranty Catalog](#)

Pro 1000 W 67 6 oz Stainless Steel Juicer with 27 Pitcher Warranty NutriBullet NBJ50200 818049024037

0818049024037 1006385965 57e068fb 222e 4002 b82d 33eb7d3ced8e images thdstatic catalog Images

57 |||

NutriBullet Juicer ProTM one-year limited warranty. **LIMITED WARRANTY FOR
NUTRIBULLET** NutriBullet's limited warranty obligations are confined to the terms set
forth below: NutriBullet, LLC and Capital Brands Distribution, LLC together, NutriBullet
warrants this NutriBullet against defects in mat...

lang:en **score:23** filesize: 95.9 K page_count: 4 document date: 2021-04-19



[**\[pdf\] Warranty**](#)

Warranty InformationNutribullet NBJ50200 Juicer Pro Reviews Wayfair806 878652 nbj50200 warrantyassets wfcdn dm document 644a25c8 b434 4763 8efb 6d687c6cb683 806 warranty ||| NutriBullet Juicer Pro one-year limited warranty. **LIMITED WARRANTY FOR** NUTRIBULLET NutriBullet's limited warranty obligations are confined to the terms set forth below: NutriBullet, LLC and Capital Brands Distribution, LLC together, NutriBullet warrants this NutriBullet against defe...

lang:en **score:21** filesize: 219.93 K page_count: 5 document date: 2020-10-30