

[Manuals.plus](#) /

› [SKROSS](#) /

› SKROSS | 1.302461 | Pro Light USB (4xA) | Universal Travel Adapter 2 & 3 Pin with 4 USB Ports 4.8A Voltage and Power: 100V-700W/250V-1750W Suitable for PC and Hair Dryer

SKROSS 1.302461

SKROSS Pro Light USB (4xA) Universal Travel Adapter User Manual

Model: 1.302461

Brand: SKROSS

PRODUCT OVERVIEW

The SKROSS Pro Light USB (4xA) is a compact and versatile universal travel adapter designed to provide power and charging capabilities for your electronic devices in over 100 destinations worldwide. It features a 3-pin design suitable for both 2-pin and 3-pin devices, along with four integrated USB ports for charging multiple USB-powered devices simultaneously.

This adapter is engineered for safety, incorporating anti-shock and kid-safe features. It supports a wide input voltage range and can handle high-power devices such as laptops and travel hair dryers, up to 1750W.



Image: Front view of the SKROSS Pro Light USB (4xA) Universal Travel Adapter, highlighting its four USB charging ports and the universal AC socket.

SETUP AND INITIAL USE

Before connecting any device, ensure the adapter's pins are correctly configured for the wall socket in your destination. The SKROSS Pro Light USB (4xA) features retractable pins for various regions.

Selecting the Correct Plug Type:

- **USA/Japan (Type B):** Slide the lever marked "USA" to extend the two flat parallel pins and the round grounding pin.
- **UK/Hong Kong (Type G):** Slide the lever marked "UK" to extend the three rectangular pins.
- **Australia/China (Type I):** Slide the lever marked "AUS" to extend the two flat angled pins and the flat grounding pin.
- **Europe (Schuko & 2-pole Euro):** The adapter accepts European plugs (Type F Schuko and Type C Euro) into its input socket. The output pins are selected based on the destination.

To retract the pins, simply push them back into the adapter until they click into place. Always ensure the pins are fully extended or retracted before inserting or removing the adapter from a wall socket.

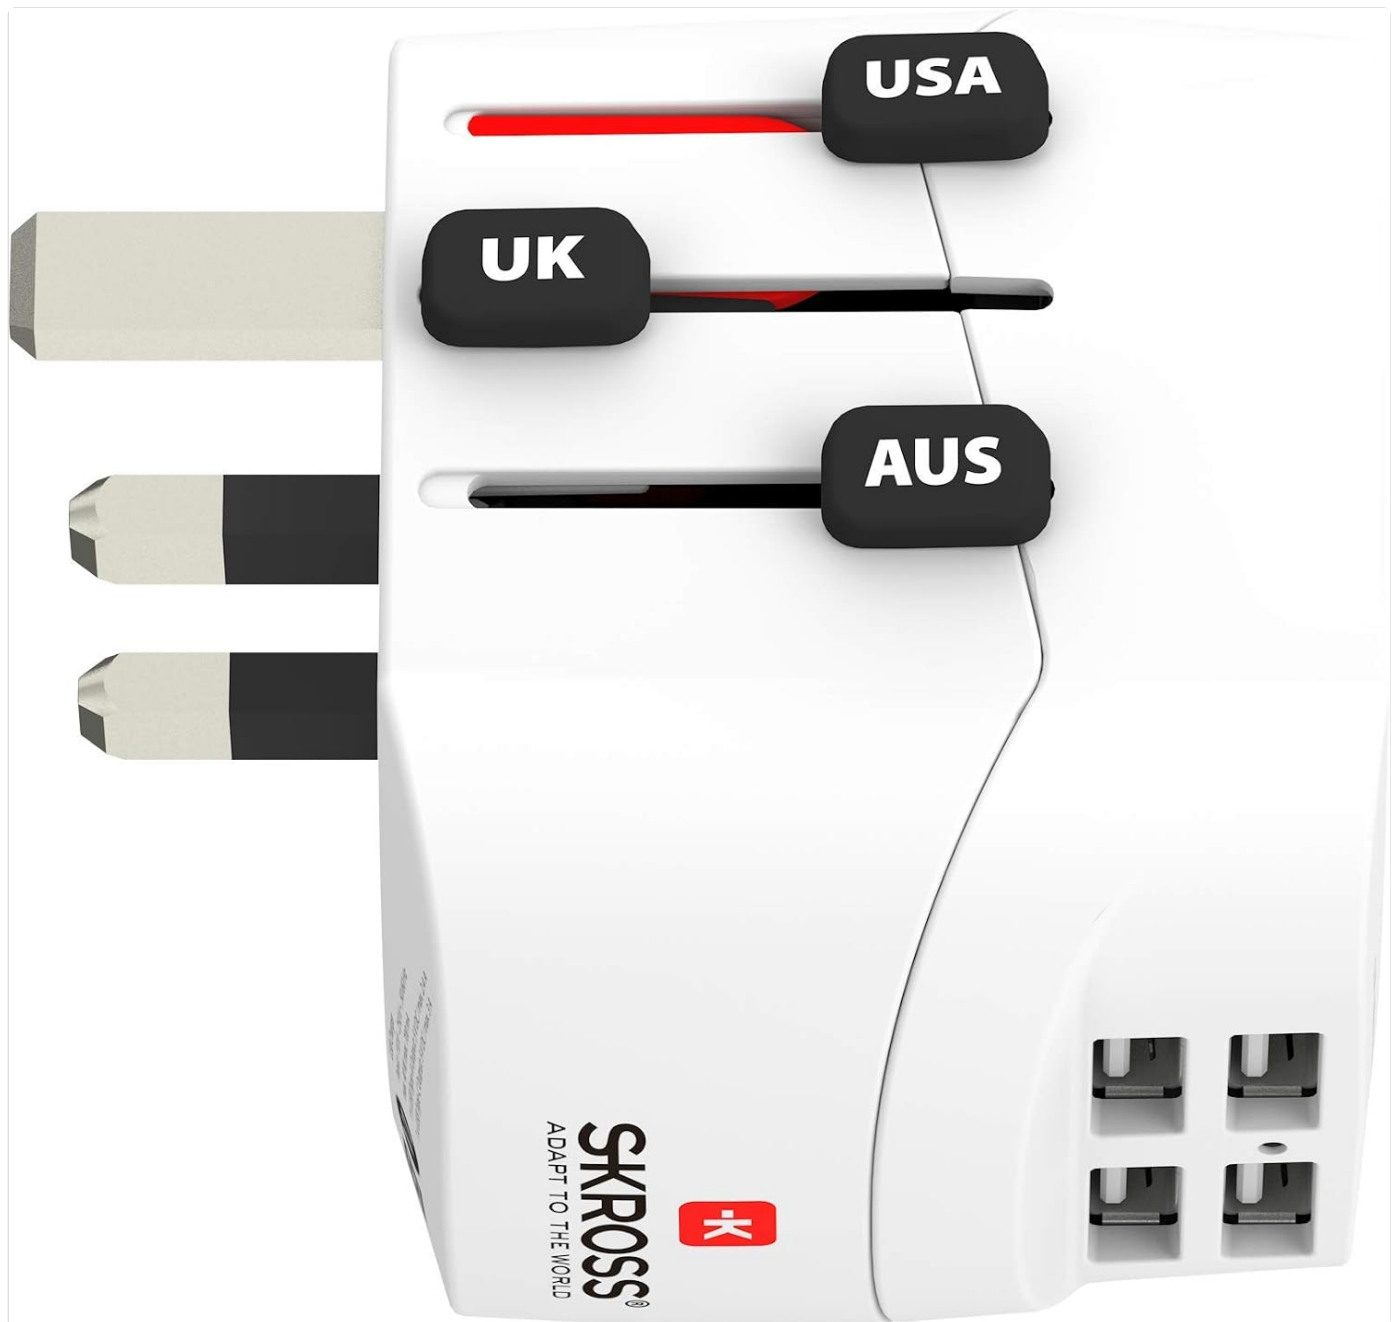


Image: Side view of the adapter demonstrating the retractable pins for USA, UK, and Australia/China, clearly labeled for ease of use.

OPERATING INSTRUCTIONS

Connecting Devices:

1. For AC Powered Devices:

- Ensure the adapter's output pins are correctly set for the wall socket.
- Plug the adapter into the wall socket.
- Insert your device's plug (2-pin or 3-pin, typically European Schuko or Euro) into the universal input socket on the adapter.
- Verify that your device's power requirements (voltage and wattage) are within the adapter's limits (100V-700W / 250V-1750W).

2. For USB Powered Devices:

- Plug the adapter into the wall socket.
- Connect your USB charging cables to any of the four USB ports on the adapter.
- Connect the other end of the USB cables to your devices (e.g., smartphones, tablets, smartwatches).
- The four USB ports share a maximum output of 4.8A (5V).

The adapter is designed to safely connect devices with a maximum load of 7A. It is suitable for a wide range of electronics, including laptops and travel hair dryers, provided their power consumption does not exceed 1750W at 250V or 700W at 100V.



Image: The adapter in active use, demonstrating its ability to power a laptop and simultaneously charge multiple USB devices like a smartphone, tablet, and smartwatch.

MAINTENANCE

To ensure the longevity and safe operation of your SKROSS Pro Light USB (4x4A) adapter, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and all devices before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture when not in use.
- **Handling:** Avoid dropping the adapter or subjecting it to strong impacts, as this can damage internal components.
- **Fuse Replacement:** The adapter contains a replaceable fuse (T 7A). If the adapter stops working, it may indicate a blown fuse. Consult a qualified technician for fuse replacement or refer to the detailed instructions provided with the product packaging for specific fuse access and replacement procedures. Ensure to use a fuse of the correct rating (T 7A).

TROUBLESHOOTING

If you encounter issues with your SKROSS Pro Light USB (4x4A) adapter, please refer to the following common

troubleshooting steps:

Problem	Possible Cause	Solution
Adapter not providing power to AC device.	No power from wall socket. Incorrect pin configuration. Device exceeding adapter's wattage limit. Blown fuse.	Test wall socket with another device. Ensure correct pins are fully extended for the region. Check device's power rating; do not exceed 1750W (250V) / 700W (100V). Replace the T 7A fuse if blown (refer to maintenance section).
USB ports not charging devices.	Adapter not plugged in or no power. Faulty USB cable. Total current draw exceeding 4.8A.	Ensure adapter is securely plugged into a live wall socket. Try a different USB cable. Disconnect some USB devices to reduce the load.
Pins are difficult to extend or retract.	Mechanism obstruction or dirt.	Ensure no foreign objects are obstructing the mechanism. Clean gently with a dry cloth. Do not force the pins.

If the problem persists after attempting these solutions, please contact SKROSS customer support.

SPECIFICATIONS

Feature	Detail
Model Number	1.302461
Product Dimensions (L x W x H)	2.2 x 3.03 x 2.28 inches (5.59 x 7.70 x 5.79 cm)
Item Weight	5.6 ounces (0.16 Kilograms)
Input Sockets	Europe (Schuko & 2-pole Euro)
Output Sockets	USA, UK, Australia/China
Input Voltage	100V - 250V, 50/60 Hz
Maximum Load	7A
Rated Power	100V - 700W / 250V - 1750W
Replaceable Fuse	T 7A
USB Output	5V / max. 4.8A (shared across 4 ports)
Average Active Efficiency	86.9%
Designed In	Switzerland
Manufacturer	CellularLine S.p.A.
Country of Origin	China

WORKS IN ▼



Type B
USA



Type G
UK



Type I
AUS/China



Argentina, Aruba, **Australia**, Bahamas, Bahrain, Barbados, Belize, Bermuda, Canada, Cayman Islands, **China**, Colombia, Cook Islands, Costa Rica, Cuba, Curacao, Cyprus, Dominican Republic, Ecuador, El Salvador, Fiji, Gambia, Gibraltar, Grenada, Guam, Guatemala, Haiti, Honduras, Ireland, Isle of Man, Jamaica, Kenya, Kuwait, Liberia, Malta, Mariana Islands, Marshall Island, Mauritius, Mexico, New Zealand, Nicaragua, Oman, Panama, Papua New Guinea, Peru, Philippines, Puerto Rico, Saint Lucia, Samoa, Saudi Arabia, Seychelles, Solomon Islands, Taiwan, Tajikistan, Thailand, Timor-Leste, Tonga, Trinidad and Tobago, Turkmenistan, Uganda, **United Kingdom**, **United States of America**, Uzbekistan, Venezuela & many more ...

FOR EARTHED SOCKETS ONLY

Image: Back of the product packaging illustrating the wide range of countries and plug types compatible with the adapter.

WARRANTY AND SUPPORT

Warranty Information:

The SKROSS Pro Light USB (4xA) Universal Travel Adapter comes with a global warranty. For specific terms and conditions of the warranty, please refer to the documentation included with your product or visit the official SKROSS

website.

Customer Support:

For further assistance, technical support, or inquiries regarding your SKROSS product, please visit the official SKROSS website or contact their customer service department. You can find more information about country compatibility and product details on the SKROSS website:

[Visit SKROSS Official Website](#)

© 2024 SKROSS. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question