

MK MK 2089

MK-2089 Electronic Keyboard User Manual

Model: MK 2089

INTRODUCTION

The MK-2089 is a 61-key electronic keyboard designed for both beginners and enthusiasts. It offers a comprehensive set of features to facilitate learning and creative expression, including a wide range of timbres and rhythms, a built-in metronome, and recording capabilities. This manual provides detailed instructions for setting up, operating, and maintaining your keyboard.



Image: The MK-2089 electronic keyboard, showcasing its 61 keys, control panel, LCD display, and the included music stand.

PACKAGE CONTENTS

Before proceeding, ensure all items are present in the package:

- MK-2089 Electronic Keyboard
- Adjustable Music Notes Stand
- AC Power Adapter (DC 12V, 500mA)
- User Manual (this document)

OPERATING INSTRUCTIONS

1. Basic Controls

- **POWER Button:** Turns the keyboard on or off.
- **MASTER VOL +/-:** Adjusts the overall volume of the keyboard.
- **TEMPO +/-:** Adjusts the speed of rhythms and demonstration songs.
- **LCD Display:** Shows current settings, selected timbre, rhythm, and other information.

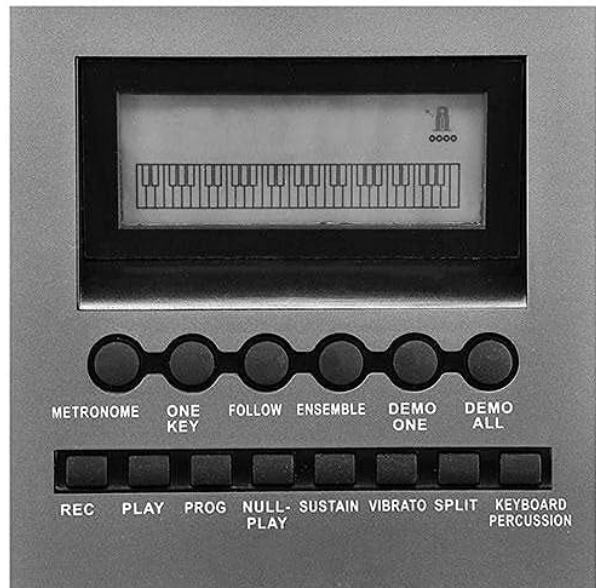


Image: Detailed view of the main control panel, highlighting the Master Volume, Tempo controls, and the LCD screen.

2. Selecting Timbres (Instrument Sounds)

The keyboard features 100 different timbres. To select a timbre:

1. Press the **TIMBRE** button.
2. Use the number pad (0-9) to enter the two-digit code for the desired timbre. Refer to the timbre list printed on the keyboard or in the full manual for codes.
3. Alternatively, use the +/- buttons to scroll through timbres.

3. Playing Rhythms

The keyboard includes 100 rhythms. To play a rhythm:

1. Press the **RHYTHM** button.
2. Use the number pad (0-9) to enter the two-digit code for the desired rhythm. Refer to the rhythm list printed on the keyboard or in the full manual for codes.
3. Press **START/STOP** to begin or end the rhythm.
4. Use **TEMPO +/-** to adjust the rhythm speed.

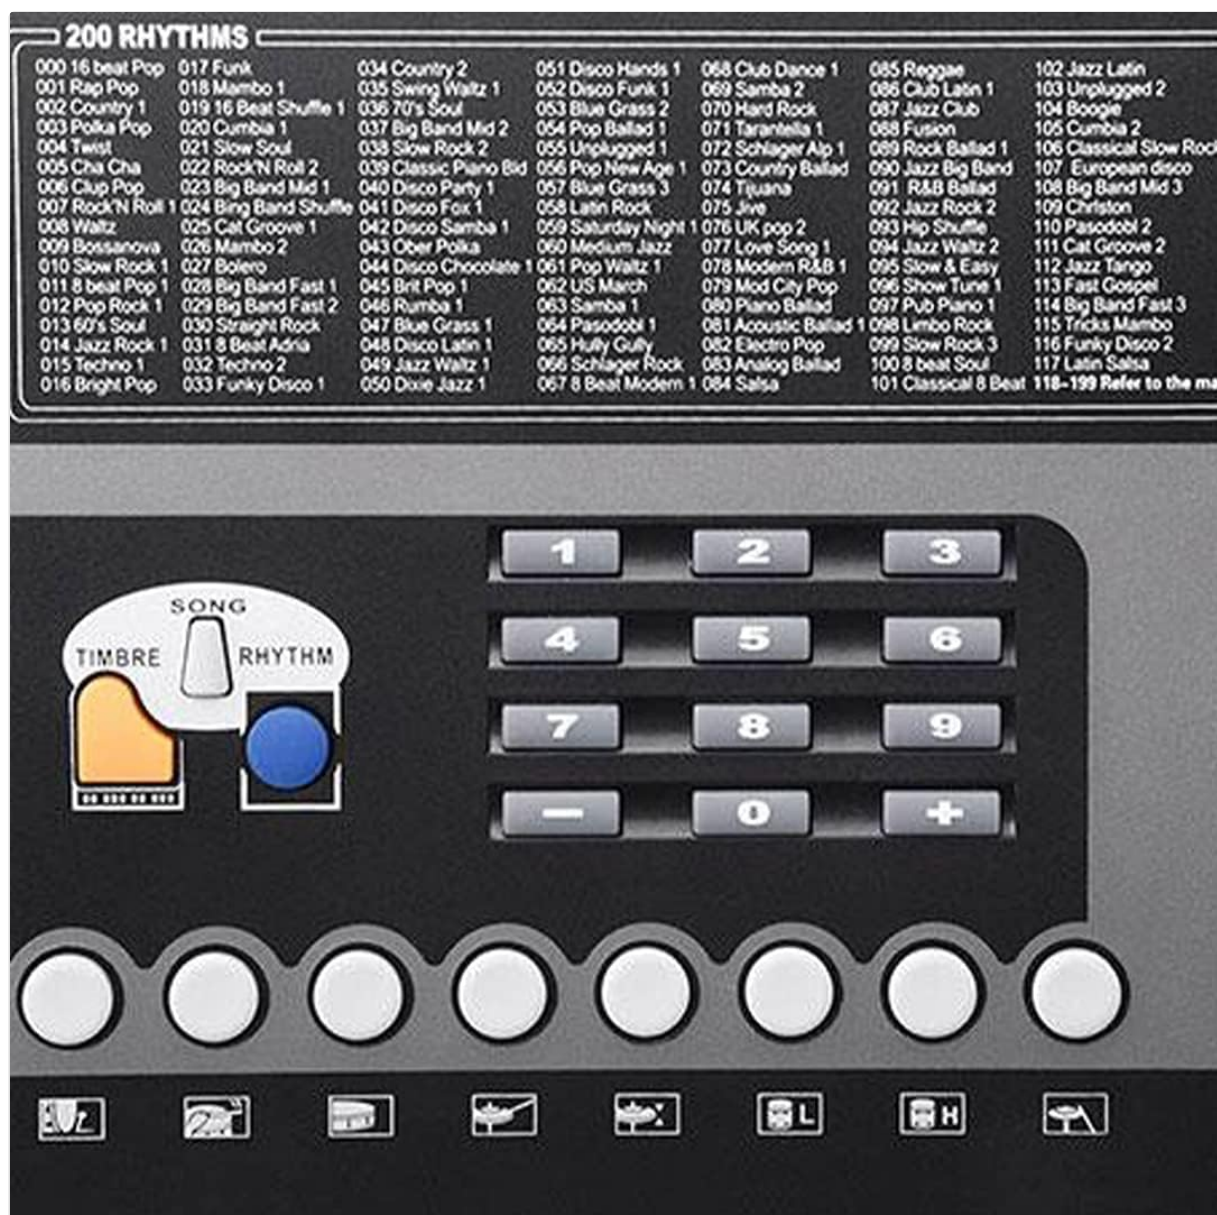


Image: Section of the control panel displaying the rhythm selection area and the list of available rhythms.

4. Demonstration Songs

The keyboard has 10 demonstration songs. To play them:

1. Press the **DEMO SONG** button.
2. Use the number pad to select a specific song, or press **DEMO ALL** to play all songs consecutively.
3. Press **START/STOP** to stop playback.

5. Recording and Playback

The built-in recorder allows you to record your performances:

1. Press the **REC** button to start recording. The REC indicator on the LCD will light up.
2. Play your desired melody on the keyboard.
3. Press **PLAY** to stop recording and play back your recorded melody.
4. Press **PLAY** again to stop playback.

6. Other Functions

- **SINGLE FINGER/FINGERED CHORD:** Selects chord playing mode.
- **SYNC/FILL-IN:** Synchronizes rhythm start with chord playing or adds a fill-in.
- **METRONOME:** Activates the metronome for timing practice.
- **SUSTAIN/VIBRATO:** Adds sustain or vibrato effect to notes.
- **TUNE/TRANSPOSE:** Adjusts the overall pitch of the keyboard.
- **KEYBOARD SPLIT:** Divides the keyboard into two sections with different timbres.
- **ONE-KEY/FOLLOW/ENSEMBLE:** Learning modes to assist with playing demonstration songs.

MAINTENANCE

Proper care will ensure the longevity of your MK-2089 keyboard:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water and mild soap, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on top of it.
- **Power:** Disconnect the power adapter when the keyboard is not in use for extended periods.



Image: A close-up view of one of the keyboard's integrated speakers, covered by a protective grill.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Keyboard does not turn on.	Power adapter not connected or faulty; power outlet not working.	Ensure power adapter is securely connected to both keyboard and outlet. Try a different outlet.
No sound from speakers.	Volume too low; headphones connected; speaker malfunction.	Increase MASTER VOL. Disconnect headphones. If problem persists, contact support.
Keys not responding.	Keyboard in a specific mode (e.g., learning mode); internal issue.	Try turning the keyboard off and on again. Check if any learning modes are active.
Rhythm/Demo song not playing.	START/STOP not pressed; incorrect rhythm/song selected.	Ensure START/STOP is pressed after selecting. Verify the correct code is entered.

SPECIFICATIONS

Feature	Detail
Model	MK 2089
Number of Keys	61
Timbres	100
Rhythms	100
Percussions	8 (Keyboard Percussion)
Demonstration Songs	10
Display	LCD
Functions	Tempo & Volume Control, Single Finger/Fingered Chord, Chord Timbre, Sync/Fill-in, Metronome, Rhythm Programming, Record & Playback, Sustain/Vibrato, Tune/Transpose, Keyboard Split, One-Key/Follow/Ensemble
Connectivity	Speaker output (L/R), Headphone Jack, Auxiliary, USB (MIDI USB)
Power Supply	DC 12V, 500mA (AC Adapter)
Dimensions (L x W x H)	94.5 cm x 36.8 cm x 10.2 cm (approx. 37.2 x 14.5 x 4 inches)
Weight	4.5 Kilograms
Finish Type	Black
Skill Level	Beginner

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase documentation or visit the official MK brand website. Keep your purchase receipt as proof of purchase for warranty claims.

For extended warranty options, please check with your retailer. For example, 1-Year and 2-Year Extended Warranties by Salama Care are available for this product.