

Indesit DFE-1B19XUK

Indesit DFE-1B19XUK Dishwasher User Manual

Model: DFE-1B19XUK | Brand: Indesit

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Indesit Free Standing Dishwasher, model DFE-1B19XUK. Please read these instructions carefully before using the appliance and retain them for future reference. Proper installation and maintenance are crucial for optimal performance and longevity of your dishwasher.

Important Safety Information:

- Always disconnect the appliance from the power supply before performing any cleaning or maintenance.
- Do not allow children to play with the appliance.
- Ensure the dishwasher is properly earthed.
- Do not open the door during operation, especially during the hot wash cycle.

2. PRODUCT OVERVIEW

The Indesit DFE-1B19XUK is a free-standing dishwasher designed for efficient dish cleaning. It features a user-friendly control panel and a spacious interior for up to 13 place settings.



Figure 2.1: Front view of the Indesit DFE-1B19XUK Dishwasher, showcasing its stainless steel finish and control panel.



Figure 2.2: Angled view of the dishwasher, highlighting its freestanding design.



Figure 2.3: Interior view showing the upper and lower racks extended, ready for loading.



Figure 2.4: Interior view with racks in their standard position, demonstrating the spacious capacity.



Figure 2.5: Detailed view of the control panel, featuring program selection dial and function buttons.

3. SETUP AND INSTALLATION

Proper installation is critical for the safe and efficient operation of your dishwasher. It is highly recommended that installation be performed by a qualified professional.

3.1 Unpacking and Positioning

- Carefully remove all packaging materials.
- Position the dishwasher on a level, stable surface. Ensure there is adequate space for door opening and closing.
- Refer to the dimensions diagram for space requirements.



Figure 3.1: Dimensions of the Indesit DFE-1B19XUK Dishwasher (Height: 85cm, Width: 60cm, Depth: 59cm).

3.2 Electrical and Water Connections

- Connect the water inlet hose to a cold water supply tap.
- Ensure the drain hose is properly connected to a suitable drain.
- Plug the power cord into a grounded electrical outlet. The appliance operates on 240 Volts.

3.3 Initial Use Preparation

- Fill the salt dispenser with dishwasher salt (first use only or when indicator light illuminates).
- Fill the rinse aid dispenser with rinse aid (first use only or when indicator light illuminates).

4. OPERATING INSTRUCTIONS

Your Indesit dishwasher offers various programs to suit different cleaning needs.

4.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure spray arms can rotate freely.



Figure 4.1: Example of a properly loaded dishwasher, maximizing space and ensuring effective cleaning.



Figure 4.2: The dishwasher integrated into a kitchen, demonstrating its capacity when open and loaded.

4.2 Program Selection and Start

1. Add the appropriate amount of detergent to the dispenser.
2. Close the dishwasher door firmly.
3. Select the desired program using the control dial. Available programs include:
 - **Fast&Clean:** Indesit's most effective cleaning performance in just 28 minutes (does not include a drying cycle).
 - **Push&Go (Innex technology):** Clean & dry dishes with just one push.
 - **(Auto) Intensive:** Best cleaning results for stubborn, baked-on dirt.
 - **Normal:** Standard daily wash.
 - **Delicate:** For fragile items.
 - **Rinse Only:** For pre-rinsing dishes.
4. Press the Start button.
5. To use the **Delay Timer**, set the desired delay before pressing Start.

The dishwasher features an Auto Door opening after wash for steam removal, enhancing drying performance.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning Filters

- The dishwasher is equipped with a Metallic Filter. Regularly check and clean the filter system located at the bottom of the wash tub.
- Remove food residues and rinse the filters under running water.
- Reassemble the filters correctly before operating the dishwasher.

5.2 Cleaning the Interior and Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the interior periodically with a dishwasher cleaner or a mixture of vinegar and water to prevent odor and limescale buildup.

5.3 Salt and Rinse Aid Refill

- Refill dishwasher salt when the indicator light illuminates to ensure effective water softening.
- Refill rinse aid when the indicator light illuminates for streak-free drying results.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes are not clean	Improper loading; Clogged filters; Insufficient detergent; Spray arms blocked.	Reload dishes correctly; Clean filters; Add more detergent; Clear spray arm nozzles.

Problem	Possible Cause	Solution
Water not draining	Clogged drain hose or filter; Drain pump malfunction.	Check and clear drain hose/filter; Contact service if issue persists.
Excessive noise	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.
Water overflow protection system activated	Leak detected.	Turn off water supply and power; Contact After Sales Service Dept.

7. SPECIFICATIONS

Detailed technical specifications for the Indesit DFE-1B19XUK Dishwasher.

Feature	Specification
Model Name	DFE 1B19 X
Model Info	DFE1B19XUK
Part Number	F158945
Type	Free Standing Dishwasher
Capacity	13 Place Settings / 12 Liters
Dimensions (D x W x H)	59 x 60 x 85 cm
Item Weight	24 Kilograms
Material	Stainless Steel (Interior and Exterior)
Color	White (Product image shows Inox/Stainless Steel, but spec says White)
Noise Level	49 dB
Voltage	240 Volts
Energy Efficiency	A+
Annual Energy Consumption	296 Kilowatt Hours Per Year
Annual Water Consumption	3360 Liters
Number of Programs	6 (Fast&Clean, Normal, Auto, Delicate, Rinse Only, Intensive)
Special Features	Timer, Push&Go, Extra Hygiene, Water overflow protection system, Metallic Filter, Auto Door opening after wash

8. WARRANTY AND SUPPORT

Your Indesit DFE-1B19XUK Dishwasher comes with a Brand Warranty. For any installation assistance, technical issues, or service requests, please contact the official After Sales Service Department.

For further details regarding warranty terms and conditions, please refer to the documentation provided with your purchase or contact Indesit customer support.

© 2023 Indesit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question