

KIWI KMX-3633

KIWI KMX-3633 Foldable Stand Mixer User Manual

Model: KMX-3633

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the stand mixer.
- Do not immerse the motor unit in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces.
- Always operate the mixer on a dry, stable, and level surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW

The KIWI KMX-3633 Foldable Stand Mixer is designed for various kitchen tasks, offering convenience and efficiency. It features a powerful motor and multiple speed settings to handle different mixing needs.

Key Features:

- 6-Speed Setting for precise control.
- Automatic Rotating 3.7 Liter Stainless Steel Bowl.

- 300 Watt Motor for efficient mixing.
- 3 Different Types of Stainless Steel Mixing Accessories (Dough Hooks, Beaters, Whisk).
- Safety Lock mechanism for secure operation.

Components:

1. Motor Unit / Mixer Head
2. Speed Control Dial
3. Release Button (for tilting head)
4. Attachment Ports
5. 3.7L Stainless Steel Mixing Bowl
6. Dough Hooks (2 pcs)
7. Beaters (2 pcs)
8. Whisk (1 pc)
9. Spatula



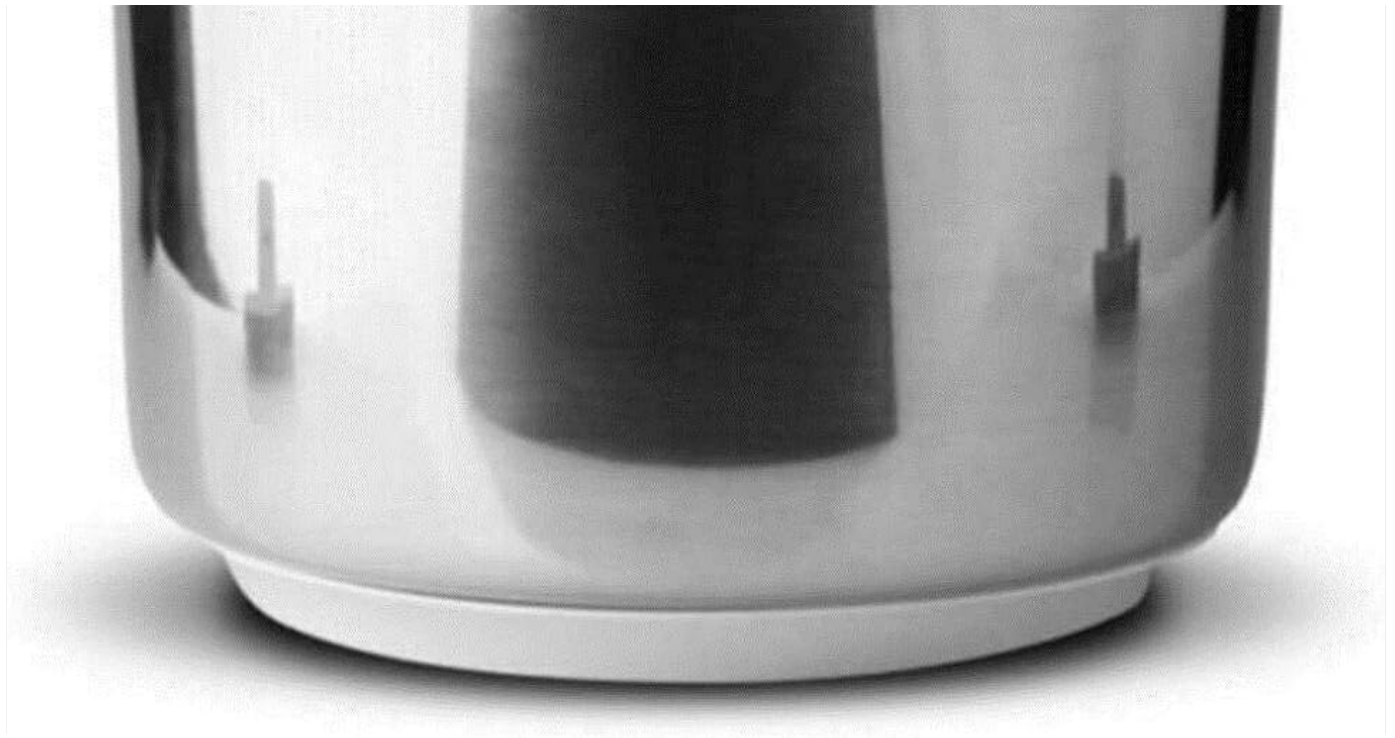


Image: The KIWI KMX-3633 Stand Mixer in its operational state, showing the main unit, the stainless steel mixing bowl, and the various attachments (dough hooks, beaters, whisk) laid out for use. A spatula is also visible.



Image: The 3.7-liter stainless steel mixing bowl of the KIWI KMX-3633 Stand Mixer, shown with all three types of mixing attachments (dough hooks, beaters, whisk) neatly stored inside. This illustrates the compact storage capability.



Image: The KIWI KMX-3633 Stand Mixer in its folded, compact position. The mixer head is tilted down and secured, and the attachments are stored within the bowl, demonstrating its space-saving design.

SETUP

Unpacking:

- Carefully remove all components from the packaging.
- Remove any protective films or packaging materials from the appliance.
- Wash the mixing bowl and all attachments (dough hooks, beaters, whisk) in warm, soapy water before first use. Rinse thoroughly and dry.
- Wipe the main motor unit with a damp cloth. Do not immerse the motor unit in water.

Assembly:

1. Place the mixer on a clean, dry, and stable surface.
2. Ensure the mixer head is in the upright position. If not, press the release button and gently lift the head until it locks into place.
3. Place the stainless steel mixing bowl onto the base, twisting it slightly clockwise until it is securely locked.
4. Insert the desired attachments (dough hooks, beaters, or whisk) into the attachment ports on the underside of the mixer head. Push and twist slightly until they click into place. Ensure both attachments are securely fastened if using a pair (dough hooks or beaters).

OPERATING INSTRUCTIONS

Before Mixing:

- Ensure the mixer is properly assembled and attachments are securely in place.
- Add your ingredients to the mixing bowl. Do not overfill the bowl beyond its 3.7-liter capacity.
- Plug the power cord into a suitable electrical outlet.

Mixing Process:

1. Lower the mixer head by pressing the release button and gently pushing the head down until it locks into the operating position. This engages the safety lock.
2. Turn the speed control dial to the desired speed setting (1-6). Start with a lower speed to prevent splashing, then gradually increase as needed.
3. The 3.7-liter stainless steel bowl will automatically rotate during operation, ensuring thorough mixing.
4. Monitor the mixing process. For heavier doughs, the motor may experience some strain; avoid continuous operation at high loads for extended periods.
5. Once mixing is complete, turn the speed control dial to the '0' (off) position.
6. Unplug the mixer from the power outlet.
7. Press the release button and lift the mixer head to remove the bowl and attachments.

Attachment Usage Guide:

- **Dough Hooks:** Ideal for kneading heavy doughs like bread or pizza dough. Use lower speeds (1-3).
- **Beaters:** Suitable for mixing batters, cakes, cookies, and mashed potatoes. Use medium speeds (2-4).
- **Whisk:** Best for whipping cream, egg whites, and light batters. Use higher speeds (4-6).

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your KIWI KMX-3633 Stand Mixer.

Cleaning:

1. Always unplug the mixer from the power outlet before cleaning.
2. Remove the mixing bowl and all attachments.
3. Wash the stainless steel mixing bowl, dough hooks, beaters, and whisk in warm, soapy water. These parts are generally dishwasher safe, but hand washing is recommended for best care. Rinse thoroughly and dry immediately to prevent water spots or corrosion.
4. Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scourers.
5. Never immerse the motor unit, power cord, or plug in water or any other liquid.

Storage:

- Ensure all parts are clean and dry before storing.
- The KIWI KMX-3633 is designed to be foldable for compact storage. To fold, ensure the mixer head is in the upright position, then gently push it down and back until it locks into its compact form.
- The attachments can be conveniently stored inside the mixing bowl when not in use, further saving space.
- Store the mixer in a dry place, away from direct sunlight and heat.

TROUBLESHOOTING

If you encounter any issues with your KIWI KMX-3633 Stand Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in. Power outlet not working. Mixer head not locked into operating position (safety lock).	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Ensure the mixer head is fully lowered and locked.
Attachments do not fit or fall out.	Attachments not inserted correctly. Incorrect attachments for the model.	Push and twist attachments firmly until they click into place. Ensure you are using the original KIWI KMX-3633 attachments.
Motor struggles or makes unusual noise during mixing.	Overloading the bowl. Mixture is too thick/heavy. Prolonged operation with heavy loads.	Reduce the amount of ingredients in the bowl. Add more liquid if the mixture is too stiff. Allow the mixer to rest if operating for extended periods with heavy doughs. Avoid forcing the motor.
Bowl does not rotate.	Bowl not properly seated. Obstruction.	Ensure the bowl is securely locked onto the base. Check for any foreign objects preventing rotation.

SPECIFICATIONS

Technical details for the KIWI KMX-3633 Foldable Stand Mixer:

Feature	Specification
Brand	KIWI
Model Number	KMX-3633
Color	White
Material	Stainless Steel (Bowl, Attachments)
Key Feature	Safety Lock, Foldable Design
Capacity	3.7 Liters
Electric Power	300 Watts
Number of Speeds	6
Blade Material (Attachments)	Stainless Steel

WARRANTY AND SUPPORT

This KIWI KMX-3633 Foldable Stand Mixer comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or questions regarding your product, please contact KIWI customer service. Contact information can typically be found on the manufacturer's official website or on the product packaging.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question