



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control for Airwell Air Conditioners (Model RAV521) User Manual

Easytry123 RAV521

Easytry123 Replacement Remote Control User Manual

Model: RAV521

INTRODUCTION

This document provides essential instructions for the setup, operation, and maintenance of your Easytry123 replacement infrared remote control, model RAV521. This remote is designed to function with various Airwell air conditioner models, including HDA009, PNX18DCI, PNX21DCI, PNX24DCI, SX009, SX012, HDA012, XLM17RCB, XLM14RCA, XLM14STA, GCXLM9RCA, CXLM12RCA, and GCXLM14RCA. Please ensure your original remote control visually matches the replacement shown in this manual for proper compatibility.

As a replacement unit, some advanced or specific functions present on your original remote may not be fully replicated. Refer to your air conditioner's original manual for detailed information on specific functions if needed.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back of the remote control with the battery compartment. The compartment cover is visible, indicating where to slide it open for battery insertion.

2. Initial Pairing (Not Required)

This is an infrared (IR) replacement remote control. It does not require any pairing or programming. Once batteries are installed, it is ready for use with compatible Airwell air conditioner models. Point the remote directly at the air conditioner's IR receiver.

OPERATING INSTRUCTIONS

The remote control features standard buttons for common air conditioner functions. Below is a general guide to the buttons and their typical uses. Button labels may vary slightly depending on the specific remote version, but their functions are generally consistent.



Figure 2: Front view of the remote control, displaying the LCD screen and control buttons.

- **Power Button ():** Turns the air conditioner ON or OFF.
- **MODE Button:** Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **Temperature Adjustment Buttons (+ / -):** Increases or decreases the set temperature.
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TIMER Button:** Sets the ON/OFF timer for the air conditioner.
- **SLEEP Button:** Activates or deactivates sleep mode, which adjusts temperature for comfortable sleep.
- **I FEEL Button:** Activates the "I Feel" function, where the remote's sensor measures the ambient temperature and sends it to the AC unit for more precise control.
- **ROOM Button:** Displays the current room temperature.
- **SET Button:** Used for confirming settings, often in conjunction with TIMER or other advanced functions.
- **CLEAR Button:** Resets or cancels certain settings, such as timer settings.

For specific functions and their detailed operation, please refer to the user manual of your Airwell air conditioner unit.

MAINTENANCE

1. Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately.

- Do not use abrasive cleaners, alcohol, or corrosive chemicals, as these can damage the remote's finish and internal components.

2. Battery Replacement

Replace batteries when the remote control's range decreases or it becomes unresponsive. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	<ul style="list-style-type: none"> • Batteries are dead or incorrectly installed. • Remote is too far from the AC unit or not pointed correctly. • Obstruction between remote and AC unit. • Incompatible AC model. 	<ul style="list-style-type: none"> • Replace batteries with new AAA batteries, ensuring correct polarity. • Move closer to the AC unit and ensure direct line of sight to the IR receiver. • Remove any objects blocking the signal path. • Verify your AC model is listed as compatible and that your original remote visually matches this replacement.
Some functions do not work.	<ul style="list-style-type: none"> • Function not supported by this replacement remote. • Function not available on your specific AC model. 	<ul style="list-style-type: none"> • This is a replacement remote; not all original functions may be replicated. • Consult your Airwell AC unit's original manual for specific function availability.
Remote display is dim or blank.	Low battery power.	Replace batteries with new AAA batteries.

SPECIFICATIONS

- **Model:** RAV521
- **Brand:** Easytry123
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Airwell Air Conditioners (specific models listed in Introduction)
- **Special Feature:** Ergonomic design, direct replacement functionality.

WARRANTY AND SUPPORT

This product is a replacement remote control. For any issues or questions regarding its functionality or compatibility, please contact the seller, Easytry123, directly through the platform where the purchase was made. Information regarding specific warranty terms, if any, should be obtained from the seller at the time of purchase.

It is recommended to retain your purchase receipt for any warranty claims or support inquiries.