

Nikai NTV4000SLED7

Nikai 40-inch Smart LED TV User Manual

Model: NTV4000SLED7

Brand: Nikai

1. INTRODUCTION

Thank you for choosing the Nikai 40-inch Smart LED TV, Model NTV4000SLED7. This manual provides essential information for setting up, operating, and maintaining your television. Please read it thoroughly before use and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury. Keep the TV away from water and moisture. Do not block ventilation openings. Use only attachments/accessories specified by the manufacturer. Unplug the TV during lightning storms or when unused for long periods. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Nikai 40-inch Smart LED TV (Model NTV4000SLED7)
- Remote Control
- Power Cable
- User Manual
- TV Stand (if included)
- Wall Mount Bracket (if included)

4. PRODUCT OVERVIEW

4.1 Front View

The front of the TV features the 40-inch LED display and the Nikai branding. The slim design ensures a modern aesthetic.



Figure 1: Front view of the Nikai 40-inch Smart LED TV.

4.2 Rear Panel Connections

The rear panel provides various input and output ports for connecting external devices.



Figure 2: Rear panel connections. Includes 2 HDMI ports, 2 USB ports, VGA, composite video, and audio inputs.

4.3 Remote Control

The included remote control allows you to navigate menus, adjust settings, and control playback. It features dedicated buttons for popular streaming services like Netflix and YouTube.





Figure 3: Nikai Smart LED TV Remote Control.

5. SETUP

5.1 Physical Installation

Your TV can be placed on a tabletop using the provided stand or mounted on a wall using a compatible VESA 200x200mm wall mount bracket. Ensure the TV is placed on a stable surface or securely mounted to prevent accidental falls.

5.2 Connecting Devices

Connect your external devices such as set-top boxes, gaming consoles, or media players to the TV using

the appropriate ports.

- **HDMI:** For high-definition audio and video. The TV has 2 HDMI inputs.
- **USB:** For playing media files from USB drives. The TV has 2 USB inputs.
- **VGA:** For connecting a computer.
- **Composite Video:** For older video devices.
- **3.5mm Audio Jack:** For stereo audio input or headphones.

5.3 Power Connection

Connect the power cable to the TV's power input and then to a wall outlet. The TV supports AC 100-240V, 50/60Hz.

5.4 Product Demonstration Video

Watch this video for a visual guide on the product's features and connectivity options.

Your browser does not support the video tag.

Video 1: Product Demonstration. This video showcases the TV's design, various ports, and remote control functionality.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power** button on the remote control or on the TV to turn the TV on or off.

6.2 Basic Navigation

Use the arrow buttons on the remote to navigate through menus and options. Press **ENTER** to confirm a selection and **EXIT** to return to the previous screen or exit the menu.

6.3 Smart TV Features (Android 8.0)

This TV runs on Android 8.0, providing access to a variety of smart features:

- **Wi-Fi Connectivity:** Connect to your home Wi-Fi network to access online content.
- **Web Browser:** Browse the internet directly from your TV.
- **Pre-installed Apps:** Access popular apps like Netflix.
- **App Store:** Download additional applications from the Android app store.
- **Screen Mirroring (Miracast):** Share content from your mobile device to the TV.

7. SETTINGS

Access the TV's settings menu to customize your viewing experience.

7.1 Picture Settings

Adjust settings such as Picture Mode, Contrast, Brightness, Color, Sharpness, and Color Temperature to optimize image quality. The TV supports HDR10 for enhanced dynamic range.

7.2 Sound Settings

Configure audio output modes (Stereo), adjust volume, and select sound enhancements. The TV features

2.1 channel stereo speakers.

7.3 Network Settings

Manage your Wi-Fi connection, view network status, and configure other network-related options.

8. MAINTENANCE

To ensure the longevity and optimal performance of your TV:

- **Cleaning:** Gently wipe the screen and cabinet with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure proper airflow around the TV. Do not block ventilation openings.
- **Power:** Unplug the TV from the power outlet before cleaning or if it will be unused for an extended period.

9. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

- **No Power:** Check if the power cable is securely connected and the power outlet is working.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections (HDMI, AV, etc.).
- **Remote Control Not Working:** Ensure batteries are correctly inserted and not depleted. Point the remote directly at the TV's IR sensor.
- **Wi-Fi Connection Issues:** Check your router and internet connection. Re-enter the Wi-Fi password.
- **Poor Picture Quality:** Adjust picture settings (brightness, contrast, sharpness). Ensure the input source is providing a high-quality signal.

For persistent issues, contact customer support.

10. SPECIFICATIONS

Feature	Specification
Model Name	NTV4000SLED7
Screen Size	40 Inches
Display Technology	LED
Resolution	1366 x 768 (HD)
Operating System	Android 8.0
RAM	1GB
Internal Storage	8GB NAND Flash
Wireless Connectivity	Wi-Fi, Miracast
HDMI Ports	2

Feature	Specification
USB Ports	2
Other Inputs	VGA, Composite Video, 3.5mm Stereo Audio
Audio Output Mode	Stereo
Speaker Configuration	2.1 Channel Stereo Speakers
Power Consumption	75W (Operating), <0.5W (Standby)
Power Supply	AC 100-240V, 50/60Hz
Product Dimensions (W x D x H)	940 x 113 x 585 mm
Product Weight	7.5 kg
VESA Mounting Standard	200 x 200 mm
HDR Support	HDR10
Refresh Rate	60 Hz

11. WARRANTY AND SUPPORT

This product is eligible for a two-year limited warranty provided by the manufacturer/brand from the date of purchase. For detailed warranty terms, conditions, and support, please contact the manufacturer or the seller directly. Keep your purchase receipt as proof of purchase.