

EARISE M15

EARISE M15 Karaoke Machine User Manual

Model: M15

INTRODUCTION

Thank you for purchasing the EARISE M15 Karaoke Machine. This portable PA loudspeaker system is designed to provide high-quality audio for various entertainment and public address needs. Featuring powerful sound output, versatile connectivity options, and vibrant LED lights, the M15 is perfect for parties, gatherings, and karaoke sessions. Please read this manual thoroughly before operating the device to ensure proper use and to maximize its lifespan.



Image: The EARISE M15 Karaoke Machine, a black portable speaker with colorful LED lights on the front, shown with two wireless microphones and a remote control.

WHAT'S IN THE Box

Please check the contents of your package to ensure all items are present and in good condition.

- 1 x M15 Trolley PA System
- 2 x Wireless Microphones (Batteries Not Included)
- 1 x Remote Control
- 1 x Power Cord

- 1 x AUX Cable
- 1 x User Manual (this document)



Image: A visual representation of the package contents, showing the M15 speaker, two wireless microphones, a remote control, an AUX cable, and a charging cable.

SETUP GUIDE

1. Charging the Unit

Before first use, fully charge the M15 Karaoke Machine. The built-in 3600mAh 7.4V Lithium rechargeable battery provides portability. A full recharge takes approximately 3 hours.

1. Connect the included power cord to the DC Charging Port (6) on the back of the unit.
2. Plug the other end of the power cord into a standard AC 100-240V power outlet.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off depending on the unit's design.

2. Installing Microphone Batteries

The wireless microphones require batteries (not included). Open the battery compartment of each microphone and insert the required batteries, ensuring correct polarity.

3. Initial Power On

Locate the Power On/Off switch (15) on the control panel. Turn the switch to the "ON" position to power on the unit.

OPERATING INSTRUCTIONS

Control Panel Overview

Familiarize yourself with the control panel for optimal operation.



Bluetooth 5.0



Image: Close-up of the M15's control panel, highlighting various buttons and ports with corresponding numbers for easy identification.

- 1. Display Screen:** Shows current mode, track number, and other information.
- 2. Microphone Volume:** Adjusts the volume of connected microphones.
- 3. Microphone Echo:** Controls the echo effect for microphones.
- 4. Bass:** Adjusts the bass level of the audio output.
- 5. Treble:** Adjusts the treble level of the audio output.
- 6. DC Charging Port:** For connecting the power adapter to charge the unit.
- 7. Mic 1 Port:** Input for a wired microphone.
- 8. Mic 2 Port:** Input for a second wired microphone.
- 9. Line In Port (AUX):** For connecting external audio devices via AUX cable.
- 10. USB Flash Drive Slot:** For playing audio files from a USB drive.
- 11. TF/SD Card Slot:** For playing audio files from a TF or SD card.
- 12. Mode:** Switches between Bluetooth, USB, TF, AUX, and FM Radio modes.
- 13. Repeat:** Repeats the current track or playlist.

14. **Light:** Toggles or changes the LED light patterns.
15. **Power On/Off, Master Volume:** Turns the unit on/off and adjusts the overall volume.
16. **Previous Track:** Skips to the previous track.
17. **Play/Pause:** Plays or pauses the current track.
18. **Next Track:** Skips to the next track.

1. Bluetooth Pairing

Connect your smartphone, tablet, or other Bluetooth-enabled device to the M15 for wireless audio streaming.

1. Power on the M15 unit.
2. Press the **Mode** button (12) until "Bluetooth" or "BT" appears on the Display Screen (1).
3. Enable Bluetooth on your device and search for "EARISE M15" in the list of available devices.
4. Select "EARISE M15" to pair. A confirmation sound will indicate successful pairing.
5. You can now play audio from your device through the M15.



Image: A person sitting outdoors, connecting their smartphone to the EARISE M15 speaker via Bluetooth, indicated by the Bluetooth logo.

2. USB/TF Card Playback

Play audio files directly from a USB flash drive or TF/SD card.

1. Insert a USB flash drive into the USB Flash Drive Slot (10) or a TF/SD card into the TF/SD Card Slot (11).
2. The unit should automatically switch to USB or TF mode and begin playing compatible audio files. If not, press the **Mode** button (12) to select the correct mode.
3. Use the **Previous Track** (16), **Play/Pause** (17), and **Next Track** (18) buttons to control playback.

3. AUX Input

Connect external audio devices that do not have Bluetooth capability using the AUX cable.

1. Connect one end of the included AUX cable to the Line In Port (9) on the M15.
2. Connect the other end of the AUX cable to the audio output jack of your external device (e.g., MP3 player, laptop).
3. Press the **Mode** button (12) until "AUX" or "LINE" appears on the Display Screen (1).
4. Control playback from your external device.

4. Microphone Usage

The M15 supports up to two wireless microphones and two wired microphones simultaneously for karaoke fun.

1. **Wireless Microphones:** Turn on the wireless microphones. They should automatically connect to the M15.
2. **Wired Microphones:** Plug wired microphones into Mic 1 Port (7) or Mic 2 Port (8).
3. Adjust the Microphone Volume (2) and Microphone Echo (3) knobs to achieve desired sound effects.



Image: A group of people enjoying karaoke, with the EARISE M15 speaker providing sound and multiple microphones in use, demonstrating its multi-user capability.

5. LED Lights

Enhance your party atmosphere with the M15's colorful LED disco lights.

1. Press the **Light** button (14) to toggle the LED lights on/off or to cycle through different light patterns.

LED

Colorful LED Lights



Image: The EARISE M15 speaker with its front-facing LED lights glowing in multiple colors, creating a vibrant visual effect.

6. Remote Control Usage

The included remote control provides convenient operation from a distance.

- Ensure the remote control has working batteries.
- Point the remote control towards the front of the M15 unit.
- Use the buttons on the remote to control volume, mode, track selection, EQ, and other functions.

MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your EARISE M15 Karaoke Machine.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the unit for an extended

period, charge it to about 50% every few months.

- **Storage:** Store the unit in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** While the unit is portable with wheels and a handle, avoid dropping or subjecting it to strong impacts.



Image: A person demonstrating the portability of the EARISE M15 by pulling it with its retractable handle and built-in wheels.

TROUBLESHOOTING

If you encounter issues with your M15, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power / Unit does not turn on.	Battery is depleted. Power cord not properly connected.	Charge the unit fully. Ensure power cord is securely connected to both the unit and the power outlet.

Problem	Possible Cause	Solution
No sound from speaker.	Volume is too low. Incorrect mode selected. External device volume is low.	Increase the Master Volume (15). Press the Mode button (12) to select the correct input source (Bluetooth, USB, AUX). Increase volume on the connected external device.
Microphone not working.	Microphone batteries are dead or incorrectly inserted. Microphone volume is too low. Wireless microphone not paired.	Replace microphone batteries, ensuring correct polarity. Increase Microphone Volume (2). Ensure wireless microphones are turned on and within range.
Bluetooth pairing failed.	M15 is not in Bluetooth mode. Device is too far from M15. Bluetooth on device is off.	Press Mode button (12) to select Bluetooth mode. Move your device closer to the M15. Enable Bluetooth on your device.
USB/TF card not playing.	Incorrect file format. Card/drive not inserted correctly. Unit not in USB/TF mode.	Ensure audio files are in a compatible format (e.g., MP3). Re-insert the USB drive or TF card firmly. Press Mode button (12) to select USB or TF mode.

SPECIFICATIONS

Detailed technical specifications for the EARISE M15 Karaoke Machine.

Feature	Specification
Model	M15
Power Output	400W Max.
R.Frequency	90Hz-20KHz
Li-ion Battery	3.7V / 2600mAh (Built-in)
Drive Unit	8" 4Ω*1 + 1" tweeter*1
S/N Ratio	≥60dB
Power Supply	AC 100-240V
Product Dimensions (L x W x H)	27.94 x 25.4 x 40.64 cm (11 x 10.4 x 16.3 inches)
Item Weight	4.08 kg
Connectivity Technology	Bluetooth, USB, AUX
Compatible Devices	Laptop, Smartphone

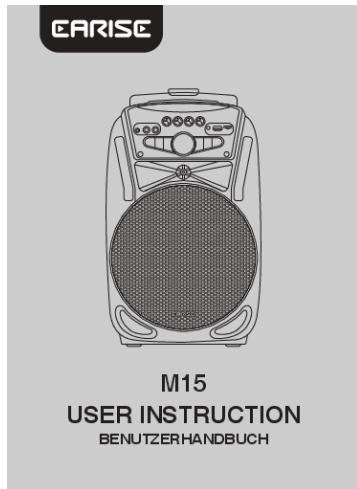


Image: A diagram illustrating the physical dimensions of the EARISE M15 speaker, showing its height, width, and depth.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official EARISE website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 EARISE. All rights reserved.
This manual is subject to change without notice.



[\[pdf\]](#) User Manual

07 29 27 027 T26 EEARISE M15 PA System Karaoke Machine with 2 Wireless Microphones Portable Bluetooth Loudspeaker 8 Subwoofer LED Lights Extra Mic Jack black User Manual B092917XYH B08GC7M9N 71PSgbJRCwL m media amazon images I

M15 USER INSTRUCTION BENUTZERHANDBUCH M15

WARNING.....01 DISPLAY

SCREEN.....01 THE OPERATION

PANEL.....

lang:i-klingon score:30 filesize: 192.28 K page_count: 23 document date: 2020-12-30