

[Manuals.plus](#) /

› [GameSir](#) /

› GameSir T1s Wireless Bluetooth Game Controller Instruction Manual

GameSir T1s

GameSir T1s Wireless Bluetooth Game Controller Instruction Manual

1. PRODUCT OVERVIEW

The GameSir T1s is a versatile wireless game controller designed for a wide range of platforms, including Android devices, PC, Smart TVs, TV Boxes, PS3, and Samsung Gear VR. It offers multiple connection modes for flexible gaming and an enhanced user experience.



Image: The GameSir T1s Wireless Bluetooth Game Controller, showcasing its ergonomic design and button layout.



Image: The GameSir T1s controller on a desk with a PC, PS3, and Nintendo Switch, illustrating its broad compatibility with Android, PC, PS3, and NS platforms.

2. SETUP AND CONNECTION

The GameSir T1s controller supports Bluetooth, 2.4GHz wireless (via USB dongle), and wired USB connections. Follow the instructions below to connect your controller to your desired device.

2.1 Android Device Connection (Bluetooth)

1. Ensure the controller is powered off.
2. Press and hold the '**A**' button and the **HOME** button simultaneously until the indicator lights flash.
3. On your Android device, go to Bluetooth settings and search for available devices.
4. Select 'GameSir T1s' from the list to pair. The indicator light will become solid once connected.



AUTO FIRE FUNCTION

Holding the "Turbo" button down will cause the weapon to fire continuously.



DUAL VIBRATION MOTORS

Realistic vibration feedback can be easily experienced in racing games, sports, shooting and other types of games.



Image: The GameSir T1s controller with a smartphone attached, illustrating the 'Press A + HOME' button combination for Android Bluetooth connection.

2.2 PC Connection (2.4GHz Wireless)

1. Locate the 2.4GHz USB dongle stored within the controller (often found in a compartment).
2. Insert the USB dongle into an available USB port on your PC.
3. Press and hold the **X** button and the **HOME** button simultaneously until the indicator lights flash.
4. The controller should automatically connect to the PC. The indicator light will become solid once connected.



Image: A close-up view of the GameSir T1s controller, showing the built-in compartment for the 2.4GHz wireless receiver and an arrow indicating its removal.

2.3 PS3 Connection

1. Ensure the controller is powered off.
2. Press and hold the **TURBO** button and the **HOME** button simultaneously until the indicator lights flash.
3. Connect the controller to the PS3 using a USB cable if initial pairing is required. The controller should be recognized by the PS3.

2.4 Wired Connection

For a wired connection to PC or other compatible devices, simply connect the controller using a USB cable. The controller will be recognized automatically by most systems.

Your browser does not support the video tag.

Video: An official product video from GameSir Direct demonstrating the various connection methods (Android, PC) and features of the GameSir T1s controller, including button combinations for pairing.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The GameSir T1s features standard gamepad controls including dual analog sticks, a D-pad, ABXY action buttons, shoulder buttons (L1/R1), and triggers (L2/R2). Familiarize yourself with the layout for optimal gameplay.

3.2 Auto Fire Function (Turbo)

The Turbo function allows for continuous rapid firing of a button without repeatedly pressing it.

1. To activate Turbo: Press and hold the **TURBO** button, then press the desired action button (e.g., A, B, X, Y, L1, R1, L2, R2). The button will now auto-fire when held down.
2. To deactivate Turbo: Repeat the activation process (press **TURBO** and the same action button).

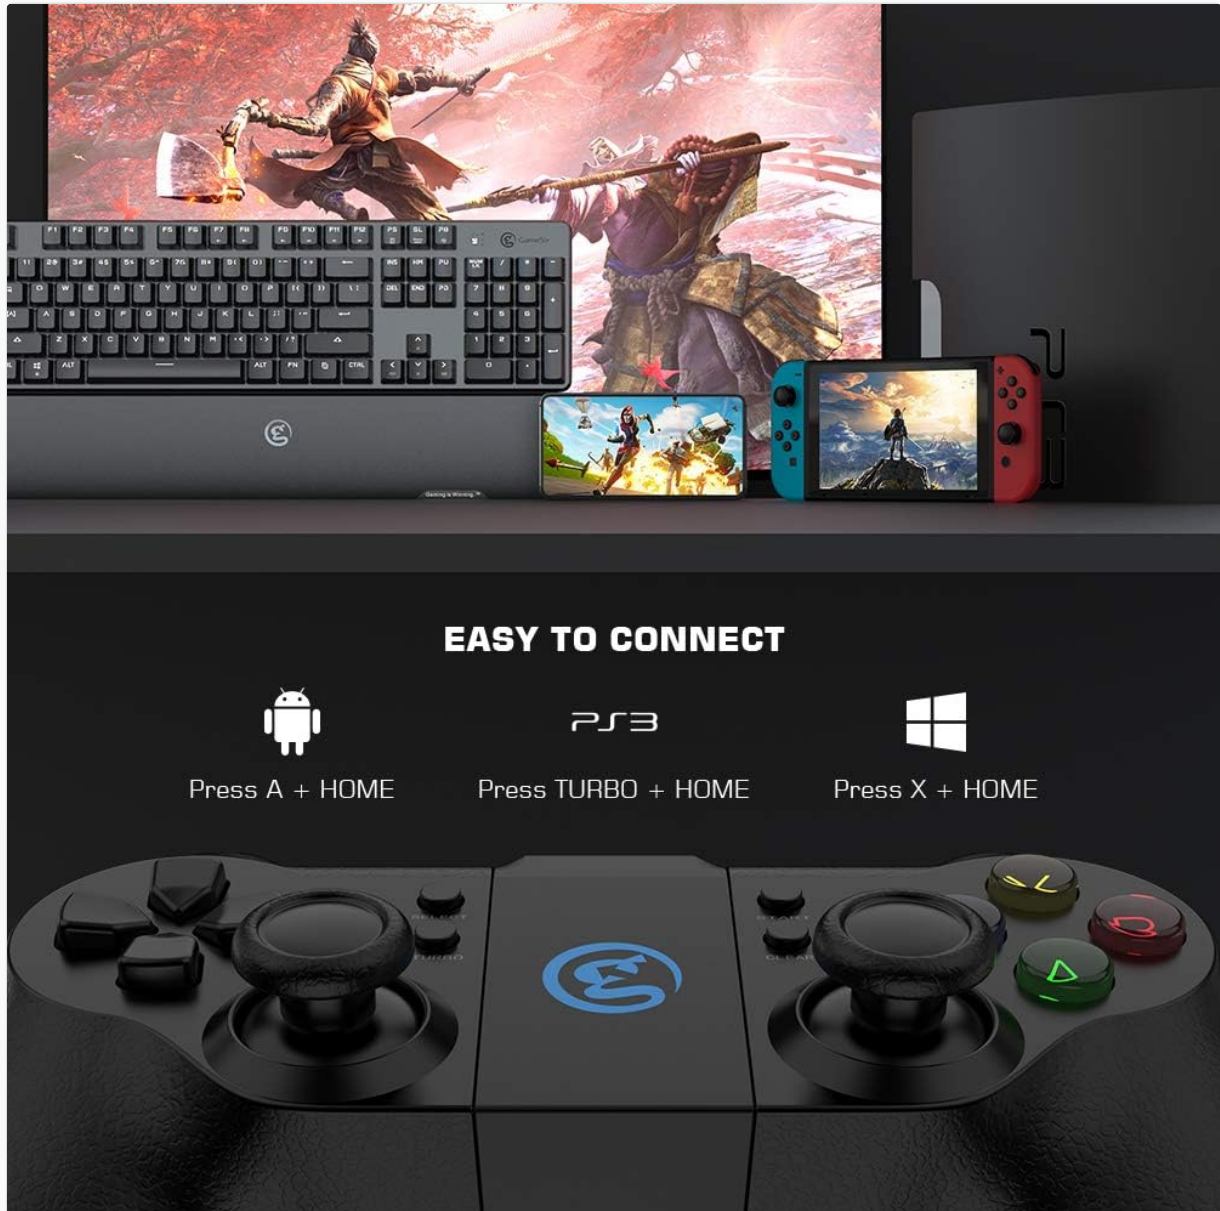


Image: A split image showing a close-up of the 'TURBO' button on the controller and an illustration of the dual vibration motors, highlighting these key features.

3.3 Vibration Feedback

The controller is equipped with dual vibration motors to provide realistic haptic feedback during gameplay, enhancing immersion in racing, sports, and shooting games. Vibration intensity may vary based on game support.

3.4 Built-in Smartphone Holder

The integrated, multi-angle bracket allows for securely mounting smartphones with screen sizes ranging from 3.5 to 6 inches, providing a convenient mobile gaming experience.



Image: A close-up view of the GameSir T1s controller demonstrating the built-in, retractable, and multi-angle bracket designed to hold smartphones.

4. KEY FEATURES

- **Wireless Bluetooth Connectivity:** GameSir T1s connects to devices wirelessly via Bluetooth for convenience.
- **Compatible with Multiple Platforms:** Works with Android devices, PC, Smart TVs, PS3, and Samsung Gear VR.
- **16-Button Gamepad:** Features 16 action buttons for quick access to all functions.
- **Customizable Controls:** Adjustable button layout and sensitivity settings.
- **Durable and Portable:** Made from sturdy plastic with a compact design for easy transport.

5. PRODUCT SPECIFICATIONS

Specification	Detail
---------------	--------

Brand	GameSir
Compatible Devices	Android, PC, PS3, Smart TV, TV Box, Samsung Gear VR
Controller Type	Gamepad
Connectivity Technology	Bluetooth, 2.4GHz Wireless, USB Wired
Special Feature	Wireless
Button Quantity	16
Power Source	Wireless (Rechargeable Battery)
Item Weight	11.2 ounces
Item Dimensions	2.76 x 5.91 x 6.69 inches

6. TROUBLESHOOTING

6.1 Controller Not Connecting

- Ensure the controller is fully charged.
- Verify that the correct connection mode (Bluetooth, 2.4GHz, or wired) is selected by pressing the appropriate button combination (A+HOME for Android, X+HOME for PC 2.4GHz, TURBO+HOME for PS3).
- For 2.4GHz wireless, ensure the USB dongle is securely inserted into the device's USB port.
- Try restarting both the controller and the device you are trying to connect to.

6.2 Input Lag or Disconnections

- For Bluetooth connections, ensure your device is not too far from the controller and there are no significant physical obstructions.
- If experiencing lag on PC with the 2.4GHz dongle, try connecting the controller directly via a USB cable to rule out wireless interference.
- Ensure other wireless devices are not causing interference with the controller's signal.

6.3 Buttons Not Responding

- Check if the controller is properly paired and powered on.
- If specific buttons are unresponsive, try resetting the controller by holding the HOME button for an extended period (approximately 10 seconds) or referring to the full manual for a specific reset procedure.
- Ensure the game you are playing supports gamepad input and that the in-game controls are correctly configured.

7. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your GameSir T1s controller, please refer to the official GameSir website or contact their customer service directly. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

