

Manuals.plus /

› HENCKELS /

› HENCKELS Convection Toaster Mini-Oven with 6-Slice Capacity / 12" Oven Surface - 6 Cooking Modes, 3 Rack Types User Manual

HENCKELS 36450-170

HENCKELS Convection Toaster Mini-Oven User Manual

Model: 36450-170

Introduction	Safety Information	Components	Setup	Operation	Maintenance
	Troubleshooting	Specifications		Warranty & Support	

1. INTRODUCTION

Thank you for choosing the HENCKELS Convection Toaster Mini-Oven. This appliance is designed to provide versatile cooking options, including baking, broiling, pizza, toast, bagel, and warm functions, with precise temperature and time control. Its compact design and 6-slice capacity make it a valuable addition to any kitchen, offering additional oven capacity for various culinary tasks, from baking pizzas to roasting and toasting breads.



Figure 1.1: Front view of the HENCKELS Convection Toaster Mini-Oven, showcasing its sleek stainless steel design and digital control panel.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- **Hot Surfaces:** The oven surfaces, including the door and handle, become extremely hot during and after operation. Always use oven mitts or pot holders when touching hot surfaces.
- **Electrical Safety:** Do not immerse the cord, plug, or appliance in water or other liquid. Ensure the power cord does not touch hot surfaces.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Proper Use:** Do not use the appliance for anything other than its intended use. Do not place paper, cardboard, plastic, or other flammable materials inside the oven.
- **Ventilation:** Ensure adequate ventilation around the oven. Do not block any ventilation openings.
- **Unplug When Not in Use:** Always unplug the oven from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Food Placement:** Oversized foods or metal utensils must not be inserted into the toaster oven as they may create a fire or risk of electric shock.
- **Crumb Tray:** Always ensure the crumb tray is properly installed before use. Clean the crumb tray regularly to prevent grease buildup and potential fire hazards.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your HENCKELS Convection Toaster Mini-Oven.

A. Digital Control Panel: Features a large LED display for time, temperature, and cooking mode, along with buttons for Time/Temp, Slice/Shade, Convec, and Start/Stop.



Figure 3.1: Detailed view of the digital control panel with LED display and function buttons.

- B. Function Mode Knob:** Used to select one of the six versatile cooking modes: Bake, Broil, Pizza, Toast, Bagel, and Warm.
- C. Time/Temp Knob:** Used to adjust cooking time or temperature settings based on the selected mode.
- D. Oven Door:** Features a dropdown design for easy access to the oven interior.
- E. Crumb Tray:** A removable tray located at the bottom for collecting crumbs, essential for easy cleaning.
- F. Non-stick Baking Tray:** Ideal for baking and roasting.



Figure 3.2: Included accessories: non-stick baking tray, oven rack, and pull-out broil rack.

G. Oven Rack: For general baking and toasting.

H. Pull-out Broil Rack: Designed for broiling, often used in conjunction with the baking tray.

4. INITIAL SETUP

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any packing materials, stickers, or protective film from the appliance.
2. **Cleaning:** Before first use, wipe the exterior of the oven with a damp cloth. Wash the baking tray, oven rack, and broil rack in warm, soapy water. Rinse and dry thoroughly. Do not immerse the main unit in water.
3. **Placement:** Place the oven on a stable, level, heat-resistant surface, ensuring at least 4 inches (10 cm) of clearance on all sides for proper ventilation. Do not place it near a wall or under cabinets.
4. **First Use Burn-Off:** It is recommended to run the oven empty for approximately 15 minutes on the "Bake" setting at 400°F (200°C) before first use. This will burn off any manufacturing oils and eliminate any initial odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

Your HENCKELS Convection Toaster Mini-Oven features digital controls for precise cooking. Follow these steps for

general operation and specific cooking modes.

General Operation:

1. **Power On:** Plug the oven into a suitable electrical outlet. The display will illuminate.
2. **Select Function:** Turn the **Function Mode Knob** to select your desired cooking mode (Bake, Broil, Pizza, Toast, Bagel, Warm).
3. **Adjust Settings:**
 - For Bake, Broil, Pizza, Warm: Press the **Time/Temp** button to toggle between time and temperature adjustment. Use the **Time/Temp Knob** to set the desired value.
 - For Toast, Bagel: Press the **Slice/Shade** button to toggle between number of slices and toast shade. Use the **Time/Temp Knob** to set the desired value.
4. **Convection (if applicable):** For Bake, Broil, and Pizza modes, you can press the **Convec** button to turn the convection fan ON or OFF. The convection fan circulates hot air for faster, more even cooking.
5. **Start Cooking:** Press the **Start/Stop** button to begin the cooking cycle.
6. **Stop Cooking:** To stop cooking at any time, press the **Start/Stop** button again.

Specific Cooking Modes:

Bake Mode:

Ideal for baking cakes, cookies, casseroles, and other dishes. Temperature range: 150°F - 500°F.

1. Turn the **Function Mode Knob** to "Bake".
2. Press **Time/Temp** to select temperature, then turn the **Time/Temp Knob** to set. Press **Time/Temp** again to select time, then turn the **Time/Temp Knob** to set.
3. (Optional) Press **Convec** for convection baking.
4. Place food on the oven rack or baking tray.
5. Press **Start/Stop**.

Broil Mode:

For broiling meats, fish, or browning the top of dishes. Use the pull-out broil rack with the baking tray underneath to catch drippings.

1. Turn the **Function Mode Knob** to "Broil".
2. Set desired time using the **Time/Temp Knob**. Temperature is fixed for broil.
3. Place food on the broil rack within the baking tray.
4. Press **Start/Stop**.

Pizza Mode:

Optimized for cooking pizzas up to 12 inches.



Figure 5.1: A pizza cooking inside the oven, demonstrating the 12-inch capacity.

1. Turn the **Function Mode Knob** to "Pizza".
2. Set desired time and temperature using the **Time/Temp Knob**.
3. (Optional) Press **Convect** for convection cooking.
4. Place pizza directly on the oven rack or on the baking tray.
5. Press **Start/Stop**.

Toast Mode:

For toasting bread slices. Capacity for up to 6 slices.

1. Turn the **Function Mode Knob** to "Toast".
2. Press **Slice/Shade** to select the number of slices, then turn the **Time/Temp Knob** to set.
3. Press **Slice/Shade** again to select toast shade (light to dark), then turn the **Time/Temp Knob** to set.
4. Place bread slices directly on the oven rack.
5. Press **Start/Stop**.

Bagel Mode:

Specifically designed for toasting bagels, toasting the cut side while gently warming the other.

1. Turn the **Function Mode Knob** to "Bagel".
2. Press **Slice/Shade** to select the number of bagel halves, then turn the **Time/Temp Knob** to set.
3. Press **Slice/Shade** again to select toast shade, then turn the **Time/Temp Knob** to set.
4. Place bagel halves cut-side up on the oven rack.
5. Press **Start/Stop**.

Warm Mode:

Keeps food warm without further cooking.

1. Turn the **Function Mode Knob** to "Warm".
2. Set desired time using the **Time/Temp Knob**. Temperature is fixed for warm.
3. Place food on the oven rack or baking tray.
4. Press **Start/Stop**.

6. CARE AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your HENCKELS Convection Toaster Mini-Oven.

1. **Always Unplug:** Before cleaning, always unplug the oven from the electrical outlet and allow it to cool completely.
2. **Crumb Tray:** The crumb tray should be removed and cleaned regularly, ideally after each use, to prevent the buildup of crumbs and grease, which can be a fire hazard. Slide out the tray, discard crumbs, and wash with warm, soapy water. Rinse and dry thoroughly before replacing.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Do not use steel wool pads or abrasive cleaners on any part of the oven.
4. **Exterior:** Clean the exterior surface with a soft, damp cloth. Dry thoroughly. Do not use abrasive cleaners or metal scouring pads, as they may scratch the finish.
5. **Accessories:** The baking tray, oven rack, and broil rack can be washed in warm, soapy water or placed in the dishwasher. Ensure they are completely dry before storing or reinserting into the oven.
6. **Storage:** When not in use, store the oven in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked.

7. TROUBLESHOOTING

If you encounter any issues with your HENCKELS Convection Toaster Mini-Oven, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the plug is securely in the outlet. Check your household circuit breaker. Try another outlet.
Food is not cooking evenly.	Improper rack position; uneven food placement; convection fan off.	Adjust rack position for optimal cooking. Arrange food evenly on the tray. Ensure convection fan is on for even baking (if applicable to mode).
Smoke or burning smell during operation.	Food spills; crumb tray needs cleaning; first use burn-off.	Unplug and allow to cool. Clean any food spills inside. Empty and clean the crumb tray. A slight odor is normal during first use.
Handle gets hot.	Normal operation at high temperatures.	This is normal. Always use oven mitts or pot holders when opening the oven door or touching the handle during or immediately after cooking.
Digital display not working correctly.	Temporary electrical glitch.	Unplug the oven for 5 minutes, then plug it back in to reset the system. If the problem persists, contact customer support.

If the problem persists after trying these solutions, please contact HENCKELS customer support.

8. PRODUCT SPECIFICATIONS

Model Number: 36450-170

Brand: HENCKELS

Color: Silver

Material: Stainless Steel

Power/Wattage: 1800 watts

Voltage: 120V

Product Dimensions: 40D x 50W x 30H Centimeters (approximately 15.75D x 19.69W x 11.81H inches)

Item Weight: 6.88 kg (approximately 15.17 lbs)

Capacity: 6-slice bread capacity, fits 12-inch pizza

Cooking Modes: Bake, Broil, Pizza, Toast, Bagel, Warm

Temperature Control: Variable, 150°F - 500°F

Special Features: Digital controls, LED display, Convection control (On/Off), Toast quantity and shade control.



Figure 8.1: Product dimensions for the HENCKELS Convection Toaster Mini-Oven.

9. WARRANTY AND CUSTOMER SUPPORT

HENCKELS products are manufactured to the highest quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official HENCKELS website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

If you have any questions, require assistance, or need to report an issue with your HENCKELS Convection Toaster Mini-Oven, please contact HENCKELS customer service. Contact information can typically be found on the HENCKELS official website or on the product packaging.

When contacting support, please have your model number (36450-170) and purchase date ready.

