

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [SKMEI](#) /

› SKMEI Digital Sports Watch User Manual

## SKMEI 1688ABL

# SKMEI Digital Sports Watch User Manual

Model: 1688ABL

## INTRODUCTION

---

Thank you for choosing the SKMEI 1688 Digital Sports Watch. This watch combines analog and digital displays with multiple functions, designed for outdoor activities and daily wear. Please read this manual carefully to understand the watch's features and proper operation.

## SAFETY INFORMATION

---

- Do not operate buttons underwater.
- Avoid exposing the watch to extreme temperatures (hot or cold).
- Clean the watch with a soft cloth. Avoid chemical cleaners.
- While water-resistant to 50 meters, this watch is not suitable for diving.

## PACKAGE CONTENTS

---

- SKMEI 1688 Digital Sports Watch
- User Manual (this document)
- 1 C Battery (pre-installed)

## PRODUCT OVERVIEW

---

Familiarize yourself with the different parts and buttons of your SKMEI 1688 watch.



Figure 1: Front view of the SKMEI 1688 watch. This image displays the watch's face, showing both analog hands and the digital display. The watch features a blue camouflage pattern on its strap and case, with a black dial and silver accents. Buttons are visible on both sides of the watch case.



*Figure 2: Side view highlighting the watch buttons. This image provides a closer look at the buttons on the side of the watch, labeled "RESET" and "START", along with the crown for analog time adjustment. The textured surface of the buttons is visible.*



Figure 3: Rear view of the watch. This image shows the stainless steel back case of the watch, which is engraved with product information. It also highlights the connection points of the durable PU leather strap to the watch case.

### Button Functions:

- **LIGHT:** Activates the LED backlight.
- **MODE:** Cycles through different modes (Time, Alarm, Stopwatch).
- **START:** Used to start/stop functions in Stopwatch mode, or adjust values in setting mode.
- **RESET:** Used to reset functions in Stopwatch mode, or select items in setting mode.
- **Crown:** Used to set the analog time.

## SETUP

---

### Initial Setup:

1. Upon first use, ensure any plastic battery tab is removed from the crown.

2. Pull out the crown to set the analog time. Push it back in to start the analog movement.

### Setting Digital Time and Date:

1. From the normal time display, press the **MODE** button three times to enter setting mode. The seconds will flash.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are complete, press the **MODE** button to exit setting mode.

### 12/24 Hour Format:

In normal time display, press the **START** button to toggle between 12-hour (A/P indicator) and 24-hour formats.

## OPERATING INSTRUCTIONS

---

### Using the Stopwatch:

1. From normal time display, press the **MODE** button once to enter Stopwatch mode.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. Press **MODE** to return to normal time display.

### Setting the Alarm:

1. From normal time display, press the **MODE** button twice to enter Alarm mode.
2. Press **RESET** to select the hour or minute to set.
3. Use the **START** button to adjust the flashing value.
4. Press **MODE** to exit Alarm setting mode.
5. To turn the alarm ON/OFF, in Alarm mode, press **START**. An alarm icon will appear/disappear.

### Using the LED Backlight:

Press the **LIGHT** button at any time to illuminate the digital display for a few seconds, improving visibility in low-light conditions.

## MAINTENANCE

---

### Cleaning Your Watch:

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

### Water Resistance:

The SKMEI 1688 watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for daily use, hand washing, rain, and short periods of swimming or showering. **Do not press any buttons while the watch is wet or submerged.** This watch is not designed for diving or high-pressure water activities.

### Battery Replacement:

The watch uses a C battery. When the display dims or functions become erratic, it may be time to replace the battery.

Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. Improper battery replacement can compromise the watch's water resistance.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown back in; replace battery if needed.
Buttons are unresponsive.	Watch is wet; internal malfunction.	Ensure watch is dry before pressing buttons. If issue persists, contact support.
Water inside the watch.	Buttons pressed underwater; seal compromised.	Stop using the watch immediately and seek professional repair to prevent further damage.

## SPECIFICATIONS

---



Figure 4: Watch dimensions and material details. This diagram illustrates key measurements such as case height (56mm), strap/lug width (22mm), case width (51mm), and case thickness (20mm). It also confirms the strap material as PU Leather.

Feature	Detail
Model Number	1688ABL
Display Type	Analog-Digital
Movement Type	Quartz
Case Material	Plastic (ABS-PU)
Strap Material	Resin / PU Leather
Water Resistance	50 Meters (5 ATM)
Dial Width	51 mm
Case Thickness	20 mm
Strap Width	22 mm

Feature	Detail
Watch Length	275 mm
Weight	61 grams
Battery Type	1 C (included)

## WARRANTY AND SUPPORT

---

Your SKMEI 1688 Digital Sports Watch comes with a manufacturer's warranty covering manufacturing defects for 6 months from the date of purchase.

For customer service and support regarding manufacturing defects or operational issues, please contact:

**Phone:** 1800 889 6251

Please have your purchase receipt and watch model number (1688ABL) ready when contacting support.

This warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.