

[Manuals.plus](#) /

› [WilTec](#) /

› WilTec Non-woven Dust Bag Instruction Manual

WilTec 61542-01

WilTec Non-woven Dust Bag Instruction Manual

Model: 61542-01

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your WilTec Non-woven Dust Bag. This filter bag is designed to be a perfect complement to your dry vacuum cleaner, ensuring efficient dust collection.

Important Note: This non-woven filter bag is intended for dry vacuuming only. It is not suitable for wet vacuuming or for collecting mud or liquids.

Key Features:

- Designed for dry vacuum cleaners.
- Constructed from durable non-woven material.
- Dimensions (Width x Height): 465 x 395 mm.
- Capacity: 25 liters.
- Compatible with WilTec vacuum cleaners, specifically item number 61542.



Figure 1: Overview of the WilTec 25L Non-woven Dust Bag. This image shows the full dust bag, highlighting its grey non-woven material and general shape, ready for installation into a compatible vacuum cleaner.

SETUP AND INSTALLATION

Proper installation of the dust bag is crucial for optimal performance and to prevent dust leakage. Follow these steps to install the non-woven dust bag into your compatible vacuum cleaner:

1. **Prepare the Vacuum Cleaner:** Ensure your vacuum cleaner is unplugged from the power source before beginning installation. Open the vacuum cleaner's housing or compartment where the dust bag is typically located.
2. **Remove Old Bag (if applicable):** If there is an old dust bag, carefully remove it, ensuring to seal any openings to prevent dust from escaping. Dispose of the old bag responsibly.
3. **Insert New Dust Bag:** Take the new WilTec non-woven dust bag. Locate the opening of the bag, which typically has a flexible collar or cardboard flange. Align this opening with the inlet nozzle inside your vacuum cleaner's dust compartment.
4. **Secure the Bag:** Push the bag's opening firmly onto the inlet nozzle until it is securely seated. Ensure there are no gaps where dust could escape. The bag should unfold inside the compartment without being crumpled or obstructing the air flow.
5. **Close Compartment:** Carefully close the vacuum cleaner's dust compartment lid or housing, ensuring it latches securely. Do not force it if there is resistance; re-check the bag's positioning.



Figure 2: Detail of the dust bag's opening. This image provides a close-up view of the elasticized opening of the dust bag, which is designed to fit snugly onto the vacuum cleaner's intake port, ensuring a secure seal during operation.

OPERATING INSTRUCTIONS

Once the dust bag is correctly installed, your vacuum cleaner is ready for operation. Remember to only use this bag for dry vacuuming tasks.

- **Power On:** Plug in your vacuum cleaner and turn it on according to its manufacturer's instructions.
- **Vacuuming:** Proceed with your dry vacuuming tasks as usual. The non-woven material of the bag is designed to efficiently capture fine dust particles.
- **Monitor Performance:** Pay attention to the vacuum cleaner's suction power. A decrease in suction often indicates that the dust bag is full and needs to be replaced.
- **Avoid Liquids:** Under no circumstances should this dust bag be used for vacuuming liquids, damp debris, or mud. Doing so will damage the bag and could harm your vacuum cleaner.

MAINTENANCE AND REPLACEMENT

The WilTec non-woven dust bag is a disposable item and cannot be cleaned or reused. Regular replacement is essential for maintaining your vacuum cleaner's efficiency and hygiene.

- **When to Replace:** Replace the dust bag when suction power noticeably decreases, or when the bag appears full. The frequency of replacement depends on usage and the type of debris collected.
- **Disposal:** To replace, unplug the vacuum cleaner. Open the dust compartment. Carefully remove the full dust bag, sealing its opening if possible to contain dust. Dispose of the used bag in accordance with local waste disposal regulations.
- **Install New Bag:** Follow the "Setup and Installation" steps to insert a new WilTec non-woven dust bag.

TROUBLESHOOTING

If you encounter issues while using the dust bag, consider the following common solutions:

- **Reduced Suction Power:**
 - Check if the dust bag is full. If so, replace it.
 - Ensure the dust bag is correctly installed and securely sealed to the inlet nozzle.
 - Inspect the vacuum cleaner's hoses and filters for blockages.
- **Dust Leaking from Vacuum Cleaner:**
 - Verify that the dust bag is properly seated and sealed.
 - Check if the dust bag is damaged (e.g., a tear). Replace if damaged.
 - Ensure the vacuum cleaner's compartment lid is fully closed and latched.
- **Bag Does Not Fit:**
 - Confirm that you have the correct model of dust bag for your vacuum cleaner. This bag is compatible with WilTec item number 61542.
 - Ensure the bag is not crumpled or folded incorrectly inside the compartment.

PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	WilTec
Item Model Number	61542-01
Material	Non-woven
Dimensions (W x H)	465 x 395 mm
Capacity	25 Liters
Compatible Devices	Vacuum Cleaner (specifically WilTec item 61542)
ASIN	B08GDKDJYB
Manufacturer	WilTec

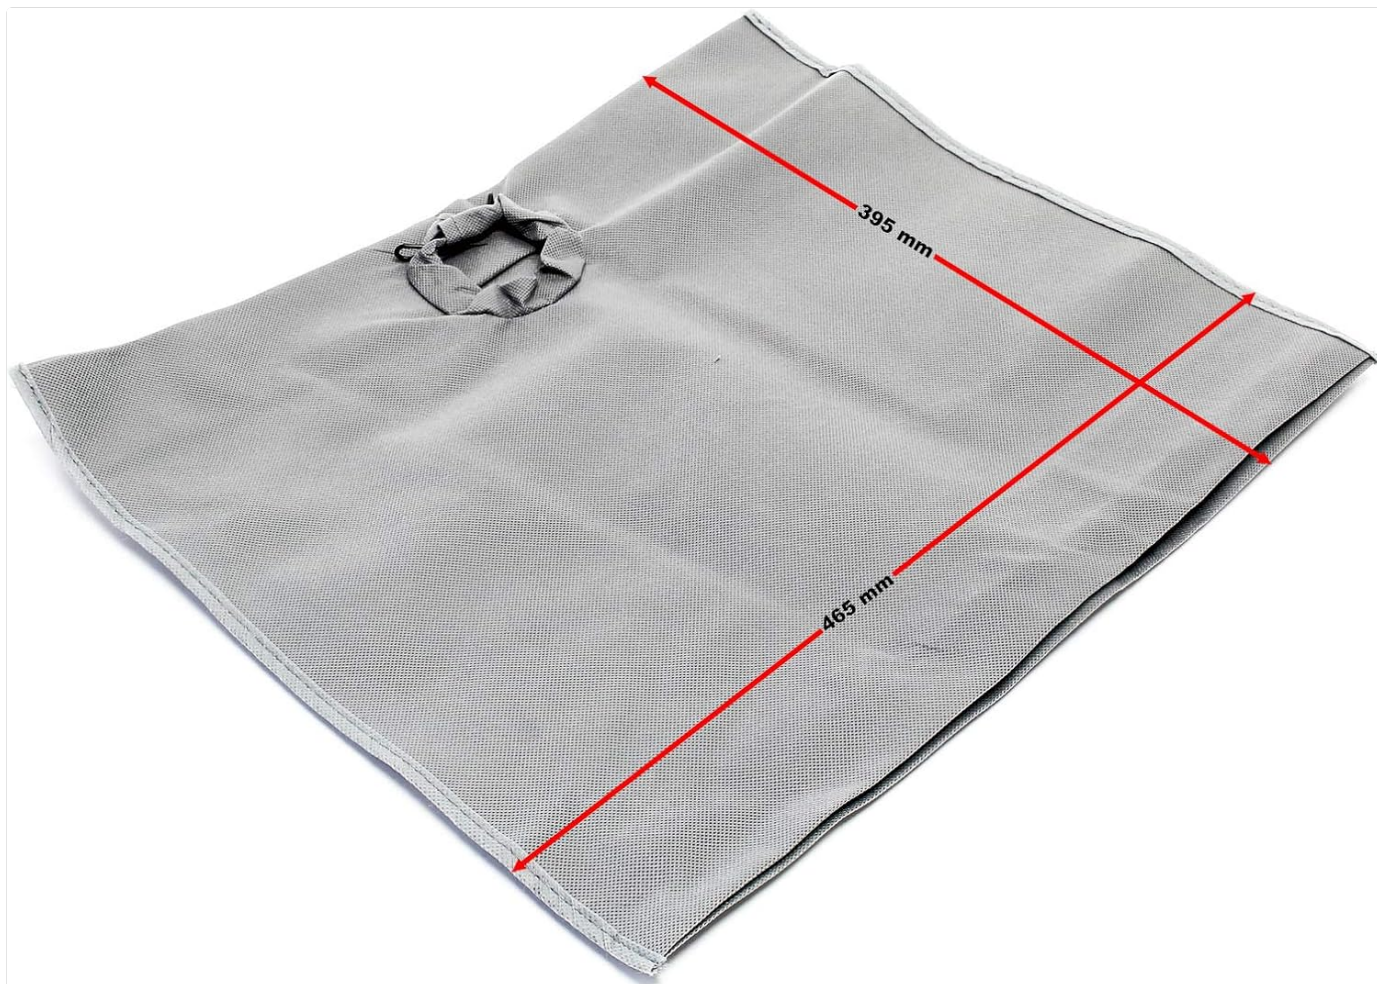


Figure 3: WilTec Dust Bag with indicated dimensions. This image clearly shows the width (465 mm) and height (395 mm) of the dust bag, providing visual confirmation of its size for compatibility checks.

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for this WilTec Non-woven Dust Bag is not available in the provided product data. For warranty claims or technical assistance, please refer to the documentation provided with your WilTec vacuum cleaner or visit the official WilTec website.

For general inquiries, you may visit the [WilTec Brand Store on Amazon](#).

© 2024 WilTec. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08GDKDJYB>

More documents and user manuals: <https://manuals.plus/>