

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Navaris](#) /

› [Navaris Double Induction Cooktop User Manual](#)

## Navaris B08GG2CPRN

# Navaris Double Induction Cooktop User Manual

Model: B08GG2CPRN

Brand: Navaris

## INTRODUCTION

Thank you for choosing the Navaris Double Induction Cooktop. This portable dual countertop electric stove burner is designed for efficient and convenient cooking. Please read this manual thoroughly before use to ensure safe and optimal operation of your appliance.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to persons or property.

- Ensure the surface remains hot after use. Do not touch immediately after cooking.

## PACKAGE CONTENTS

- 1x Navaris Double Induction Cooktop
- User Manual

## PRODUCT OVERVIEW



The Navaris Double Induction Cooktop features two independent cooking zones, each with its own control panel. The sleek black crystal plate design integrates seamlessly into any kitchen.



## Touch screen control

The intuitive touch screen control panel allows for easy adjustment of heat levels and timer settings.



SURFACE REMAINS HOT AFTER USE. DO NOT TOUCH.



Child safety lock



10 heating levels



Timer function  
1-180min



Automatic  
switch off

Key features include a child safety lock, 10 heating levels, a timer function (1-180 minutes), and automatic switch-off for enhanced safety and convenience.

## SETUP

1. Unpack the cooktop and all accessories.
2. Place the cooktop on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
3. Plug the power cord into a standard electrical outlet.
4. Ensure the cooktop is clean and free of any debris before first use.

## OPERATING INSTRUCTIONS

### Powering On/Off

Press the **Power** button  to turn the cooktop on. The display will light up. Press the **Power** button again to turn it off.

## Heat Level Adjustment

After placing a suitable pot or pan on the cooking zone, press the **+** or **-** buttons to adjust the heat level. The cooktop offers 10 levels of heat. The display will show the current heat setting.

## Timer Function

To set the timer, press the **Timer** button (🕒). Use the **+** or **-** buttons to adjust the cooking time from 1 minute to 3 hours. The cooktop will automatically switch off once the set time has elapsed.

## Child Safety Lock

To activate the child safety lock, press and hold the **Lock** button (🔒) for a few seconds until the lock indicator lights up. This prevents accidental changes to settings. To deactivate, press and hold the **Lock** button again.

## Suitable Cookware

Induction cooktops require cookware with a magnetic base. Suitable materials include cast iron, enameled cast iron, and stainless steel. Cookware should have a diameter between 5 inches (12 cm) and 10 inches (26 cm) for optimal performance.



## FOR INDUCTION-COMPATIBLE COOKWARE

Cookware must have a magnetic base



Cast iron



Enamelled  
cast iron



Stainless  
steel

An E01 error code means:

1. No cookware is detected
2. Cookware used is not suitable



12 cm  
(4 ¾")

Suitable Diameter for Cookware

26 cm  
(10 ¼")

Always use induction-compatible cookware. If an E0 error code appears, it indicates either no cookware is detected or the cookware used is not suitable.



min 4.7"



max 10.2"



The cooktop measures approximately 60 cm (23.62 inches) in length, 36 cm (14.17 inches) in width, and 6.2 cm (2.44 inches) in height. Recommended cookware diameter is between 4.7 inches (min) and 10.2 inches (max).

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your induction cooktop.

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the glass surface with a soft, damp cloth and mild detergent. Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- For stubborn stains, a ceramic cooktop cleaner can be used. Follow the cleaner's instructions.
- Do not immerse the cooktop in water or any other liquid.
- Keep the ventilation openings clear of dust and debris.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not properly plugged in.	Check if the power cord is securely plugged into a working outlet. Check circuit breaker.
"E0" error code displayed.	No cookware detected or unsuitable cookware.	Ensure an induction-compatible pot/pan is placed correctly on the cooking zone. Verify cookware material and size.
Cooktop stops heating during operation.	Overheating protection activated; timer elapsed.	Remove cookware and allow the unit to cool down. Check if the timer has reached zero.
Unusual noise during operation.	Normal fan operation; resonance from cookware.	A slight humming sound from the fan is normal. Some cookware may produce a faint buzzing sound due to induction. This is not a defect.

## SPECIFICATIONS

**Brand:** Navaris

**Model:** B08GG2CPRN

**Color:** Black

**Material:** Black crystal plate, toughened glass

**Heating Elements:** 2

**Product Dimensions (L x W x H):** 24" x 14" x 3" (60 x 36 x 7 cm)

**Wattage:** 1800 watts

**Controls Type:** Touch

**Burner Type:** Sealed

**Power Source:** AC

**Item Weight:** 13.24 pounds (6.02 Kilograms)

**Country of Origin:** China

## PRODUCT VIDEO

Your browser does not support the video tag.

This video provides a visual overview of the Navaris Double Induction Cooktop, demonstrating its features and ease of use, including the touch screen controls and suitable cookware.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Navaris website. Keep your proof of purchase for any warranty claims.



