

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Roxel](#) /

› [Roxel RCD-S70BT Portable Boombox User Manual](#)

Roxel RC-S70BT

Roxel RCD-S70BT Portable Boombox User Manual

Brand: Roxel | Model: RC-S70BT

INTRODUCTION AND OVERVIEW

The Roxel RCD-S70BT Portable Boombox is a versatile audio system designed for both indoor and outdoor use. It features a CD player, FM radio, USB MP3 playback, 3.5mm AUX input, headphone jack, and wireless music streaming via Bluetooth. Its compact and lightweight design, coupled with the option for battery power, makes it highly portable.



Figure 1: Front view of the Roxel RCD-S70BT Portable Boombox with its remote control.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 Roxel Boombox (RCD-S70BT)

- 1 Power Cable
- 1 AUX Line
- 1 User Manual
- 1 Remote Control

PRODUCT FEATURES

- Lightweight and portable design with two powerful 2x4W audio speakers.
- Multiple playback options: Audio CD, USB MP3, Bluetooth, and 3.5mm AUX input.
- Built-in digital FM radio with auto scan and 20 station presets.
- Easy-to-operate 4-digit LCD display.
- Includes a remote control for convenient operation.
- Five EQ modes: ROCK, POP, FLAT, CLASS, JAZZ.
- Can be powered by AC voltage (220V/50Hz, 110V/60Hz) or 4 C batteries (not included).
- Features top-loading CD, USB port, AUX-in jack, and earphone jack.
- Electronic digital control buttons for last/previous track, volume, and function selection.
- Auto-stop and repeat play functions for CD/USB.

CONTROLS AND FUNCTIONS

Familiarize yourself with the main controls and ports on your Roxel Boombox:



Figure 2: Detailed view of the boombox front panel and included remote control.

- **POWER Button:** Turns the unit on or off.
- **VOLUME Knob:** Adjusts the audio output level.
- **FUN/EQ Button:** Switches between functions (CD, USB, AUX, BT, FM) and cycles through EQ modes (ROCK, POP, FLAT, CLASS, JAZZ).
- **PREV/TUN- Button:** Skips to the previous track/station or tunes down in FM mode.
- **NEXT/TUN+ Button:** Skips to the next track/station or tunes up in FM mode.
- **PLAY/PAUSE/SCAN Button:** Plays/pauses CD/USB playback, or initiates auto-scan in FM mode.
- **REP/MEM Button:** Activates repeat function for CD/USB, or saves/recalls radio presets.
- **USB Port:** For connecting USB flash drives for MP3/WMA playback.
- **AUX Input (3.5mm):** For connecting external audio devices.
- **Headphone Jack (3.5mm):** For private listening.
- **LED Display:** Shows current mode, track number, time, and FM frequency.
- **FM Antenna:** Extendable antenna for FM radio reception.

SETUP

Powering the Unit

The Roxel Boombox can be powered by AC power or batteries.

- **AC Power:** Connect the supplied power cable to the AC input jack on the back of the unit and then to a standard wall outlet (220V/50Hz or 110V/60Hz).
- **Battery Power:** For portable use, open the battery compartment on the bottom of the unit and insert 4 x DC1.5V UM-2 (C size) batteries (not included), ensuring correct polarity.

Antenna Setup

For optimal FM radio reception, fully extend the telescopic FM antenna located on the back of the unit. Adjust its position for the best signal.

OPERATING INSTRUCTIONS

General Operation

- **Power On/Off:** Press the **POWER** button to turn the unit on or off.
- **Volume Adjustment:** Rotate the **VOLUME** knob clockwise to increase volume and counter-clockwise to decrease.
- **Function Selection:** Press the **FUN/EQ** button repeatedly to cycle through modes: CD, USB, AUX, BT (Bluetooth), FM.

CD Playback

1. Open the CD compartment lid on top of the unit.
2. Place a CD (CD-R/CD-RW compatible) with the label side facing up.
3. Close the CD compartment lid.
4. Press the **FUN/EQ** button until "CD" mode is selected. The CD will begin playing automatically.
5. Press **PLAY/PAUSE** to pause or resume playback.
6. Press **PREV/TUN-** or **NEXT/TUN+** to skip tracks. Hold to fast forward/rewind.
7. Press **REP/MEM** repeatedly to select repeat modes (e.g., repeat one track, repeat all).

USB MP3/WMA Playback

1. Insert a USB flash drive into the USB port on the front of the unit.
2. Press the **FUN/EQ** button until "USB" mode is selected. Playback will start automatically.
3. Use **PLAY/PAUSE**, **PREV/TUN-**, **NEXT/TUN+**, and **REP/MEM** buttons as with CD playback.
4. Press **FUN/EQ** (after selecting USB mode) to cycle through EQ modes: ROCK, POP, FLAT, CLASS, JAZZ.

FM Radio Operation

1. Extend the FM antenna.
2. Press the **FUN/EQ** button until "FM" mode is selected.
3. **Auto Scan:** Press and hold the **PLAY/PAUSE/SCAN** button to automatically scan and save available FM stations. The unit can store up to 20 stations.
4. **Manual Tuning:** Briefly press **PREV/TUN-** or **NEXT/TUN+** to fine-tune the frequency.
5. **Recall Presets:** Briefly press **REP/MEM** to cycle through saved preset stations.

AUX Input

1. Connect one end of the supplied 3.5mm AUX cable to the AUX input jack on the boombox.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player).
3. Press the **FUN/EQ** button until "AUX" mode is selected.
4. Control playback and volume from your external device.

Bluetooth Wireless Streaming

1. Press the **FUN/EQ** button until "BT" mode is selected. The display will show "BT" and flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "Roxel RCD-S70BT" from the list. Once paired, the "BT" indicator on the boombox display will stop flashing.
4. You can now play music from your device through the boombox. Use your device or the boombox controls (PLAY/PAUSE, PREV/NEXT) to manage playback.

MAINTENANCE

To ensure the longevity and optimal performance of your Roxel Boombox, follow these maintenance guidelines:

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **CD Lens Care:** If the CD lens gets dirty, use a standard CD lens cleaner. Do not touch the lens.
- **Battery Replacement:** If using batteries, replace all four batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the unit will not be used for an extended period.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Ventilation:** Ensure proper ventilation around the unit to prevent overheating. Do not block ventilation openings.

TROUBLESHOOTING

If you experience issues with your boombox, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cable not connected; Batteries depleted or incorrectly inserted.	Ensure AC cable is securely plugged in. If using batteries, check polarity and replace if necessary.

Problem	Possible Cause	Solution
No Sound	Volume too low; Incorrect function selected; Headphones connected.	Increase volume. Press FUN/EQ to select correct mode. Disconnect headphones.
CD Not Playing	CD inserted incorrectly; CD dirty/scratched; CD format not supported.	Ensure CD is label side up. Clean CD with a soft cloth. Use CD-R/CD-RW compatible discs.
Poor FM Reception	Antenna not extended or positioned correctly; Weak signal.	Fully extend and adjust the telescopic antenna. Try moving the unit to a different location.
Bluetooth Not Connecting	Boombox not in pairing mode; Device Bluetooth off; Device too far.	Ensure boombox is in BT mode and flashing. Turn device Bluetooth off/on. Move device closer (within 10m).

SPECIFICATIONS

Key technical specifications for the Roxel RCD-S70BT Boombox:

- Product Model:** Roxel RCD-S70BT
- Product Dimensions:** 29 x 23 x 13 cm (Width x Depth x Height) *(Note: Dimensions shown in product imagery are 29cm (width), 23cm (depth), and 13cm (height).)*
- Item Weight:** 1.71 Kilograms
- Power Output:** 2 x 4W speakers
- AC Voltage:** 220V/50Hz, 110V/60Hz
- DC Power:** 4 x DC1.5V UM-2 (C size) batteries (not included)
- Supported Disc Formats:** CD, CD-R, CD-RW
- Supported USB Formats:** MP3, WMA
- FM Radio:** Yes, with Auto Scan and 20 presets
- Connectivity:** Bluetooth, USB, 3.5mm AUX-in, 3.5mm Headphone Jack
- Display:** 4-digit LCD
- EQ Modes:** ROCK, POP, FLAT, CLASS, JAZZ

ROXEL BOOMBOX DIMENSIONS



Figure 3: Dimensions of the Roxel RCD-S70BT Boombox.

WARRANTY AND SUPPORT

The Roxel RCD-S70BT Boombox comes with a one-year warranty. In the event of a malfunction within 12 months of your purchase, Roxel will repair or replace the unit.

For further assistance or warranty claims, please refer to the contact information provided at the point of purchase or visit the official Roxel support website.

 <p>JVC PORTABLE CD PLAYER WITH CASSETTE DAB+ DSD/MP3/USB/BLUETOOTH RC-E561B</p>	<p><u>JVC RC-E561B-DAB Portable CD Player Instruction Manual</u> User manual for the JVC RC-E561B-DAB portable CD player, featuring cassette, CD, MP3, USB, DAB+, and Bluetooth. Includes operating instructions and features.</p>
 <p>ROXEL DAB RADIO RDR-80 PORTABLE WIRELESS SPEAKER USER MANUAL</p>	<p><u>Roxel RDR-80 DAB Radio Portable Wireless Speaker User Manual</u> Comprehensive user manual for the Roxel RDR-80 portable wireless speaker, detailing safety instructions, product specifications, functions, operation for DAB, FM, Bluetooth, USB, and SD card playback, including alarm and sleep timer settings.</p>
 <p>JVC PORTABLE CD PLAYER WITH CASSETTE DSD/MP3/USB/BLUETOOTH RC-E451B/RC-E451W</p>	<p><u>JVC RC-E451B/RC-E451W Portable CD Player Instruction Manual</u> Comprehensive instruction manual for the JVC RC-E451B and RC-E451W portable CD players, covering operation, features, maintenance, and specifications.</p>
 <p>Denon RC-1240 Remote Control Functions</p>	<p>A comprehensive guide to the functions and button mappings of the Denon RC-1240 remote control, detailing input sources, playback controls, navigation, and special features.</p>
 <p>Flyron Tech 433MHz 15 Key Remote MP3 Audio Player User's Manual Model No.: FN-T718-RC Version: V1.1</p>	<p><u>Flyron Tech 433MHz 15 Key Remote MP3 Audio Player User's Manual</u> User's manual for the Flyron Tech 433MHz 15 Key Remote MP3 Audio Player (Model No.: FN-T718-RC, Version: V1.1). Details features, technical parameters, interfaces, dimensions, wiring, and operation instructions.</p>
 <p>SAVIO Universal Remote Control User Manual (RC-05 to RC-19)</p>	<p>User manual for SAVIO Universal Remote Controls, models RC-05 through RC-19. Covers package contents, installation, safety guidelines, warranty, and responsible disposal of electronic equipment.</p>