

Imusa GAU-80313B

IMUSA USA 10-Speed Blender with Glass Jar

MODEL: GAU-80313B

1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the blender.
- To protect against electrical hazards, do not immerse the blender base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate the blender with the lid in place.
- This product is designed for use with USA voltage standard 120V. A voltage converter is required for use in other countries.

2. Product Overview and Components

The IMUSA 10-Speed Blender is designed for efficient blending, chopping, grinding, and pureeing. It features a durable glass jar and a powerful motor with multiple speed settings.



IMUSA



Look for IMUSAUSA:



Figure 1: Labeled components of the IMUSA 10-Speed Blender.

- **Blender Base:** Contains the motor and control panel.
- **Glass Jar (42 oz):** Sturdy container for ingredients.
- **Lid:** Secures the jar during operation.
- **Measuring Cup:** Integrated into the lid for adding ingredients during blending.
- **4-Plane Blades:** Stainless steel blades designed for various blending tasks.
- **Control Panel:** Features 10 speed settings and dedicated function buttons.

3. Setup

Before first use, wash all parts except the blender base in warm, soapy water. Rinse thoroughly and dry. The glass jar, lid, and measuring cup are not dishwasher safe.

1. Place the blender base on a clean, dry, and stable surface.
2. Ensure the blade assembly is securely seated in the bottom of the glass jar.
3. Place the glass jar onto the blender base, aligning the tabs on the jar with the slots on the base. Turn the jar clockwise until it locks into place.
4. Place the lid securely on the glass jar. Insert the measuring cup into the lid opening.
5. Plug the power cord into a 120V AC electrical outlet.





Figure 2: Assembled IMUSA 10-Speed Blender.

4. Operating Instructions

This blender offers 10 speeds and specialized functions for various blending needs.

1. Prepare ingredients and place them into the glass jar. Do not overfill past the maximum fill line.
2. Secure the lid and measuring cup onto the jar.
3. Select the desired speed or function button on the control panel. Available functions include:
 - **OFF:** Turns the blender off.
 - **LOW/HIGH:** General speed settings.
 - **PULSE:** Provides short bursts of power for controlled blending.
 - **GRATE:** For grating ingredients.
 - **BLEND:** Standard blending.
 - **SALSA:** Unique setting for making salsa.
 - **SMOOTHIE:** Optimized for making smoothies.
 - **ICE CRUSH:** For crushing ice.
 - **CLEAN:** For easy cleaning (see Cleaning section).
 - **PUREE:** For smooth purees.
 - **CHOP:** For chopping ingredients.

- **WHIP:** For whipping ingredients.
- **MIX:** For general mixing.

4. To stop blending, press the 'OFF' button or release the selected speed button.
5. Always unplug the blender after use.

Example Usage: Making an Avocado Smoothie

Watch this video for a demonstration on how to prepare an avocado smoothie using the IMUSA 10-Speed Blender.

Your browser does not support the video tag.

Video 1: Demonstration of making an avocado smoothie with the IMUSA 10-Speed Blender.

Using the Salsa Function

The dedicated 'SALSA' button is designed to achieve the perfect consistency for homemade salsa. Add your ingredients like tomatoes, onions, and peppers, then press the 'SALSA' button for quick and consistent results.



Figure 3: Blender prepared with salsa ingredients.

5. Cleaning and Maintenance

Proper cleaning ensures the longevity and performance of your blender.

1. Always unplug the blender before cleaning.
2. **For the Glass Jar and Blades:** Remove the jar from the base. Disassemble the lid and measuring cup. Wash the glass jar, lid, and measuring cup in warm, soapy water. Rinse thoroughly and dry. The glass jar and its components are **not dishwasher safe**. Exercise caution when handling the sharp blades.
3. **For the Blender Base:** Wipe the blender base with a damp cloth. Do not immerse the base in water or any other

liquid.

4. **Quick Clean Function:** For a quick clean, add warm water and a drop of dish soap to the empty jar, secure the lid, and press the 'CLEAN' button for a few seconds. Rinse thoroughly afterward.
5. Store the blender in a dry place. The power cord can be stored neatly in the base for convenience.

6. Troubleshooting

If your blender is not operating as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; jar not correctly seated.	Ensure the blender is securely plugged into a working outlet. Check that the glass jar is properly locked onto the base.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Use the 'PULSE' function for stubborn ingredients.
Blender stops during operation.	Overheating due to prolonged use or overloading.	Unplug the blender and let it cool down for at least 15 minutes. Reduce the load and try again.

If the problem persists after trying these solutions, please contact customer support.

7. Specifications

Detailed technical specifications for the IMUSA USA GAU-80313B Blender:

Brand	Imusa
Model Number	GAU-80313B
Color	Black
Capacity	42 oz (Glass Jar)
Product Dimensions (D x W x H)	8.25"D x 9.37"W x 13.25"H
Item Weight	2.7 Pounds
Power Source	Corded Electric
Wattage	350 watts
Voltage	120V (USA standard)
Number of Speeds	10
Control Type	Push Button (Multiple Speed Settings with Dedicated Function Control)
Material	Plastic Construction (Base), Glass (Container)
Blade Material	Stainless Steel

Dishwasher Safe	No (Jar and components)
Included Components	Blender, Cap, Jar
UPC	094046803138

13.25"





Figure 4: Blender dimensions.

8. Warranty and Support

This IMUSA blender comes with a **Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, service, or warranty claims, please contact IMUSA USA customer service. Contact information can typically be found on the product packaging or the official IMUSA USA website.

© 2024 IMUSA USA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

