

## Xbox 234-01249

# Xbox One S User Manual

Model: 234-01249

Brand: Xbox

## INTRODUCTION

The Xbox One S is a versatile gaming and entertainment console designed to deliver an immersive experience. It supports over 1,300 games, including major blockbusters and popular franchises, alongside exclusive Xbox titles. Enjoy built-in 4K Ultra HD Blu-ray playback and 4K video streaming for your favorite movies and shows. The console also features HDR technology for brilliant graphics, premium audio, and fast, reliable online gaming through Xbox Live.

Key features include:

- Enjoy over 100 games right out of the box with a 1 month Xbox Game Pass trial.
- Fully customizable back triggers that allow the user to program the PS4 Controller and map any of the input Buttons to the two extra triggers.



Xbox One S console and controller in retail packaging.

## SETUP GUIDE

### Unboxing and Initial Placement

Carefully remove all components from the packaging. Place your Xbox One S console on a flat, stable surface with adequate ventilation. Ensure that no vents are blocked to prevent overheating.



Front view of the Xbox One S console, showing the disc drive and power button.

### Connecting to Power and Display

1. Connect the power cable to the console's power port and then to a wall outlet.
2. Connect one end of the HDMI cable to the **HDMI OUT** port on the console and the other end to an HDMI input on your TV.



Rear view of the Xbox One S console, highlighting the HDMI, USB, and power ports.

## Controller Pairing

To pair your wireless controller:

1. Insert the included AA batteries into the controller.
2. Press the Xbox button on the controller to turn it on.
3. Press and hold the Pair button on the console (small circular button near the front USB port) until the Xbox logo on the console flashes.
4. Press and hold the Pair button on the controller (small circular button on the top edge, near the USB port) until the Xbox logo on the controller flashes.
5. Once both logos stop flashing and remain solid, the controller is paired.



Xbox One S console with its wireless controller.

## OPERATING YOUR CONSOLE

### Powering On/Off

To turn on the console, press the Xbox button on the front of the console or on your paired controller. To turn off, hold the Xbox button on the controller and select 'Turn console off' from the power options.

### Navigating the Dashboard

Use the controller's directional pad or left analog stick to navigate through the Xbox dashboard. The A button confirms selections, and the B button goes back. The Xbox button opens the Guide menu for quick access to friends, games, apps, and settings.

### Playing Games

Insert a game disc into the disc drive or select a digital game from your 'My games & apps' library. The console will automatically launch the game or prompt you to install it.

### Media Playback

The Xbox One S supports 4K Ultra HD Blu-ray discs. Insert a movie disc to begin playback. You can also

download and stream content from various entertainment apps available on the Microsoft Store.

## Online Gaming and Xbox Live

Connect your console to the internet via Wi-Fi or an Ethernet cable. Sign in with your Microsoft account to access Xbox Live, where you can play multiplayer games, chat with friends, and access online features.

## MAINTENANCE AND CARE

### Cleaning Your Console

Regularly dust the exterior of your console with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Keep the disc drive free of dust and debris.

### Ensuring Proper Ventilation

To maintain optimal performance and prevent overheating, ensure your Xbox One S is placed in an area with good airflow. Do not place it in an enclosed cabinet or on soft surfaces that could block the vents.

## TROUBLESHOOTING

### Common Issues

- **Console Not Powering On:** Check all power cable connections. Try a different power outlet.
- **No Display on TV:** Ensure the HDMI cable is securely connected to both the console and the TV. Try a different HDMI port on your TV or a different HDMI cable. Verify your TV input is set to the correct HDMI source.
- **Disc Read Errors:** Ensure the disc is clean and free of scratches. Try a different game disc.
- **Controller Not Connecting:** Re-attempt the pairing process as described in the Setup Guide. Ensure controller batteries are charged or replaced.

For persistent issues, try restarting your console by holding the Xbox button on the console for 10 seconds until it powers off, then power it back on.

## TECHNICAL SPECIFICATIONS

Feature	Detail
ASIN	B08GGDT47N
Release Date	September 25, 2020
Product Dimensions	17 x 4.5 x 11.5 inches
Item Weight	9.04 Pounds
Item Model Number	234-01249
Manufacturer	Microsoft
Batteries	2 AA batteries required (included)

## WARRANTY AND SUPPORT





## Product Warranty

Your Xbox One S console is covered by a manufacturer's limited warranty. Please refer to the warranty information provided with your purchase or visit the official Xbox support website for details on coverage and terms.

## Customer Support

For further assistance, technical support, or warranty claims, please visit the official Xbox Support website. You can find comprehensive FAQs, troubleshooting guides, and contact options there.

### Related Documents - 234-01249

	<p><a href="#">Xbox Video Game System Instruction Manual</a></p> <p>Official instruction manual for the Xbox Video Game System from Microsoft. Learn how to set up, connect, and safely operate your console, including details on controllers, peripherals, and system features.</p>
	<p><a href="#">Xbox One Product and Regulatory Guide, Limited Warranty &amp; Agreement</a></p> <p>Official product, safety, regulatory, and limited warranty information for the Microsoft Xbox One console and Kinect sensor, including setup, care, electrical safety, battery safety, and legal terms.</p>
	<p><a href="#">Xbox One S Setup Guide: Connect, Configure, and Get Started</a></p> <p>Comprehensive guide to setting up your new Xbox One S console. Learn how to unbox, connect to TV and internet, update the system, and configure initial settings for a seamless gaming experience.</p>
	<p><a href="#">Xbox One S Power Block Replacement Guide</a></p> <p>Step-by-step instructions for replacing the internal power block of an Xbox One S console, including necessary tools and parts.</p>



[Counter-Strike Xbox Game Manual: Controls, Gameplay, and Online Features](#)

Explore the world of Counter-Strike on Xbox with this comprehensive user manual. Learn about game controls, combat strategies, weapons, multiplayer modes like System Link and Xbox Live, and essential safety information.



[Xbox Controller Upgrade Instructions for Compatibility](#)

Detailed instructions and download link for upgrading third-party controllers to ensure compatibility with the latest Xbox system updates. Includes video tutorial.