

Techwood GR-200

Techwood 1500W Smokeless Indoor Electric Grill

Model: GR-200

Brand: Techwood

INTRODUCTION

Thank you for choosing the Techwood 1500W Smokeless Indoor Electric Grill. This appliance is designed to provide a convenient and healthy grilling experience indoors, minimizing smoke and odors. Its advanced features, including precise temperature control and a built-in fan, ensure evenly cooked, flavorful results. The non-stick plates and removable components make cleaning effortless.

This manual provides essential information for the safe and efficient operation, setup, maintenance, and troubleshooting of your new grill. Please read it thoroughly before first use and keep it for future reference.

PRODUCT OVERVIEW AND COMPONENTS

The Techwood Smokeless Indoor Electric Grill is designed for ease of use and efficient cooking. Familiarize yourself with its main components:

- Main Unit with Control Panel
- Removable Grill Plate (Non-Stick)
- Removable Drip Tray
- Heating Element
- Tempered Glass Lid
- Power Cord



Figure 1: Techwood Smokeless Indoor Electric Grill

**EFFORTLESSLY PREPARE
ALL YOUR FAVORITE FOODS
IN *ONE APPLIANCE***

INDOOR

OUTDOOR




Veggies



Fish



Steak

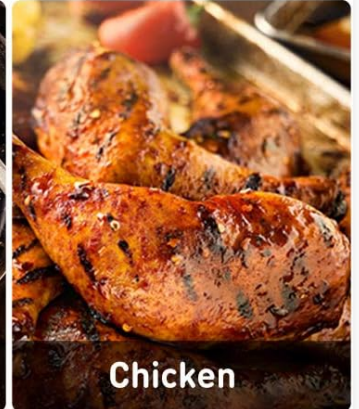

Chicken



Figure 2: Product Dimensions (11.1"D x 19.7"W x 4.7"H)

SETUP

Before first use, ensure all packaging materials are removed and all components are clean. Wash the grill plate, drip tray, and glass lid with warm, soapy water. Dry thoroughly.

1. Place the main unit on a stable, heat-resistant surface.
2. Insert the drip tray into the base of the main unit. Ensure it is properly seated.
3. Pour approximately 2 cups of water into the drip tray. This helps to reduce smoke and collect grease.
4. Place the heating element assembly securely into the main unit, ensuring it connects properly with the electrical contacts.
5. Position the non-stick grill plate on top of the heating element.
6. Place the tempered glass lid on top of the grill plate.

7. Connect the power cord to the grill's control panel and then plug it into a standard electrical outlet.

HOW TO GRILL?

GRILL IT UP IN 3 SIMPLE STEPS!



*Fill the **drip tray** with clean water.
It helps to keep Fumes and Odours inside*



*Select your desired temperature for preheating.
And don't forget to run the **Fan & Lid** to enjoy your BBQ inside home*



*Enjoy the smokeless indoor grilling experience inside the house.
You will also get the authentic **grill marks** on your favorite barbecue food*

OPERATING INSTRUCTIONS

Your Techwood grill is designed for simple and effective operation:

1. Ensure the grill is properly assembled and plugged in.
2. Press the **POWER** button to turn on the grill. The power indicator light will illuminate.
3. Press the **FAN** button to activate the smokeless fan. This is crucial for minimizing smoke during cooking.
4. Use the temperature control buttons (+ and -) to select your desired cooking temperature, ranging from 220°F to 450°F. The selected temperature will be displayed.
5. Allow the grill to preheat for 5-10 minutes until it reaches the set temperature. The indicator light may change or stop flashing when ready.
6. Carefully place your food onto the non-stick grill plate. For best results and to contain smoke, keep the tempered

glass lid on during cooking.

7. Monitor your food and adjust the temperature as needed. The grill maintains a constant temperature for even cooking.
8. Once cooking is complete, press the **POWER** button to turn off the grill and unplug it from the outlet.



Figure 3: Enjoy smokeless cooking indoors.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your grill. Always unplug the grill and allow it to cool completely before cleaning.

1. Remove the grill plate, heating element assembly, and drip tray from the main unit.
2. The non-stick grill plate and drip tray are dishwasher safe for easy cleaning. Alternatively, wash them with warm, soapy water and a soft sponge.

- 3. Wipe the heating element with a damp cloth. Do not immerse the heating element assembly or the main unit in water.
- 4. Clean the interior of the main unit and the exterior surfaces with a damp cloth. Ensure all parts are dry before reassembling or storing.
- 5. For stubborn residue on the grill plate, soak it in warm, soapy water for a few minutes before scrubbing gently. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.

TROUBLESHOOTING

If you encounter any issues with your Techwood grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; Power button not pressed; Power outage.	Ensure power cord is securely plugged into outlet and grill. Press Power button. Check household circuit breaker.
Grill not heating up.	Temperature not set; Heating element not properly connected.	Set desired temperature using +/- buttons. Ensure heating element is correctly seated and connected.
Excessive smoke during cooking.	Drip tray empty; Fan not activated; Too much grease/food residue.	Ensure drip tray has water. Press Fan button. Clean grill plate and drip tray regularly. Avoid excessive oil.
Food sticking to grill plate.	Insufficient preheating; Damaged non-stick coating.	Allow grill to preheat fully. Ensure non-stick coating is intact; use a small amount of cooking oil if needed.
Grill automatically shuts off.	Overheat protection activated.	Unplug the grill and let it cool down completely. Check for any blockages in the fan or vents.

SPECIFICATIONS

Feature	Specification
Brand	Techwood
Model Name	Indoor Smokeless Grill
Model Number	GR-200
Product Dimensions	11.1"D x 19.7"W x 4.7"H
Wattage	1500 watts
Temperature Control	220°F to 450°F
Special Features	Temperature control, Electric Smokeless, Non-stick coating
Included Components	Lid

Feature	Specification
Material	Glass (Lid)
Item Weight	14.34 pounds (6.52 Kilograms)
UPC	790728069068

WARRANTY AND SUPPORT

Techwood products are covered by Product Liability Insurance of the United States. For specific warranty details and terms, please refer to the full instruction manual included with your product or contact Techwood customer support.

For technical assistance, troubleshooting, or parts replacement, please contact Techwood customer support through their official website or the contact information provided in your product packaging.

© 2025 Techwood. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question