

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ECTY](#) /

› [ECTY LED Color Changing Rope Light User Manual](#)

## ECTY 1162

# ECTY LED Color Changing Rope Light User Manual

Model: 1162 | Brand: ECTY

## PRODUCT OVERVIEW

The ECTY LED Color Changing Rope Light is a versatile lighting solution designed for both indoor and outdoor use. This 18-foot rope light features 180 multicolor LEDs, offering a vibrant array of lighting options. It comes equipped with a remote control for convenient adjustment of its 8 distinct color settings and various animation modes.

- 180 multicolor LED lights for dynamic illumination.
- 8 distinct color settings to suit any mood or occasion.
- Convenient remote control included for easy operation.

## PACKAGE CONTENTS

Please ensure all items are present before proceeding with installation:

- 1 x 18 ft LED Rope Light
- 1 x Remote Control (CR2025 Battery Included)
- 1 x 2 ft Power Cord
- 16 x Mounting Clips and Screws
- 1 x Instruction Manual

## SETUP GUIDE

Follow these steps to set up your ECTY LED Color Changing Rope Light:

1. **Unpack the Rope Light:** Carefully remove the rope light and all accessories from the packaging.
2. **Uncoil Completely:** Before plugging in, fully uncoil the rope light to prevent overheating and ensure proper operation.
3. **Choose Location:** Select a suitable location for installation. While rated for indoor/outdoor use, ensure the environment is within the specified temperature range (greater than  $-18^{\circ}\text{C}$  /  $0^{\circ}\text{F}$ ).
4. **Mounting (Optional):** Use the provided mounting clips and screws to secure the rope light in your desired position. Ensure the light is securely fastened to prevent accidental falls.

5. **Connect Power:** Connect the 2 ft power cord to the rope light and then plug it into a standard 120V/60Hz electrical receptacle.



*This image displays the ECTY LED Color Changing Rope Light, coiled within its retail packaging. The remote control is also visible, highlighting the product's key features.*

## OPERATING INSTRUCTIONS

Your ECTY LED Rope Light is controlled by the included remote. Ensure the remote's battery (CR2025) is properly installed.

### Remote Control Functions:

- **Power On/Off:** Use the **Power** button to turn the lights on or off.
- **Color Selection:** Press the colored buttons (Red, Green, Blue, White, Yellow, Cyan, Purple, Orange) to select a solid color.
- **Brightness Adjustment:** Use the **Brightness Up/Down** buttons to increase or decrease the light intensity.

- **Animation Modes:** Cycle through various pre-programmed animation modes (e.g., Flash, Strobe, Fade, Smooth) using the dedicated mode buttons.
- **Speed Control:** Adjust the speed of animation modes using the **Speed Up/Down** buttons.



The back of the product packaging is shown, detailing the contents including the 18ft rope light, power cord, mounting clips, screws, and remote control. Important safety warnings and electrical specifications are also listed.

## MAINTENANCE

To ensure the longevity and optimal performance of your rope light, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the rope light with a soft, damp cloth to remove dust or dirt. Do not use harsh chemicals or abrasive cleaners. Ensure the light is unplugged before cleaning.
- **Storage:** When not in use for extended periods, coil the rope light neatly and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the rope light and power cord for any signs of damage, such as cuts, fraying, or exposed wires. Discontinue use if any damage is found.

## TROUBLESHOOTING

If you encounter issues with your ECTY LED Color Changing Rope Light, refer to the following common solutions:

Problem	Possible Cause / Solution
Lights do not turn on.	Ensure the power cord is securely plugged into a working outlet. Check if the remote control battery (CR2025) needs replacement. Verify the power button on the remote has been pressed.
Remote control is unresponsive.	Point the remote directly at the sensor on the rope light's power unit. Replace the CR2025 battery in the remote. Ensure there are no obstructions between the remote and the sensor.
Some LEDs are not lighting up.	This may indicate internal damage. Discontinue use and contact customer support.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	1162
Brand	ECTY
Light Type	LED Rope Light
Length	18 ft (5.48 m)
Number of LEDs	180
Color Settings	8 (Multicolor)
Power Source	Corded Electric
Voltage	120V / 60Hz
Wattage	18 watts
Controller Type	Remote Control
Remote Battery	CR2025 (Included)
Indoor/Outdoor Usage	Indoor
Material	Plastic
Item Weight	1.83 Pounds
Product Dimensions	4 x 9 x 8 inches
UPC	840072812206

*Note: This device is not intended for use with emergency exits. For use in environments greater than -18°C / 0°F.*

## WARRANTY AND SUPPORT

---

This ECTY LED Color Changing Rope Light comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact ECTY customer support. Refer to the product packaging or the manufacturer's website for the most current contact information.

### **Important Safety Information:**

- **Risk of Electric Shock:** Turn off power before inspection, installation, or removal.
- Do not open – no user serviceable parts inside.
- **Button Battery Warning:** This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.