

ZdalaMit NC306UH

ZdalaMit NC306UH Replacement Remote Control User Manual

For Sanyo Soundbar Models FWSB415E-A and FWSB415EA

1. INTRODUCTION

This manual provides comprehensive instructions for the ZdalaMit NC306UH replacement remote control. This remote is designed to function with specific Sanyo Soundbar models without requiring any programming. Please read this manual carefully to ensure proper use and to maximize the functionality of your remote control.

2. PACKAGE CONTENTS

- 1 x ZdalaMit NC306UH Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

3. SPECIFICATIONS

Model Name	NC306UH (also compatible with NC306 designation)
Brand	ZdalaMit
Compatible Devices	Sanyo Soundbar FWSB415E-A, FWSB415EA
Connectivity Technology	Infrared (IR)
Power Supply	2 x 1.5V AAA Alkaline Batteries
Number of Buttons	18
Maximum Range	Approximately 33 feet (10 meters)
Dimensions (L x W x H)	4.17" x 1.59" x 0.55" (10.6 cm x 4.0 cm x 1.4 cm)
Item Weight	40 Grams (excluding batteries)
Color	Black

4. SETUP: BATTERY INSTALLATION

The remote control requires two AAA alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Front view of the ZdalaMit NC306UH remote control, showing button layout. The battery compartment is on the reverse side.

Once batteries are installed, the remote control is ready for use. No additional programming or pairing is required for compatible Sanyo Soundbar models.

5. OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original Sanyo Soundbar remote. Point the remote directly at your soundbar's IR receiver for optimal performance.

5.1. Button Functions Overview



Image: Angled view of the ZdalaMit NC306UH remote control, highlighting the ergonomic design and button arrangement.

- **Power ()**: Turns the soundbar on or off.
- **VOL + / -**: Increases or decreases the volume level.

- **Mute ()**: Mutes or unmutes the sound.
- **Input Selection (LINE, OPT/COAX, USB, AUX, Bluetooth)**: Selects the audio input source for the soundbar.
- **PAIR**: Initiates Bluetooth pairing mode (if supported by your soundbar).
- **Sound Modes (STANDARD, SPORTS, MUSIC, MOVIE, NEWS, NIGHT, SURROUND)**: Switches between various preset audio equalization modes.
- **Playback Controls (Previous, Play/Pause, Next)**: Controls media playback when using compatible input sources like USB or Bluetooth.

Refer to your Sanyo Soundbar's original manual for detailed information on specific functions and their interaction with the soundbar.

6. COMPATIBILITY

This ZdalaMit NC306UH replacement remote control is specifically designed to be compatible with the following Sanyo Soundbar models:

- Sanyo FWSB415E-A Soundbar
- Sanyo FWSB415EA Soundbar

If your soundbar model is not listed, functionality may vary or not be supported.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure new AAA batteries are correctly installed with proper polarity (+/-).
 - Replace old batteries with fresh ones.
 - Check for any obstructions between the remote control and the soundbar's IR receiver.
 - Ensure you are within the maximum operating range (approximately 33 feet) and pointing the remote directly at the soundbar.
- **Specific buttons not working:**
 - Verify that the function you are trying to use is supported by your specific Sanyo Soundbar model.
 - Some functions may require the soundbar to be in a particular mode (e.g., Bluetooth pairing requires the soundbar to be in Bluetooth input mode).
- **Interference:**
 - Bright light sources, especially fluorescent lights or direct sunlight, can interfere with IR signals. Try operating the remote in a different lighting condition.
 - Other electronic devices emitting IR signals might cause interference.

8. MAINTENANCE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal components.

9. WARRANTY AND SUPPORT

This ZdalaMit remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims or technical support, please contact the seller or manufacturer through the platform where the product

was purchased. Please have your purchase details and product model number (NC306UH) available when contacting support.