

BRILONER 4075-054

BRILONER Model 4075-054 5-Light Height-Adjustable Pendant Lamp

Instruction Manual

[Safety Instructions](#)

[Package Contents](#)

[Specifications](#)

[Setup & Installation](#)

[Operating](#)

[Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Always disconnect power at the main fuse box before installation, maintenance, or bulb replacement.
- **Indoor Use Only:** This pendant lamp is rated IP20 and is designed exclusively for indoor use. Do not expose to moisture or direct water.
- **Bulb Requirements:** Use only E14 base bulbs with a maximum wattage of 25 watts per bulb. Exceeding this limit may cause overheating and damage to the fixture or create a fire hazard.
- **Handling:** Handle the lamp with care. Avoid dropping or subjecting it to strong impacts.
- **Cleaning:** Always disconnect power before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- 1 x BRILONER Model 4075-054 Pendant Lamp (with 5 fabric shades and wooden beam)
- Mounting hardware (screws, wall plugs)
- Instruction Manual

Note: Light bulbs (E14 base) are **not** included and must be purchased separately.

3. SPECIFICATIONS

Brand:	BRILONER
Model:	4075-054

Style:	5-Light Pendant, Retro/Vintage
Color:	Black, Wood, Grey (fabric shades)
Material:	Metal, Wood, Fabric
Dimensions (L x W x H):	1100 x 150 x 1360 mm (max height)
Height Adjustable:	Yes (max. 1360 mm)
Bulb Base:	5 x E14
Max Wattage per Bulb:	25 Watts
Voltage:	230V
Protection Class:	IP20 (Indoor Use Only)
Mounting Type:	Ceiling Mounting
Item Weight:	2.2 Kilograms



Figure 1: Product dimensions (1100mm length, 1360mm max height).

4. SETUP & INSTALLATION

Important: Ensure power is disconnected at the main circuit breaker before beginning installation. If you are unsure about electrical wiring, consult a qualified electrician.

1. Prepare the Mounting Surface:

Identify the desired location for the lamp on the ceiling. Ensure the ceiling can support the weight of the fixture (2.2 kg plus bulbs). Mark the drilling points for the mounting bracket.



Figure 2: Ceiling mounting plate.

2. Install the Mounting Bracket:

Drill holes at the marked points. Insert appropriate wall plugs (if necessary) and secure the mounting bracket to the ceiling using the provided screws.

3. Connect Electrical Wiring:

Connect the lamp's electrical wires to your household wiring according to local electrical codes. Ensure proper grounding. Secure all connections with wire nuts or terminal blocks.

4. Adjust Height (Pre-Mounting):

Before attaching the lamp body to the mounting bracket, adjust the suspension cables to your desired height. The lamp is height-adjustable up to a maximum of 1360 mm. The adjustment mechanism is typically located within the ceiling canopy or at the cable entry points. Press the small pin to release the cable and slide it to the desired length. Release the pin to lock it in place.



Figure 3: Height adjustment mechanism.

5. Attach the Lamp Body:

Carefully lift the lamp body and attach it to the installed mounting bracket. Secure it with the provided screws or fasteners.

6. Install Bulbs:

Screw five E14 base bulbs (max 25W each) into the lamp sockets. Do not overtighten.

7. Restore Power:

Once installation is complete and all connections are secure, restore power at the main circuit breaker.

5. OPERATING INSTRUCTIONS

The BRILONER Model 4075-054 pendant lamp is operated via a standard wall switch connected to its electrical circuit.

- **Turning On/Off:** Flip the wall switch to turn the lamp on or off.
- **Height Adjustment:** If further height adjustment is needed after initial installation, ensure power is disconnected before making adjustments to the suspension cables as described in the Setup section.

6. MAINTENANCE

• **Cleaning:**

Always disconnect power before cleaning. Use a soft, dry, lint-free cloth to wipe the metal and wood surfaces. For the fabric shades, gently dust with a soft brush or a dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the finish or fabric.

• **Bulb Replacement:**

Ensure the lamp is turned off and has cooled down before attempting to replace bulbs. Unscrew the old bulb and screw in a new E14 base bulb (max 25W). Do not touch new halogen bulbs with bare hands, as oils can shorten their lifespan.

• **Periodic Checks:**

Periodically check all connections and mounting points to ensure they remain secure. If any damage is observed, disconnect power and consult a qualified technician.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not light up.	No power to the circuit. Bulb is faulty or not screwed in properly. Loose wiring connection.	Check circuit breaker and wall switch. Ensure bulbs are correctly installed and functional. Replace if necessary. <i>(Disconnect power first)</i> Check wiring connections at the lamp and ceiling.
Light flickers.	Loose bulb. Incompatible or faulty bulb. Loose wiring connection.	Tighten bulbs. Replace bulbs with new, compatible ones. <i>(Disconnect power first)</i> Check wiring connections.
Lamp hangs unevenly.	Uneven cable adjustment. Mounting bracket not level or secure.	<i>(Disconnect power first)</i> Re-adjust suspension cables. <i>(Disconnect power first)</i> Re-check mounting bracket installation.

If the problem persists after trying these solutions, please contact customer support or a qualified electrician.

8. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the terms and conditions provided by your retailer or contact BRILONER customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: Briloner Leuchten

Model Number: 4075-054

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question