

Victrola VTA-72-BAM

Victrola Eastwood Bluetooth Record Player User Manual

Model: VTA-72-BAM | Brand: Victrola

INTRODUCTION

The Victrola Eastwood Bluetooth Record Player combines a sleek, classic design with modern features to deliver a premium audio experience. This versatile 3-speed turntable allows you to enjoy your vinyl collection at 33 1/3, 45, and 78 RPM. With Dual-Bluetooth connectivity, you can effortlessly stream music from your smart device to the turntable's built-in speakers, or play your records through any external Bluetooth speaker. The unit features a modern bamboo finish and is equipped with an Audio-Technica AT-3600LA cartridge for crisp, clear sound.

WHAT'S IN THE BOX

- Victrola Eastwood Record Player
- Removable Dust Cover
- Power Adapter
- 45 RPM Adapter
- User Manual

KEY FEATURES

- **3-Speed Turntable:** Plays 33 1/3, 45, and 78 RPM records.
- **Built-in Speakers:** Custom-tuned stereo speakers for clear audio.
- **Premium Cartridge:** Features an Audio-Technica AT-3600LA moving magnetic cartridge for enhanced clarity and reduced skips.
- **Dual Bluetooth Connectivity:** Stream music wirelessly from your smart device to the turntable, or stream vinyl playback to an external Bluetooth speaker.
- **Removable Dust Cover:** Protects your records and turntable from dust and grime.
- **Headphone Jack:** For private listening.

- **RCA Output:** Connects to external sound systems.

SETUP GUIDE

1. **Unpacking:** Carefully remove the turntable from its packaging. Retain all packaging materials for future transport or storage.
2. **Placement:** Place the turntable on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. **Dust Cover:** Attach the removable dust cover by aligning its hinges with the slots on the back of the turntable.
4. **Power Connection:** Connect the power adapter to the DC IN port on the back of the turntable, then plug it into a wall outlet.
5. **Cartridge Protection:** Before first use, gently remove the white needle guard from the stylus. Ensure the tonearm is released from its clip.



Image: The Victrola Eastwood turntable with a record playing, showcasing its sleek design and open dust cover.

OPERATING INSTRUCTIONS

Playing a Vinyl Record

1. **Power On:** Turn the volume knob clockwise to power on the unit.
2. **Select Mode:** Press the "PHONO" button to select the Phono mode.
3. **Place Record:** Place a vinyl record on the turntable platter. If playing a 45 RPM single, use the included 45 RPM adapter.
4. **Select Speed:** Set the speed switch (33 1/3, 45, or 78 RPM) to match your record.
5. **Lift Tonearm:** Gently lift the tonearm using the cue lever.
6. **Position Tonearm:** Move the tonearm over the desired starting track of the record.
7. **Lower Tonearm:** Slowly lower the tonearm onto the record using the cue lever. The record will begin to play.
8. **Adjust Volume:** Adjust the volume using the volume knob.
9. **End of Play:** The turntable will automatically stop spinning when the record finishes. Lift the tonearm and return it to the tonearm rest.

Bluetooth Input (Streaming from Device)

1. **Power On:** Turn the volume knob clockwise to power on the unit.
2. **Select Mode:** Press the "BT IN" button to select Bluetooth Input mode. The Bluetooth indicator light will flash.
3. **Pair Device:** Enable Bluetooth on your smart device and search for "Victrola Eastwood". Select it to pair. Once paired, the indicator light will stop flashing and remain solid.
4. **Play Music:** Begin playing music on your smart device. Audio will stream through the turntable's built-in speakers.

Bluetooth Output (Streaming Vinyl to External Speaker)

1. **Power On:** Ensure the turntable is powered on and in Phono mode.
2. **Activate Pairing:** Press and hold the "BT OUT" button for 3 seconds. The Bluetooth indicator light will flash rapidly, indicating pairing mode.
3. **External Speaker:** Put your external Bluetooth speaker into pairing mode.
4. **Connect:** The turntable will automatically search for and connect to the nearest Bluetooth speaker. Once connected, the indicator light will stop flashing and remain solid.
5. **Play Record:** Play a vinyl record as described above. The audio will now play through your external Bluetooth speaker.



Image: The Victrola Eastwood turntable positioned on a white table, demonstrating its aesthetic integration into a home environment.

MAINTENANCE

- **Cleaning the Dust Cover:** Wipe the dust cover gently with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Stylus:** Use a soft brush, gently brushing from back to front, to remove any dust or debris from the stylus.
- **Record Care:** Keep your records clean and free of dust. Store them vertically in their sleeves to prevent warping.
- **General Cleaning:** Use a soft, dry cloth to clean the surface of the turntable.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not active.	Ensure power adapter is securely connected and plugged into a working outlet.
No sound from speakers	Volume too low; incorrect mode selected; external speakers connected via RCA/Bluetooth.	Increase volume. Ensure correct mode (PHONO/BT IN) is selected. If using external speakers, check their connection and volume.
Record skips or sounds distorted	Dirty record; worn stylus; turntable not level.	Clean record. Check stylus for wear and replace if necessary. Ensure turntable is on a stable, level surface.
Bluetooth pairing issues	Device too far; incorrect pairing mode; interference.	Ensure device is within range. Confirm turntable is in BT IN or BT OUT pairing mode. Reduce interference from other devices.

SPECIFICATIONS

Feature	Detail
Product Dimensions	10.79 x 12.74 x 5.14 inches
Item Weight	4.9 pounds
Model Number	VTA-72-BAM
Manufacturer	Victrola
Connectivity Technology	Wireless, Wired
Maximum Rotational Speed	78 RPM
Special Feature	Built In Speaker, Dust Cover
Material	Bamboo
Color	Bamboo
On-mode power consumption	50 watts

WARRANTY AND SUPPORT

Victrola products are designed for quality and durability. For specific warranty information, please refer to the warranty card included with your product or visit the official Victrola website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Victrola customer service through their official channels. You can find more information and support on the [Victrola Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I am trying to connect my Victrola Eastwood (VTA-72-BAM) to an external speaker. I've followed the steps to power it on, select Phono mode, and press and hold the 'BT OUT' button for 3 seconds, but the Bluetooth indicator light is not flashing rapidly. How can I fix this or reset the device?

If the Bluetooth indicator light on your Victrola Eastwood (VTA-72-BAM) is not flashing rapidly after holding the BT OUT button for 3 seconds while in PHONO mode, please try the following troubleshooting steps:Check the...

[Read full answer](#)