

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Epson](#) /
- › [Epson Home Cinema 880 3LCD 1080p Projector Instruction Manual](#)

## Epson V11H979020

# Epson Home Cinema 880 3LCD 1080p Projector Instruction Manual

Model: V11H979020

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Epson Home Cinema 880 3LCD 1080p Projector. Please read these instructions thoroughly before using the product and retain them for future reference. The Epson Home Cinema 880 is designed to deliver a high-quality 1080p picture, offering a versatile viewing experience for home entertainment.

## WHAT'S IN THE BOX

---

Upon unpacking your Epson Home Cinema 880 projector, verify that all the following items are included:

- Epson Home Cinema 880 Projector
- Power Cable
- Remote Control with Batteries
- Quick Setup Guide

# In the box


## Home Cinema 880



Power cable



Remote control  
with batteries

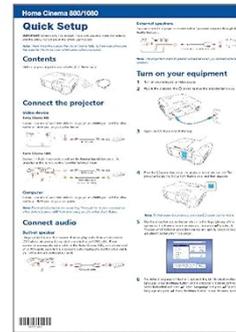

Quick Setup Guide

Image: The contents of the Epson Home Cinema 880 box, including the projector, power cable, remote control, and Quick Setup Guide. The projector dimensions are indicated as 3.6" H, 9.9" D, and 11.9" W.

## PRODUCT OVERVIEW

The Epson Home Cinema 880 projector features a compact design with intuitive controls and multiple connectivity options. Below are key views and features of the projector.



Image: Front view of the Epson Home Cinema 880 Projector, showing the lens, ventilation grilles, and the Epson logo. The lens cover slider is visible above the lens.



Image: Top view of the Epson Home Cinema 880 Projector, highlighting the control panel with buttons for power, menu navigation, source search, volume, and keystone correction. Status indicator lights for power, lamp, and temperature are also visible.



Image: Rear view of the Epson Home Cinema 880 Projector, displaying the various input/output ports including HDMI, USB-A, USB-B, Audio Out, and the power input. A built-in speaker grille is also visible.

## Official Product Overview Video

Video: An official overview of the Epson Home Cinema 880 3-Chip 3LCD Projector by Epson America Inc. This video highlights key features such as 1080p resolution, 3300 lumens brightness, 3-chip 3LCD technology for accurate color, and easy setup options.

Duration: 1 minute 20 seconds.

## SETUP

---

### Power Connection

1. Connect the power cable to the projector's power input port located at the rear.
2. Plug the other end of the power cable into a functional electrical outlet.

### HDMI Connection

1. Connect an HDMI cable from your video source (e.g., Blu-ray player, streaming device, gaming console) to the HDMI input port on the rear of the projector.
2. Ensure the connection is secure.

### Adjusting Projection Angle

The projector includes adjustable feet and keystone correction features to optimize the image angle.

1. **Front Foot Adjustment:** Locate the adjustable foot release button on the bottom of the projector. Press the button and extend the front foot to raise the front of the projector. Adjust as needed to achieve the desired vertical angle.
2. **Keystone Correction:** Use the keystone correction buttons on the control panel or remote control to square the image if it appears trapezoidal. The projector also features an auto picture skew sensor for automatic keystone correction.

## Focus Adjustment

To ensure a clear and sharp image:

1. Locate the focus ring around the projector lens.
2. Rotate the focus ring clockwise or counter-clockwise until the projected image appears sharp and clear on the screen.

## OPERATING INSTRUCTIONS

---

### Power On/Off

1. **Power On:** Press the **Power** button on the projector's control panel or the remote control. The power indicator light will illuminate.
2. **Power Off:** Press the **Power** button again. A confirmation message may appear; press the Power button a second time to confirm shutdown. The projector fan will continue to run briefly to cool down the lamp before turning off completely.

### Source Selection

To switch between different input sources:

1. Press the **Source Search** button on the control panel or remote control.
2. Use the arrow buttons to navigate through the available input sources (e.g., HDMI, USB).
3. Press **Enter** or the corresponding button to select the desired source.

### Color Modes

The projector offers four selectable color modes to optimize content for various viewing conditions:

- **Dynamic:** For bright environments, maximizing light output.
- **Bright Cinema:** Balances brightness and color accuracy for moderately lit rooms.
- **Cinema:** Optimized for dark room viewing, providing rich, accurate colors.
- **Natural:** Provides a natural color reproduction, suitable for general viewing.

To change the color mode, access the menu and navigate to the image settings.

## MAINTENANCE

---

### Filter Cleaning

Regular cleaning of the air filter is crucial for maintaining projector performance and lamp life.

1. Turn off the projector and unplug the power cable.
2. Locate the air filter cover on the side of the projector.
3. Open the cover and carefully remove the air filter.
4. Use a small vacuum cleaner or a soft brush to remove dust and debris from the filter. Do not use water or harsh chemicals.
5. Reinsert the clean filter and close the cover securely.

*Note:* The frequency of cleaning depends on the usage environment. A dusty environment may require more frequent cleaning.

## TROUBLESHOOTING

- **No Image:** Ensure the power cable is securely connected and the projector is powered on. Verify that the video source is correctly connected via HDMI and selected as the input. Check if the lens cover is open.
- **Blurry Image:** Adjust the focus ring around the lens until the image is sharp. Ensure the projector is placed at an appropriate distance from the screen.
- **Image is Trapezoidal:** Use the keystone correction feature (manual or auto) to square the image.
- **Overheating Warning:** Ensure the projector's ventilation vents are not blocked. Clean the air filter if it is dusty. Operate the projector in a well-ventilated area. Consider using Eco mode to reduce heat output.
- **No Sound:** Check the audio cable connection (if using external speakers). Ensure the projector's volume is not muted or set too low. Verify the audio output settings on your source device.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	15 x 14 x 6.25 inches
Item Weight	7.9 pounds
Item Model Number	V11H979020
Display Resolution	1920 x 1080 (1080p)
Color and White Brightness	3,300 Lumens
Contrast Ratio	Up to 16,000:1
Connectivity Technology	3.5mm Jack, HDMI, USB
Special Features	Built-In Speaker, Digital Keystone Correction
Recommended Uses	Gaming, Home Cinema

## WARRANTY AND SUPPORT

The Epson Home Cinema 880 projector comes with a standard 2-year limited warranty. This includes full-unit replacement and free technical phone support for the life of the product. For warranty claims or technical assistance, please contact Epson customer support.