

FEZIBO EU-Y-SDE-48G-DD

FEZIBO 48x24 Inch Height Adjustable Electric Standing Desk

Model: EU-Y-SDE-48G-DD

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FEZIBO 48 x 24 Inch Height Adjustable Electric Standing Desk, Model EU-Y-SDE-48G-DD. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image: The FEZIBO 48x24 Inch Electric Standing Desk in Rustic Brown, featuring a raised monitor shelf with two integrated drawers, and an electric height adjustment control panel.

SETUP AND ASSEMBLY

The desk package includes all necessary assembly tools and detailed instructions. Assembly is recommended for two people.

Required Tools:

- Basic Assembly Tools (included)
- Drill (recommended for faster assembly)

Included Components:

- Assembly Instructions with Diagram (1)
- Basic Assembly Tools (including spare parts)
- Desk Hooks (Set of 2)
- 2 Drawers
- Lockable Casters



Image: A close-up of the desk surface with an open instruction manual, indicating easy installation.

Assembly Tips:

- Assemble the desk on a stable, level surface.
- Follow the provided instructions and diagrams carefully.
- Ensure all connections are secure before use.

OPERATING INSTRUCTIONS

Height Adjustment:

The desk features an electric height adjustment system, allowing you to transition between sitting and standing positions. The height can be adjusted between 27.36 inches and 46.06 inches.

Standing and Sitting

Height Adjustment Range

28.35" - 46.45"



Image: Two desks demonstrating the height adjustment range, one in a lower sitting position and one in a higher standing position.

Control Panel Functions:

Setting Adjustment

Set and adjust custom height with ease



Up/Down

Memory height settings

Reset: Press and hold the DOWN button for 5 seconds

Image: A close-up of the desk's control panel, showing the digital height display, up/down arrows, and four memory preset buttons (1, 2, 3, 4).

- **Up/Down Arrows:** Use these buttons to manually adjust the desk height.
- **Memory Height Settings (1, 2, 3, 4):** Press and hold a numbered button (1-4) to save the current height. To recall a saved height, press the corresponding numbered button.
- **Reset:** If the desk encounters an issue or after a power outage, press and hold the **DOWN** button for 5 seconds to reset the system.

Anti-Collision Technology:

The desk is equipped with an anti-collision system. If the desk encounters an obstacle during height adjustment, it will automatically reverse its movement by 2cm to prevent potential damage or injury.

A Standing Desk Designed for Proper Ergonomic Height



Image: A desk chair positioned under the desk, illustrating how the anti-collision system prevents the desk from lowering onto the chair.

Child Lock Feature:

Child Collision Avoidance Setting



Image: A close-up of the control panel showing the 'LOC' indicator and instructions for locking/unlocking the desk.

- **To Lock:** Press and hold the "1" and "2" buttons simultaneously for 3 seconds. The display will show "LOC".
- **To Unlock:** Press and hold the "1" and "2" buttons simultaneously for 3 seconds again. The display will return to the current height.

MAINTENANCE

Cleaning:

- Wipe the desk surfaces with a dry cloth.
- Avoid using abrasive cleaners or harsh chemicals that may damage the finish.

General Care:

- Regularly check all screws and fasteners to ensure they are tight.
- Ensure the desk is not overloaded. The maximum weight recommendation is 176 pounds.

TROUBLESHOOTING

Motor Not Responding / Desk Not Moving:

- Check if the power cable is securely connected to both the desk and a working power outlet.
- Perform a system reset: Press and hold both the **UP** and **DOWN** buttons simultaneously for 5 seconds. Release the buttons when the green light flashes once. The desk should then begin its reset procedure.
- Ensure the child lock is not activated. If "LOC" is displayed, unlock the desk by pressing and holding buttons "1" and "2" for 3 seconds.

Desk Movement is Uneven or Jerky:

- Ensure the desk is not overloaded beyond the 176 lbs weight capacity.
- Verify that all assembly screws are tightened properly.
- Clear any obstructions around or under the desk that might impede movement.

Anti-Collision System Triggering Frequently:

- Check for any objects or furniture that might be in the path of the desk during height adjustment.
- Ensure the desk is on a stable and level surface.

SPECIFICATIONS

Feature	Detail
Brand	FEZIBO
Model Number	EU-Y-SDE-48G-DD
Product Dimensions (D x W x H)	24"D x 48"W x 27.1"H
Adjustable Height Range	27.36" - 46.06" (Minimum Height: 28 Inches, Maximum Height: 47.8 Inches)

Color	Rustic Brown (Top), Black (Base)
Top Material Type	Wood
Base Material	Alloy Steel
Lifting Mechanism	Electric
Maximum Weight Recommendation	176 Pounds
Number of Drawers	2 (Double Drawer)
Included Components	Assembly Instructions, Basic Assembly Tools, Desk Hooks (2), 2 Drawers, Lockable Casters
Required Assembly	Yes
Recommended People for Assembly	2
Special Features	Adjustable height, Ergonomic, Sturdy, Easy assembly, Electric standing desk, Anti-collision technology
UL Listed	Yes
Item Weight	20 Kilograms

WARRANTY INFORMATION

The FEZIBO 48x24 Inch Height Adjustable Electric Standing Desk comes with a**5-year manufacturer's limited warranty**. This warranty covers manufacturing defects and ensures the product meets quality standards under normal use.

For specific details regarding warranty coverage and claims, please refer to the documentation included with your product or contact customer support.

CUSTOMER SUPPORT

For any questions, assembly assistance, troubleshooting, or warranty concerns, please contact FEZIBO customer support.

Contact Information:

- **Phone:** +1 702-620-5156 (U.S.)
- **Hours:** Monday - Friday, 24/5

Please have your model number (EU-Y-SDE-48G-DD) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question