

Konnek Stein F23

Konnek Stein Security Camera User Manual

Model: F23

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your Konnek Stein 1080p HD Indoor Wireless Smart Home Camera. Please read this manual thoroughly before using the product to ensure proper functionality and safety. Keep this manual for future reference.

2. PRODUCT OVERVIEW

2.1 Key Features

- 1080P HD Video Quality:** Provides clear, high-definition video surveillance.
- Two-Way Audio:** Enables real-time voice intercom for smooth communication.
- Excellent Night Vision:** Offers 10m night vision with 3D noise reduction for clear images in low light.
- Smart Motion Detection:** Triggers real-time push notifications to your mobile phone upon detecting movement.
- Dual Storage Options:** Supports Cloud Storage (with free trial) and local storage via a built-in micro SD slot (card not included, up to 128GB).
- Versatile Mounting:** Can be placed on a table, shelf, or mounted on a wall/roof using screws, or magnetically attracted to iron surfaces.
- Alexa Assistant Compatibility:** Works with Alexa Assistant for integrated smart home control.

2.2 Product Components

Familiarize yourself with the camera's physical components.



Figure 2.2.1: Front view of the Konnek Stein Security Camera, showcasing its compact design and lens.

1080P Full HD & Wide Angle

360° tilt manual control easily



Figure 2.2.2: The camera demonstrating its 360-degree manual tilt capability for wide-angle viewing.

3. SETUP

3.1 Initial Power-On

1. Connect the camera to a power source using the provided power adapter.
2. Wait for the camera's indicator light to show it is ready for pairing (refer to the indicator light guide in the app for specific states).

3.2 App Installation and Account Creation

1. Download the official Konnek Stein camera application from your smartphone's app store (iOS or Android).
2. Open the app and create a new user account. Follow the on-screen prompts for registration.

3.3 Camera Pairing

1. In the app, select "Add Device" or the '+' icon.
2. Choose your camera model from the list.
3. Follow the app's instructions to connect the camera to your Wi-Fi network. This typically involves

scanning a QR code displayed on your phone with the camera's lens.

- Once connected, the camera's indicator light will change, and you will receive a confirmation in the app.

3.4 Mounting the Camera

The camera offers flexible mounting options:

- Tabletop/Shelf Placement:** Simply place the camera on a flat, stable surface.
- Wall/Ceiling Mounting:** Use the provided screws to secure the camera's base to a wall or ceiling. Ensure the mounting surface is sturdy.
- Magnetic Attraction:** The camera can be magnetically attached to suitable iron surfaces.

4. OPERATING INSTRUCTIONS

4.1 Live View and Remote Control

Access the live video feed and control camera functions through the mobile application.

- Open the Konnek Stein app and select your camera from the device list.
- The live video feed will appear. You can manually adjust the camera's viewing angle (360-degree tilt) via the app's controls.



Multi-Terminal And Multi-User Sharing

Support multi-terminal view on Android, iOS and share videos to other users.

Figure 4.1.1: The camera supports multi-terminal viewing and multi-user sharing, allowing access from various devices and sharing with other authorized users.

4.2 Two-Way Audio

Use the two-way audio feature to communicate through the camera.

1. While in live view, tap the microphone icon in the app.
2. Speak into your phone's microphone. Your voice will be transmitted through the camera's speaker.
3. To hear audio from the camera's environment, ensure the speaker icon in the app is enabled.



Figure 4.2.1: Illustration of the two-way audio feature, enabling communication between the user and the camera's environment.

4.3 Motion Detection and Alerts

Configure motion detection settings to receive alerts for activity.

1. Navigate to the camera settings within the app.
2. Locate the "Motion Detection" or "Alarm Settings" section.
3. Enable motion detection and adjust sensitivity levels as needed.
4. Ensure push notifications are enabled in your phone's settings for the Konnek Stein app to receive alerts.

real-time alerts.



Figure 4.3.1: The camera's smart motion detection system, highlighting its ability to identify and alert users to movement within its field of view.

4.4 Night Vision

The camera automatically switches to night vision mode in low-light conditions.

- The camera's infrared LEDs activate automatically when ambient light is insufficient.
- This provides clear black-and-white video up to 10 meters in complete darkness.



Day



Surveillance system works efficiently day and night



Night



Figure 4.4.1: Comparison of the camera's surveillance capabilities during day (color) and night (infrared black and white) conditions.

4.5 Storage Options (SD Card & Cloud)

Manage your video recordings using either a local SD card or cloud storage.

- **Micro SD Card:** Insert a micro SD card (up to 128GB, not included) into the camera's designated slot for local recording. Recordings can be accessed and managed via the app.
- **Cloud Storage:** The camera supports cloud storage services. Refer to the app for details on subscription plans and free trial availability.

SD Card & Cloud Storage

Support cloud service(30 days free trial) & SD card up to 128G(not included) to watch playback



Figure 4.5.1: Visual representation of the dual storage options: local micro SD card and cloud storage for video recordings.

5. MAINTENANCE

- **Cleaning:** Gently wipe the camera lens and body with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Placement:** Ensure the camera is placed in a stable environment, away from extreme temperatures, direct sunlight, and moisture.
- **Software Updates:** Regularly check the app for firmware updates to ensure optimal performance and security.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera offline/Cannot connect to Wi-Fi	Weak Wi-Fi signal; Incorrect Wi-Fi password; Router issues; Camera too far from router.	<ul style="list-style-type: none"> Ensure camera is within Wi-Fi range. Verify Wi-Fi password. Restart your Wi-Fi router. Reset the camera and attempt re-pairing.
No motion detection alerts	Motion detection disabled; Incorrect sensitivity settings; App notifications blocked.	<ul style="list-style-type: none"> Enable motion detection in app settings. Adjust sensitivity. Check phone's notification settings for the app.
Poor image quality at night	Infrared LEDs obstructed; Excessive ambient light interfering.	<ul style="list-style-type: none"> Ensure lens and IR LEDs are clean and unobstructed. Minimize strong light sources directly facing the camera at night.
SD card not recognized/recording	SD card not inserted correctly; Card corrupted; Card not formatted.	<ul style="list-style-type: none"> Reinsert the SD card. Format the SD card via the app (this will erase all data). Try a different compatible SD card.

7. SPECIFICATIONS

Feature	Detail
Model Number	F23
Video Capture Resolution	1080p HD
Indoor/Outdoor Usage	Indoor
Connectivity Technology	Wireless (Wi-Fi)
Power Source	Corded Electric
Two-Way Audio	Yes
Night Vision Range	10 meters
Storage Options	Cloud Storage, Micro SD Card (up to 128GB)
Motion Detection	Yes, with real-time alerts
Compatible Devices	Smartphone (iOS, Android), Amazon Alexa
Mounting Type	Wall Mount, Tabletop, Magnetic

Feature	Detail
Dimensions (L x W x H)	4.35 x 1.2 x 2.76 inches
Item Weight	13.1 ounces
Material	Iron
Color	Black

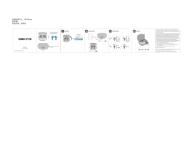
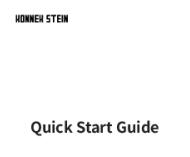
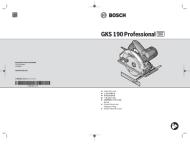
8. WARRANTY AND SUPPORT

For any questions or issues regarding your Konnek Stein Security Camera, please contact our customer support team. You can find the after-sales email address in the instruction leaflet included with your product or within the mobile application's help section.

For additional information, you may refer to the official User Guide (PDF) available online [Konnek Stein User Guide](#)

© 2023 Konnek Stein. All rights reserved.

Related Documents - F23

 <p>KONNEK STEIN QC21SE Indoor Security Camera</p>	<p>Konnek Stein QC21SE Indoor Security Camera Quick Start Guide</p> <p>A quick start guide for the Konnek Stein QC21SE Indoor Security Camera, covering product introduction, setup, app installation, device connection, app interface, installation, basic parameters, and important considerations.</p>
	<p>Konnek Stein ePRO-AE01 True Wireless Earbuds Quick Start Guide</p> <p>A concise guide to setting up and using your Konnek Stein ePRO-AE01 true wireless earbuds, including pairing, charging, controls, and reset instructions. Features FCC compliance details.</p>
 <p>KONNEK STEIN F23 Indoor Security Camera</p>	<p>Konnek Stein F23 Indoor Security Camera Quick Start Guide</p> <p>A quick start guide for the Konnek Stein F23 Indoor Security Camera, covering package contents, installation, app download, and basic interface explanations.</p>
	<p>Bosch GKS 190 Professional Circular Saw Operating Manual and Safety Instructions</p> <p>Comprehensive operating manual and safety guide for the Bosch GKS 190 Professional circular saw. Features include detailed instructions, technical specifications, and safety warnings for effective wood cutting.</p>

