

Canmore TW353

# Canmore TW353 GPS Golf Watch User Manual

Model: TW353 | Brand: Canmore

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

## PRODUCT OVERVIEW

The Canmore TW353 GPS Golf Watch is designed to provide golfers with essential course information quickly and accurately. This lightweight and easy-to-use device helps manage your game by displaying distances to the green, hazards, and tracking shot distances, all without complex setup.



Image: Front view of the Canmore TW353 GPS Golf Watch, displaying the time and GPS status. The watch features a black body and a textured black and grey wristband.

## SETUP GUIDE

### 1. Initial Charging

Before first use, fully charge your Canmore TW353 GPS Golf Watch. Connect the provided charging cable to the watch and a USB power source. A full charge ensures optimal performance and battery life.

# Long Battery Life



**Up to 60 days**  
(Stand by mode)

**Up to 11 hours**  
(GPS mode)

Image: Illustration showing the Canmore TW353 watch with a battery icon and a green battery bar extending from it, indicating long battery life. Text on the image states "Up to 60 days (Stand by mode)" and "Up to 11 hours (GPS mode)".

## 2. Course Data Update

The watch comes preloaded with over 41,000 golf courses worldwide. To ensure you have the most current course data, it is recommended to update the watch regularly. Updates are released bi-weekly and can be downloaded from the official Canmore website. Connect your watch to a Windows, Mac, or Linux computer to perform the update.



Image: A golfer standing on a golf course next to a golf bag, with text indicating "Preloaded 40,000+ courses" and a badge stating "Update Weekly". This highlights the extensive and regularly updated course database.

### 3. Powering On

Press and hold the power button (usually located on the side of the watch) until the screen illuminates. The watch will automatically begin searching for nearby golf courses once powered on.

## OPERATING INSTRUCTIONS

The Canmore TW353 is designed for ease of use, requiring minimal configuration to get started on the course.

### 1. Automatic Course and Hole Recognition

Upon powering on and acquiring a GPS signal, the watch will automatically detect your location and identify nearby golf courses. Once a course is selected or automatically detected, it will advance holes as you play.



Image: A graphic depicting two golf flags with an arrow pointing from one to the other, symbolizing the automatic hole advance feature of the watch.

### 2. Displaying Distances

The watch provides accurate distances to the front, middle, and back of the green. It also displays distances to various hazards on the course.

# From Guessing to Knowing

Every Information You Need



Score Card



Shot Distance



Hazard Distance



F/C/B of Green Distance



Auto Hole Advance

Image: The Canmore TW353 watch display showing a score of 3, distances (320, 258, 227), and icons representing Score Card, Shot Distance, Hazard Distance, Front/Center/Back of Green Distance, and Auto Hole Advance. This illustrates the comprehensive information available at a glance.

### 3. Shot Distance Measurement

To measure your shot distance, mark your starting point on the watch, walk to where your ball landed, and the watch will calculate the distance.

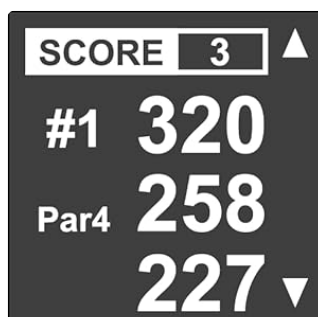


Image: A close-up view of the watch screen displaying "SHOT" and a numerical value of "120", indicating a measured shot distance.

## 4. Scorecard Functionality

Keep track of your score directly on the watch. The integrated scorecard allows you to input your strokes per hole, providing a convenient way to monitor your round.



Image: A detailed view of the watch screen showing "SCORE 3" at the top, followed by "#1", "Par4", and distances "320", "258", "227", illustrating the scorecard and distance display.

## 5. High Contrast Display

The monochrome white-on-black LCD screen with backlight ensures excellent readability even in bright sunlight or low-light conditions.



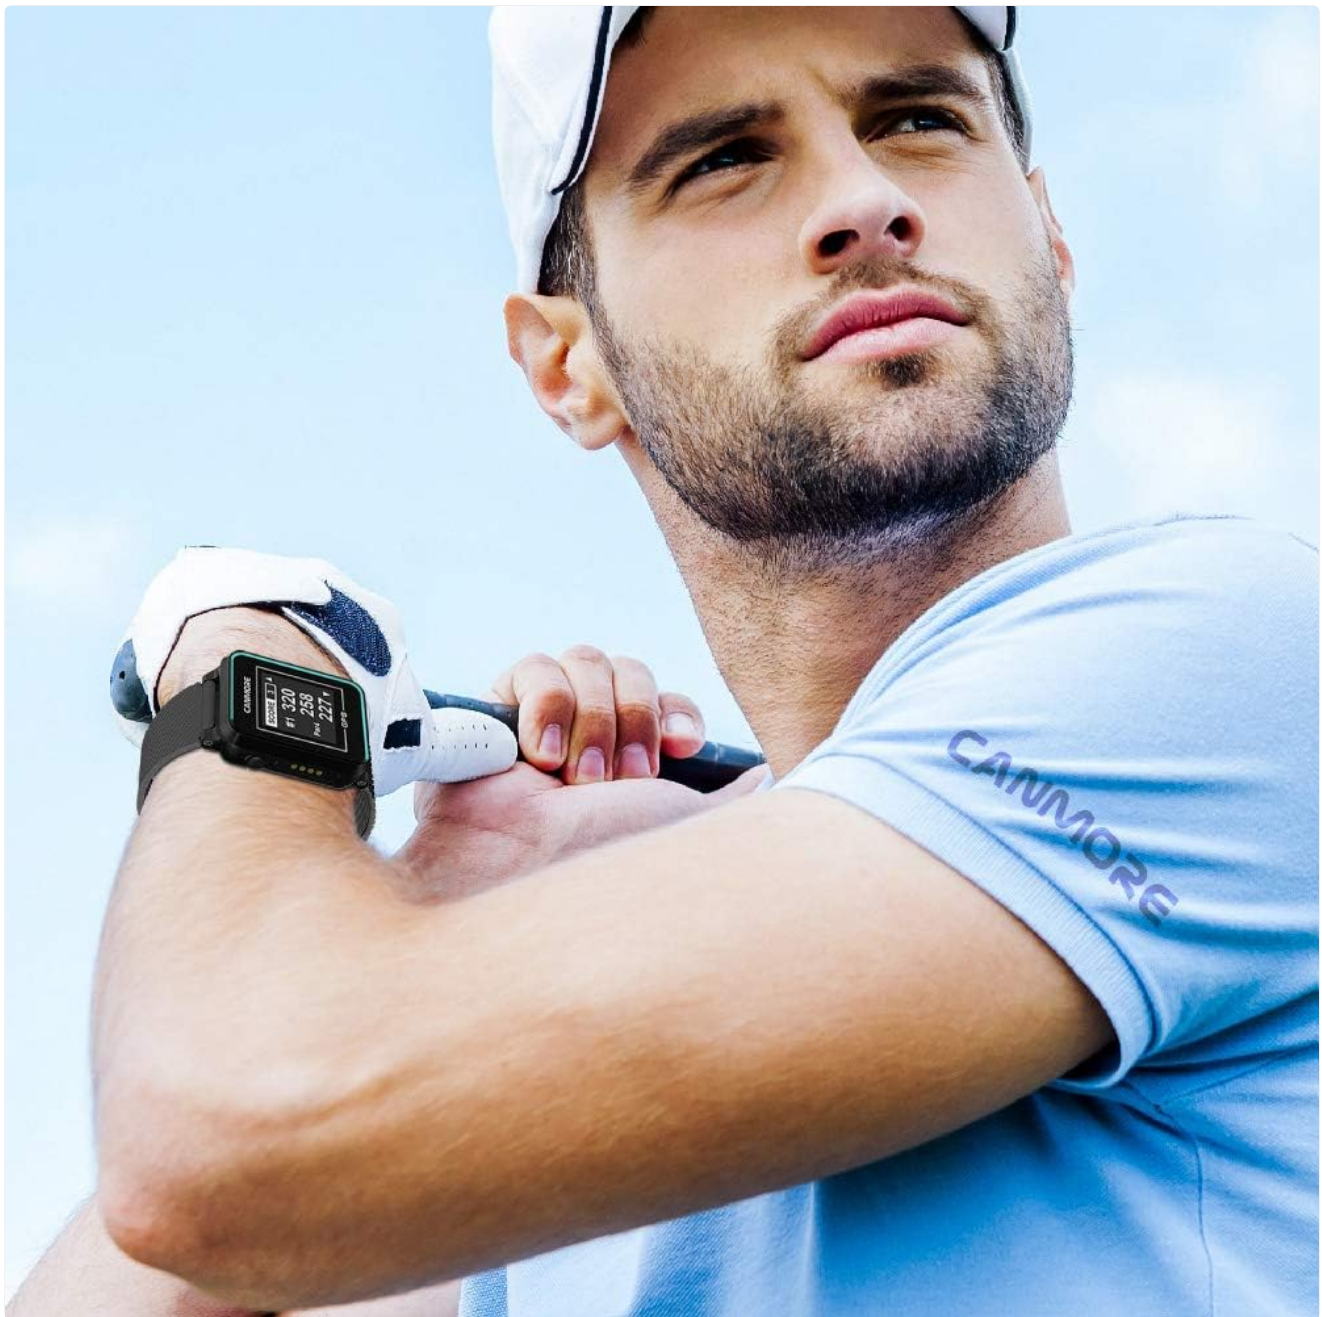


Image: The Canmore TW353 watch being worn outdoors, with sunlight shining on its display, demonstrating its high visibility under bright conditions. Text overlay reads "High Visibility Under Sunlight".

## MAINTENANCE

### 1. Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the screen or casing. The durable rubber strap is sweat-resistant and can be easily wiped clean.

### 2. Water Resistance

The Canmore TW353 is waterproof, making it suitable for use in various weather conditions on the golf course. However, it is not designed for prolonged submersion or diving.

### 3. Firmware Updates

Regular firmware updates are provided by Canmore to improve performance, add features, and ensure compatibility with the latest course data. Check the official Canmore website periodically for available updates and instructions on how to install them.

## TROUBLESHOOTING

If you encounter issues with your Canmore TW353 GPS Golf Watch, refer to the following common problems and solutions:

- **GPS Connection Issues:** Ensure you are in an open area with a clear view of the sky. Allow a few minutes for the watch to acquire a strong GPS signal. If problems persist, ensure your course data is up to date via the Canmore website.
- **Charging Problems:** Verify that the charging cable is securely connected to both the watch and the USB power source. Try a different USB port or power adapter. Ensure the charging contacts on the watch are clean and free of debris.
- **Device Not Turning On/Off:** Ensure the watch is sufficiently charged. If the device is unresponsive, try holding the power button for an extended period (e.g., 10-15 seconds) to force a restart.
- **Inaccurate Distances:** Confirm that the watch has a strong GPS signal. Ensure you have the latest course data installed. If playing on a newly designed or modified course, updates may be required.

For further assistance, please visit the official Canmore website or contact customer support.

## PRODUCT SPECIFICATIONS

Brand	Canmore
Model Name	TW353
Color	Black
Screen Type	LCD (High Contrast)
Connectivity Technology	USB
Mapping Type	Global (41,000+ preloaded courses)
Special Features	Waterproof, Automatic Hole Advance, Shot Distance Measurement, Scorecard
Battery Life	Up to 11 hours (GPS mode), Up to 60 days (Standby mode)
Dimensions (L x W x H)	5.5 x 4 x 1.5 cm
Weight	42 grams
Mounting Type	Wrist Mount
Included Components	CANMORE TW-353 Golf Watch, charging cable, user manual, quick start guide



# WARRANTY & SUPPORT

## Lifetime Service Commitment

Canmore offers a unique lifetime service commitment for the TW353 GPS Golf Watch. This includes:


- **Free Weekly Course Updates:** Access to free, regular updates for the extensive golf course database without any subscription fees.
- **Troubleshooting Support:** Assistance with common issues such as GPS connection, charging, and device operation.
- **Regular Firmware Updates:** Benefit from ongoing firmware improvements to enhance watch functionality and performance.

## Contact Support

For detailed support, the latest product information, and firmware downloads, please visit the official Canmore website: [www.canmore-sport.com](http://www.canmore-sport.com) (Note: Actual website URL may vary, this is a placeholder for demonstration).

© 2024 Canmore. All rights reserved.

### Documents - Canmore – TW353

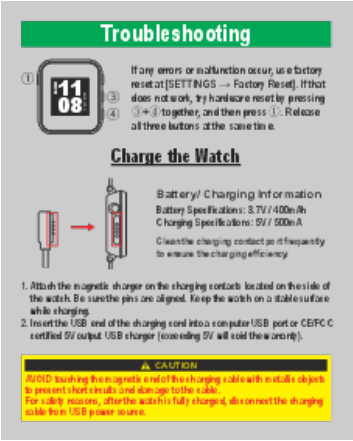

 
[pdf] Troubleshooting Guide Specifications Guide Warranty Accessories

Troubleshooting TW353 CANMORE Golf GPS Watch for Men and Women High Contrast LCD Display  
Free Update Over 40 000 Preloaded Courses Worldwide Lightweight Essential Accessory Golfers Black  
Orange TW 353O CA Guide B07Z3BQ5CC B08GLNNJ1F B09CKFK2X3 B07PCMQQ7L B07SZBLZ87  
B08GLNL5WB B07PBQTLYX 71A9X lXqML m media amazon images I |||

Troubleshooting If any errors or malfunction occur, use factory 11 08 SUN OCT 11  
reset at SETTINGS Factory Reset . If that does not work, try hardware reset by  
pressing together, and then press . Release all three buttons at the same time.  
Charge the Watch Battery/ Charging Informatio...

lang:en score:19 filesize: 158.07 K page\_count: 1 document date: 2021-09-14




	
LCD	Sharp transfective panel Black & White LCD
LCD Size	23.04 x 23.04 (H x W in mm)
Resolution	128 x 128 Pixels
Waterproof	IPX7
Backlight	Single led
Operating temperature	0°-40°C
Voltage	DC 5V
Battery	Chargeable 400mAh lithium battery
Battery life	Gold Mode : up to 12 hours / Time Mode : up to 60 day
Interface	USB
Charger	USB interface, 500mA, 3 hours completed
Size	55.5 x 45.5 x 22.5 (L x W x H in mm)
Weight	42g

[pdf] Specifications Accessories

Specification Sheet TW353 CANMORE Golf GPS Watch for Men and Women High Contrast LCD Display Free Update Over 40 000 Preloaded Courses Worldwide Lightweight Essential Accessory Golfers Black Orange TW 353O CA B07Z3BQ5CC B08GLNNJ1F B09CKFK2X3 B07PCMQQ7L B07SZBLZ87 B08GLNL5WB B07PBQTLTX 61fbjsUmRzL m media amazon images I |||


LCD LCD Size Resolution Waterproof Backlight Operating temperature Voltage Battery Battery life Interface Charger Size Weight Sharp transfective panel Black White LCD 23.04 x 23.04 H x W in mm 128 x 128 Pixels IPX7 Single level 0- 40C DC 5V Chargeable 400mAh lithium battery Golf Mode = up to... lang:en score:10 filesize: 124.51 K page\_count: 1 document date: 2021-09-13



**Troubleshooting**

If any errors or malfunctions occur, use factory reset. If that does not work try hardware reset.

Press **1** **4** together, and then press **1**. Release three buttons at same time.



**Charge the Watch**

Battery/ Charging Information  
Battery Specifications: 3.7V / 400mAh  
Charging Specifications: 5V / 500mA

Clean the charging contact periodically to ensure the charging efficiency.

1. Attach the magnetic charger on the charging contacts located at the bottom of the watch. Be sure the pins are aligned. Keep the watch on a stable surface while charging.

2. Insert the USB end of the charging cord into a computer USB port or CE/FCC certified 5V output USB charger (exceeding 5V will void the warranty).

**CAUTION**

Avoid touching the magnetic end of the charging cable with metal objects to prevent short circuits and damage to the cable.

For safety reasons, after the watch is fully charged, disconnect the charging cable from USB power source.

[pdf] Troubleshooting Guide Specifications Warranty Accessories

Troubleshooting TW410HR CANMORE TW353 Golf GPS Watch for Men and Women High Contrast LCD Display Free Update Over 40 000 Preloaded Courses Worldwide Lightweight Essential Accessory Golfers Black Orange TW 353O CA Safety Information B07Z3BQ5CC B08GLNNJ1F B09CKFK2X3 B07PCMQQ7L B07SZBLZ87 B08GLNL5WB B07PBQTLTX 71 FbmVW6RL m media amazon images I |||

Troubleshooting If any errors or malfunctions occur, use factory reset. If that does not work try hardware reset. Press together, and then press . Release three buttons at same time. Charge the Watch Battery/ Charging Information Battery Specifications: 3.7V / 400mAh Charging Specificat...

lang:en score:10 filesize: 148.61 K page\_count: 1 document date: 2021-09-14