

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yaheetech](#) /

› [Yaheetech 30-inch Outdoor Wood Burning Fire Pit Instruction Manual](#)

Yaheetech YT-00098503-0311VC

Yaheetech 30-inch Outdoor Wood Burning Fire Pit

Model: YT-00098503-0311VC

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling, operating, or maintaining this fire pit. Failure to follow these instructions may result in property damage, bodily injury, or death.

- For outdoor use only. Do not use this fire pit indoors or in an enclosed area.
- Place the fire pit on a flat, non-combustible surface at least 10 feet away from any structures, trees, or other flammable materials.
- Do not use gasoline, kerosene, diesel fuel, lighter fluid, or alcohol to start or rekindle a fire.
- Keep children and pets away from the fire pit at all times.
- Always use a poker to adjust logs and the spark screen. Never use bare hands.
- Ensure the fire is completely extinguished before leaving the fire pit unattended.
- Do not touch the fire pit until it has completely cooled down.
- Use only seasoned hardwood or manufactured fire logs. Do not burn trash, leaves, paper, or other combustible materials.
- Have a fire extinguisher, garden hose, or bucket of sand readily available in case of emergency.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.




This image displays the various components included in the 30-inch fire pit set, including the main fire bowl, spark screen, and poker.

1. Fire Bowl (with integrated legs and outer ring)
2. Spark Screen (mesh dome with handle)
3. Fire Poker
4. Assembly Hardware (bolts, washers, nuts)
5. Wrench (for assembly)

ASSEMBLY INSTRUCTIONS

Assembly typically requires a Phillips head screwdriver (not included) in addition to the provided wrench.

1. Carefully unpack all components and lay them out on a soft, clean surface to prevent scratching.
2. Attach the legs to the main fire bowl using the provided hardware. Ensure all bolts are securely tightened.
3. Place the spark screen onto the fire bowl. The outer ring of the fire pit is designed to support the spark screen.
4. Confirm all connections are stable before use.

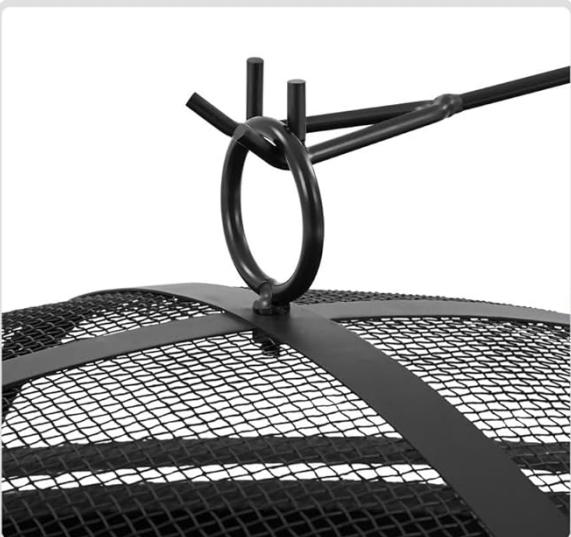

Handle on the mesh screen




Beautiful cutouts on the side

This image shows a close-up of the fire pit's side, highlighting the decorative star and moon cutouts backed by a mesh screen for safety and airflow.

BEAUTIFUL STAR & MOON DECORATIONS

Material: Iron and black coating

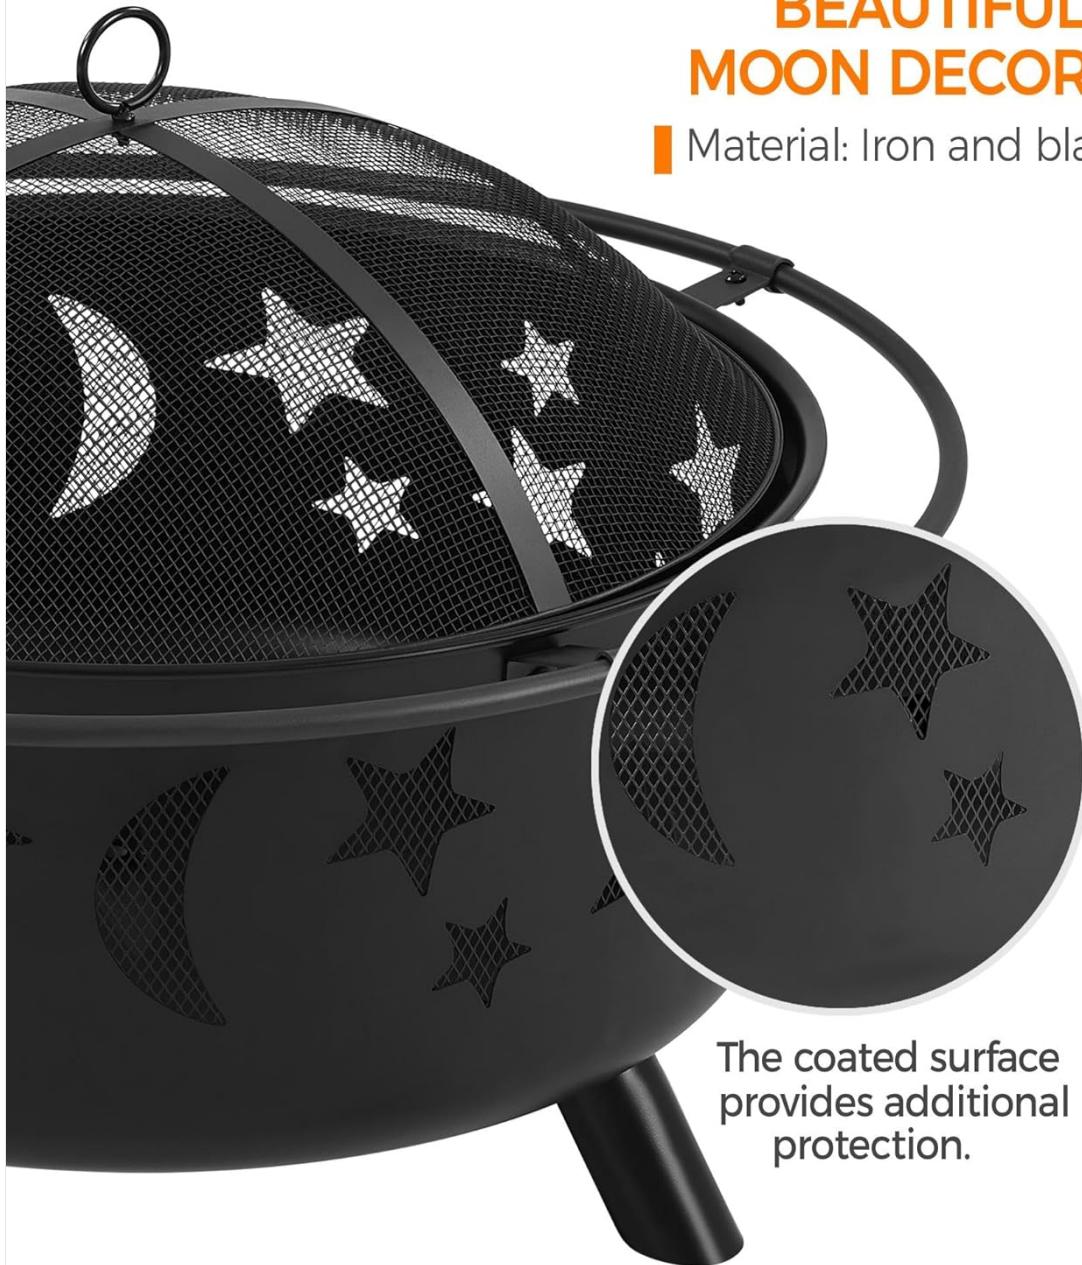

Wire Mesh



Good Heat Resistance

The coated surface provides additional protection.

This image details the handle on the spark screen and the design of the included fire poker, used for safely managing the fire.

OPERATING INSTRUCTIONS

Starting a Fire

1. Ensure the fire pit is placed on a safe, level surface away from combustibles.
2. Place a small amount of kindling (e.g., crumpled newspaper, small twigs) in the center of the fire bowl.
3. Arrange small pieces of dry firewood over the kindling in a teepee or log cabin style.
4. Light the kindling using a long match or lighter.
5. Gradually add larger pieces of firewood as the fire grows. Do not overload the fire pit.
6. Once the fire is established, place the spark screen over the fire bowl to contain sparks and embers. Use the poker to lift and replace the screen as needed.



This image shows the Yaheetech 30-inch fire pit in use, with a fire burning and the spark screen securely in place.

Maintaining the Fire

- Use the provided poker to adjust logs and ensure proper airflow.
- Add firewood as needed, always lifting the spark screen with the poker.
- The cut-out wall design with mesh and air holes at the bottom promotes better airflow for a consistent burn.

MULTI-PURPOSE

Suitable for patio, backyard, camping, garden, etc. The light-weight design makes this metal fireplace convenient to move around.



Patio



Camping



Gazebo



Poolside



Note: Do not use it indoors. Do not touch the product before it is cooled.

This diagram illustrates how the mesh cover and side cutouts facilitate airflow, ensuring efficient burning and preventing sparks from escaping.

Extinguishing the Fire

- Allow the fire to burn down naturally.
- Do not use water to extinguish the fire, as this can damage the fire pit and create steam hazards.
- Once the flames have died down, spread out the embers to allow them to cool.
- Ensure all embers are completely cold before leaving the fire pit.

MAINTENANCE

Cleaning

- Allow the fire pit to cool completely before cleaning.
- Remove ash and debris from the fire bowl using a small shovel or brush.
- Wipe down the exterior surfaces with a damp cloth. Avoid abrasive cleaners.

Storage

- Store the fire pit in a dry, covered area when not in use to prevent rust and extend its lifespan.
- Consider using a weather-resistant cover to protect the fire pit from the elements.
- Some users have noted that the paint may not be fully heat-resistant and could rust over time. Applying a high-temperature barbecue paint before initial use or as maintenance may help.

TROUBLESHOOTING

Excessive Smoke

- Ensure you are using dry, seasoned hardwood. Wet or green wood produces more smoke.
- Arrange logs to allow for adequate airflow. Avoid packing the fire pit too tightly.

Difficulty Starting Fire

- Use sufficient kindling and small pieces of dry wood to establish a base fire.
- Ensure there is enough oxygen flow. Do not smother the kindling.

SPECIFICATIONS

Brand	Yaheetech
Model Number	YT-00098503-0311VC
Material	Iron
Product Dimensions	30"D x 30"W x 19.7"H
Item Weight	16.75 Pounds
Fuel Type	Wood
Color	Black

WARRANTY AND SUPPORT

For warranty information or customer support regarding your Yaheetech Fire Pit, please refer to the purchase documentation or contact Yaheetech directly through their official website or customer service channels. Specific warranty terms may vary by region and retailer.

