

[Manuals.plus](#) /

› [Toysery](#) /

› Toysery Fire Truck Toy with Vivid Lights - Instruction Manual

Toysery 234345

Toysery Fire Truck Toy with Vivid Lights - Instruction Manual

Model: 234345

1. INTRODUCTION

This instruction manual provides essential information for the safe and proper use of your Toysery Fire Truck Toy. Please read this manual thoroughly before operating the toy and retain it for future reference.



Image 1.1: The Toysery Fire Truck Toy, showcasing its red body and illuminated features.

2. WHAT'S IN THE BOX

Verify that all components are present upon opening the package:

- 1 x Toysery Fire Truck Toy (Model 234345)

3. SAFETY INFORMATION

Please observe the following safety guidelines:

- This toy is intended for children aged 36 months (3 years) and older.
- Adult supervision is recommended during play.
- Do not immerse the toy in water or other liquids.
- Keep the toy away from heat sources and open flames.
- Ensure battery compartment is securely closed to prevent battery ingestion.
- Dispose of used batteries responsibly.

4. SETUP

4.1 Battery Installation

The Toysery Fire Truck Toy requires 3 AA batteries (not included) for operation of its lights and sounds.

1. Locate the battery compartment on the underside of the fire truck.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Note: Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Do not mix old and new batteries, or different types of batteries.

5. OPERATING INSTRUCTIONS

Once batteries are installed, the fire truck is ready for operation.

5.1 Power On/Off

Locate the power switch, typically on the underside or side of the toy. Slide the switch to the 'ON' position to activate the toy's features. Slide to 'OFF' to conserve battery life.

5.2 Lights and Sounds

Upon activation, the fire truck will emit siren sounds and display vivid flashing LED lights. These features operate continuously when the toy is on.

MINI FIREFIGHTER TRUCK



Image 5.1: The fire truck demonstrating its bright LED lights and siren sounds.

5.3 Bump and Go Action

The fire truck is equipped with a 'Bump and Go' mechanism. When the toy is powered on and placed on a flat surface, it will move forward. If it encounters an obstacle, it will automatically change direction and continue moving.

LITTLE FIREFIGHTER TRAINING TRUCK



Image 5.2: The fire truck illustrating its automatic bump and go system, changing direction upon impact.

5.4 Extending Fire Ladder

The fire truck features an extending fire ladder. This ladder can be manually extended and rotated to simulate rescue operations.

6. MAINTENANCE

6.1 Cleaning

To clean the toy, wipe it with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the toy is completely dry before storage or next use.

6.2 Storage

When not in use for extended periods, remove the batteries to prevent leakage and store the toy in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not move, lights, or sounds do not work.	Batteries are dead, incorrectly installed, or missing.	Check battery polarity, replace with new AA batteries, and ensure the power switch is in the 'ON' position.
Toy moves erratically or gets stuck frequently.	Playing surface is uneven or too cluttered.	Ensure the toy is used on a smooth, flat, and clear surface.
Siren sound is distorted or too quiet.	Low battery power.	Replace with new AA batteries.

8. SPECIFICATIONS

- **Brand:** Toysery
- **Model Number:** 234345
- **Material:** Acrylonitrile Butadiene Styrene (ABS), Plastic
- **Color:** Red
- **Dimensions:** 10.7 x 5.3 x 3.5 inches (approximately)
- **Power Source:** Battery Powered
- **Batteries Required:** 3 AA batteries (not included)
- **Recommended Age:** 36 Months and up
- **Operation Mode:** Automatic (Bump and Go)

HERO ON WHEELS FIRE TRUCK TOY

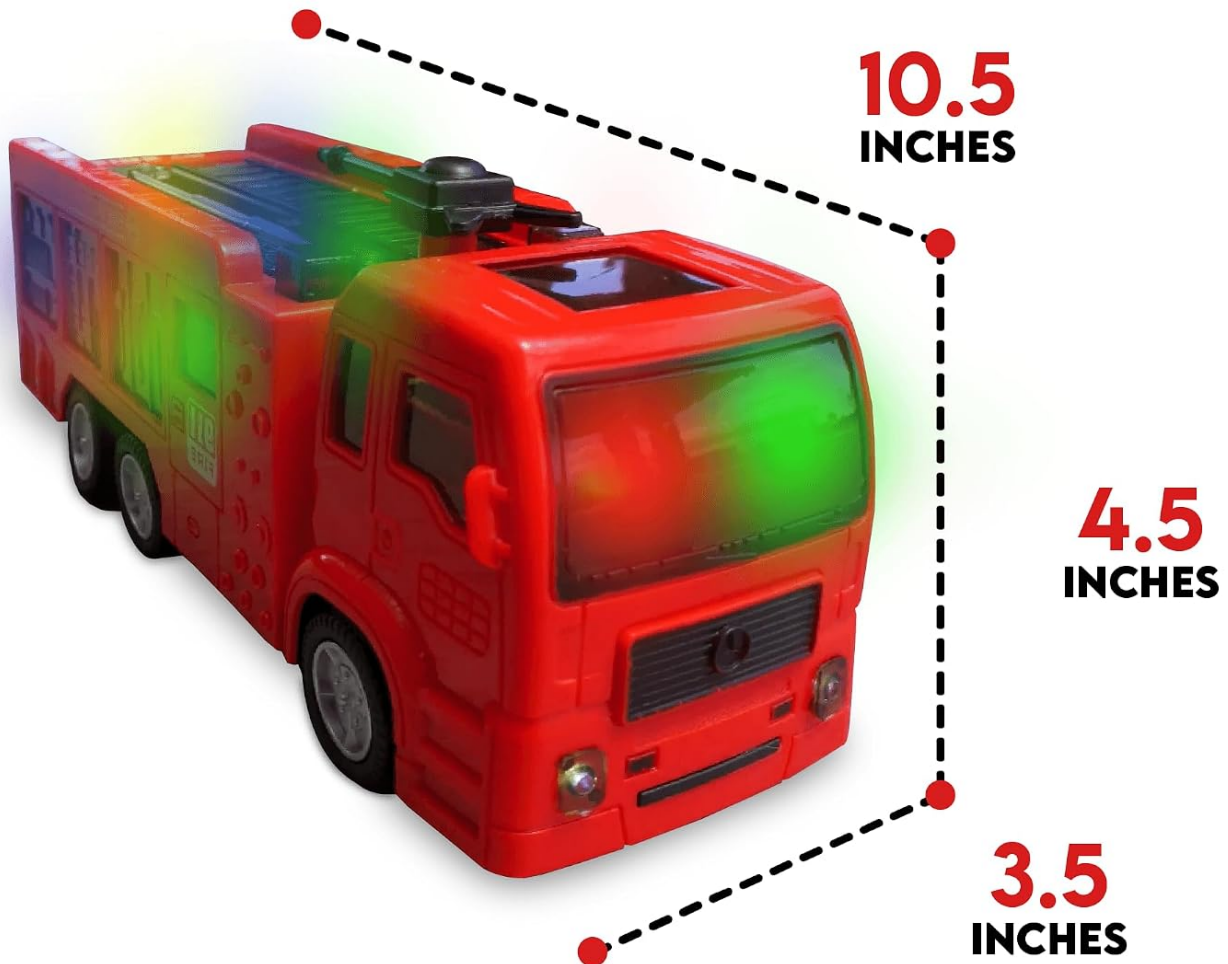


Image 8.1: Approximate dimensions of the Toysery Fire Truck Toy.

9. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Toysery Fire Truck Toy, please contact our customer service team. We are committed to providing a satisfactory experience and friendly customer service. Please refer to the retailer's website or your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question