Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Rimous /
- Rimous Replacement Remote Control for LG Smart TVs (Models AKB75375604, AKB75095307, AKB75675304)

Rimous AKB75375604, AKB75095307, AKB75675304

Rimous Replacement Remote Control for LG Smart TVs

Compatible Models: AKB75375604, AKB75095307, AKB75675304

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Rimous Replacement Remote Control for LG Smart TVs. Designed for broad compatibility, this remote offers a convenient and reliable solution for controlling your LG television.

Product Features

- Full Compatibility: Works with LG Smart TVs from 2010-2024 models, including OLED, 4K UHD, and WebOS systems.
- Pre-Installed Batteries: Includes premium batteries for immediate use.
- Anti-Loss Holder: Comes with a wall-mounted holder to reduce the risk of misplacing the remote.
- One-Touch Shortcut Buttons: Dedicated buttons for Netflix and Prime Video for quick access.
- **Enhanced Performance:** Equipped with a smart chip for improved functionality, longer transmission range, responsive buttons, and stable performance.

Setup

1. Battery Installation

- 1. Locate the battery compartment on the back of the remote control.
- 2. Slide the battery cover downwards to open.
- 3. Insert the two included AAA batteries, ensuring correct polarity (+ and terminals match the markings inside the compartment).
- 4. Slide the battery cover back into place until it clicks securely.



The image displays the Rimous replacement remote control, two AAA batteries, and a black wall-mount holder designed to keep the remote accessible.

2. Holder Installation

1. Clean the desired surface (e.g., side of TV, wall, or table) where you wish to mount the holder. Ensure the surface is dry and free of dust.

- 2. Remove the protective backing from the adhesive strip on the back of the holder.
- 3. Press the holder firmly onto the cleaned surface for at least 30 seconds.
- 4. Allow the adhesive to set for a few hours before placing the remote control in the holder.



A visual representation of the remote's performance, indicating a rapid 0.2-second response time and an effective transmission range exceeding 35 feet. The remote is shown being used in a living room setting.

Operating Instructions

Basic Functions

The Rimous remote control is designed for immediate use with compatible LG TVs without requiring any programming. Simply point the remote at your TV and begin using its functions.

- Power Button (): Turns the TV on or off.
- Number Buttons (0-9): Directly select channels.
- Volume Up/Down (VOL +/-): Adjusts the TV volume.
- Channel Up/Down (CH PAGE): Changes TV channels.
- Navigation Buttons (▲ ▼ ◀ ▶): Navigate through menus and options.
- OK Button: Confirms selections.

- Back Button: Returns to the previous screen or menu.
- Exit Button: Exits the current menu or application.

Shortcut Buttons

Access popular streaming services directly with dedicated buttons:

- Netflix Button: Launches the Netflix application.
- Prime Video Button: Launches the Prime Video application.



A detailed view of the remote control, emphasizing the dedicated Netflix and Prime Video shortcut buttons for quick access to streaming services.

Compatibility

This remote is compatible with a wide range of LG Smart TV models, including those with:

- · LED, LCD, 3D, OLED, 4K UHD displays
- · WebOS systems
- Specific original remote models such as AKB74915305, AKB75375604, AKB75095307, AKB75675304, AKB74475401, AKB74475433, AKB73975702, AKB75055701, AKB73975711, AKB73715608, AKB74915324, AKB73715601, AKB75095308, AKB74915304, AKB75095330,

Remote Only for All LG TV Models NOT for other brands of TV



This image illustrates the broad compatibility of the Rimous remote control across different LG television technologies, including LED, LCD, UHD, HD, OLED, WebOS, and 4K models.

Replacement for All LG Smart TV Remote No Pointer & Voice Function



This image displays the Rimous remote alongside several original LG remote control designs, illustrating its function as a universal replacement for various models.

Maintenance

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, moisture, or direct sunlight.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

Troubleshooting

- · Remote not responding:
 - Ensure the batteries are inserted correctly with the proper polarity.
 - · Replace the batteries with new ones if they are depleted.
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
 - · Verify that the remote is pointed directly at the TV.
- · Specific buttons not working:

- Check for any debris or stickiness around the button. Gently clean if necessary.
- If only certain smart TV functions (like pointer or voice control) are not working, please note that
 this remote is a standard replacement and does not support advanced features like pointer or
 voice control found on some original LG Magic Remotes.

Specifications

Feature	Detail
Product Dimensions	6.3 x 3.54 x 0.39 inches
Item Weight	3.84 ounces
Brand	Rimous
Manufacturer	Rimous
Special Feature	Ergonomic, Lightweight, No Programming Required
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television (LG Smart TVs)

Warranty and Support

Specific warranty information is not provided in the product details. For any support inquiries or further assistance, please refer to the seller's contact information or the platform where the product was purchased.

Related Documents - AKB75375604, AKB75095307, AKB75675304



Angrox Universal Remote Control for LG Smart TVs - User Guide

Comprehensive user guide for the Angrox Universal Remote Control, compatible with all LG Smart TV models. Learn about specifications, setup, features, and FAQs.



LG 55UK6300PUE Remote Control: Functions and Button Guide

Detailed guide to the functions of the LG 55UK6300PUE TV remote control, explaining each button's purpose for easy navigation and operation.