

[manuals.plus](#) /› [YISSVIC](#) /› [YISSVIC MK1000 4-in-1 Electric Milk Frother User Manual](#)

YISSVIC MK1000

YISSVIC MK1000 4-in-1 Electric Milk Frother User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the YISSVIC MK1000 Electric Milk Frother. Retain this manual for future reference.

- **Electrical Safety:** Ensure the power supply voltage matches the rating on the appliance. Do not immerse the frother base or power cord in water or other liquids. Always unplug the frother when not in use and before cleaning.
- **Heat Safety:** The frother heats milk. Surfaces may become hot during operation. Avoid contact with hot surfaces. Use the handle for pouring.
- **Child Safety:** This appliance is not intended for use by children. Keep the frother and its cord out of reach of children.
- **Proper Use:** Use the frother only for its intended purpose of frothing and heating milk. Do not use it to heat other liquids or food items.
- **Maintenance:** Do not attempt to repair or disassemble the appliance yourself. Contact customer support if service is required.
- **Cleaning:** Do not rinse the milk frother base under water, as this will damage the internal circuitRefer to the cleaning section for proper instructions.

2. PRODUCT OVERVIEW

The YISSVIC MK1000 is a versatile 4-in-1 electric milk frother designed to create various milk preparations for your beverages. It features a durable stainless steel interior with a non-stick coating and an automatic shut-off function for safety and convenience.

Components

- Frother Jug (with handle)
- Transparent Lid
- Frothing Whisk (single whisk for all functions)
- Power Base (detachable)

Key Features

- **4-in-1 Functionality:** Capable of producing warm dense foam, warm airy foam, cold foam, and warm milk.
- **Large Capacity:** Froths up to 5.1 oz (150 ml) of milk and heats up to 10.2 oz (300 ml) of milk without foam.
- **Single Whisk Design:** One whisk serves all four functions, eliminating the need to change attachments.
- **Easy to Clean:** Non-stick interior coating allows for simple rinsing and wiping.
- **Safe Operation:** Equipped with automatic shut-off and temperature control to prevent overheating and burning.
- **Stable Structure:** Features a 360-degree rotatable jug on the power base and anti-slip rubber feet for stability.



Front view of the YISSVIC MK1000 Electric Milk Frother, showcasing its sleek design and control buttons.



Side view of the YISSVIC MK1000 Electric Milk Frother, highlighting the handle and power base.

3. SETUP

- Unpack:** Carefully remove all components from the packaging.
- Clean:** Before first use, clean the frother jug interior and whisk according to the 'Cleaning and Maintenance' section. Wipe the exterior of the jug and the power base with a damp cloth.
- Assemble:** Place the frothing whisk securely onto the shaft at the bottom of the frother jug. Ensure it is properly seated.
- Position:** Place the power base on a dry, flat, and stable surface.
- Connect:** Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The YISSVIC MK1000 offers four distinct functions for preparing milk. For best frothing results, it is recommended to use whole milk.

Filling Guidelines

Observe the MAX and MIN fill lines inside the frother jug:

- MAX for Frothing (150ml / 5.1oz):** Do not exceed this line when frothing milk to prevent overflow.
- MAX for Heating (300ml / 10.2oz):** Do not exceed this line when only heating milk.
- MIN Liquid Level (75ml / 2.5oz):** Always ensure milk is above this minimum level.



The interior of the frother jug clearly indicates the MAX fill lines for frothing and heating, and the MIN liquid level.

Function Selection and Operation

- 1. Add Milk:** Pour the desired amount of milk into the frother jug, ensuring it is between the MIN and appropriate MAX fill lines.
- 2. Place Lid:** Securely place the transparent lid on the frother jug.
- 3. Select Function:** Place the frother jug onto the power base. Press the 'Function' button repeatedly to cycle through the four modes. The indicator light next to the selected function will illuminate. The functions are:
 - Warm Dense Foam (approx. 140°F)
 - Warm Airy Foam (approx. 140°F)
 - Heat Milk (no foam, approx. 140°F)
 - Cold Milk Froth (normal temperature)
- 4. Start:** Press the 'ON/OFF' button to begin the selected operation. The frother will automatically stop when the process is complete (typically 1-2 minutes).
- 5. Serve:** Carefully remove the frother jug from the base by the handle and pour the frothed or heated milk into your beverage.



Visual representation of the four functions: warm dense foam, warm airy foam, heated milk, and cold froth.

Demonstration Video

Your browser does not support the video tag.

This video demonstrates the general operation and various functions of the YISSVIC Electric Milk Frother, showing how to achieve different milk textures for your coffee.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your frother. Always clean the frother after each use.

- 1. Unplug:** Disconnect the frother from the power outlet and allow it to cool down completely.
- 2. Remove Whisk:** Carefully remove the frothing whisk from the bottom of the jug.
- 3. Clean Jug Interior:** Rinse the interior of the frother jug with warm water. Use a soft, damp cloth or sponge to wipe away any milk residue. The non-stick coating makes cleaning easy.
- 4. Clean Whisk:** Rinse the whisk under running water.
- 5. Clean Exterior:** Wipe the exterior of the frother jug and the power base with a soft, damp cloth.
- 6. Dry:** Ensure all parts are thoroughly dry before reassembling or storing.

Important: Never immerse the power base in water or any other liquid. This will cause electrical damage and void the warranty.



The frother jug being rinsed under a faucet, demonstrating the ease of cleaning its non-stick interior.

6. TROUBLESHOOTING

If you encounter issues with your YISSVIC MK1000 Electric Milk Frother, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power outlet malfunction; frother base is wet.	Ensure the frother is securely plugged into a working outlet. Check if the power base is completely dry.
Milk is not frothing or foam is insufficient.	Milk level too high or too low; whisk not properly inserted; type of milk used.	Ensure milk is between MIN and MAX frothing lines. Check that the whisk is securely placed. Use fresh, cold whole milk for best results.

Problem	Possible Cause	Solution
Milk is not heating.	Incorrect function selected; milk level too low.	Select a heating or frothing function. Ensure milk is above the MIN line.
Burnt milk smell or residue.	Frother not cleaned after previous use; milk left in frother for too long.	Clean the frother thoroughly after every use. Do not leave milk in the frother after operation.
Whisk is missing or detached.	Whisk was not securely placed or accidentally removed during cleaning/pouring.	Ensure the whisk is firmly seated on the shaft. If lost, contact YISSVIC customer support for a replacement.

7. SPECIFICATIONS

Feature	Detail
Brand	YISSVIC
Model Number	MK1000
Capacity (Frothing)	150 ml (5.1 oz)
Capacity (Heating)	300 ml (10.2 oz)
Material	Stainless Steel, Silicone
Special Features	Auto Shut-Off, Detachable Base
Power Source	Electric
Item Weight	2.42 pounds
Package Dimensions	9.88 x 7.91 x 6.34 inches

8. WARRANTY AND SUPPORT

YISSVIC products are manufactured with quality and performance in mind. While specific warranty details are not provided in this manual, YISSVIC is committed to customer satisfaction.

If you experience any issues with your YISSVIC MK1000 Electric Milk Frother, require replacement parts, or have questions not covered in this manual, please contact YISSVIC customer support through their official website or the retailer where the product was purchased. Please have your model number (MK1000) and purchase information ready when contacting support.