

JOYOUNG DJ13U-G91

Joyoung Automatic Soy Milk Maker DJ13U-G91 Instruction Manual

Model: DJ13U-G91

1. INTRODUCTION

Thank you for choosing the Joyoung Automatic Soy Milk Maker DJ13U-G91. This appliance is designed to simplify the preparation of various nutritious beverages, including soy milk, nut milk, rice paste, and more. It features an ultra-fine grinding technology for smooth results, a warming function to keep drinks at an optimal temperature, and an easy-wash function for convenient cleaning. Please read this manual thoroughly before first use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INFORMATION

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. Keep this manual for future reference.

- Read all instructions carefully before operating the appliance.
- Do not immerse the motor head in water or other liquids. Only the jug and blade assembly are washable.
- Ensure the voltage rating of the appliance matches your local power supply (120V-60Hz).
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils out of the jug during operation to prevent injury and damage to the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors. This appliance is for household use only.
- Always ensure the lid is properly secured before starting operation.
- Exercise caution when handling hot liquids and steam.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Joyoung Soy Milk Maker.



Figure 3.1: Main Unit and Detached Motor Head. This image displays the primary components of the Joyoung DJ13U-G91 soy milk maker, including the main jug and the detachable motor head with its integrated blade assembly.

1. **Main Jug:** The primary container for ingredients and liquid. Made of 304 food-grade stainless steel.
2. **Motor Head:** Contains the motor, heating element, and control panel. This part should not be immersed in water.
3. **Blade Assembly:** Integrated into the motor head, responsible for grinding ingredients.
4. **Control Panel:** Located on top of the motor head, featuring various function buttons and indicators.
5. **Power Cord:** Detachable power cord for connecting the appliance to an electrical outlet.



Figure 3.2: Interior Jug with Measurement Markings. The stainless steel interior of the jug shows clear measurement lines for 900ml, 1100ml, and 1300ml, indicating the minimum and maximum fill levels for optimal operation.



Figure 3.3: Grinding Blade and Filter Shield. A detailed view of the ultra-fine grinding blade and the surrounding perforated shield, designed to process ingredients efficiently and produce smooth beverages.



Figure 3.4: Control Panel. The top-mounted control panel features various buttons for selecting functions such as Grains, Dry/Soaked Beans, Rice Paste, Aromatic Soymilk, Porridge, Nut Milk, Juice, Rapid Soymilk, Warming, and Easy Wash, along with Start/Cancel buttons.

4. INITIAL SETUP AND PREPARATION

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the stainless steel jug and the blade assembly (part of the motor head) with warm, soapy water. Rinse thoroughly and dry. **Do not immerse the entire motor head in water.** Wipe the exterior of the motor head with a damp cloth.
3. **Assembly:** Place the motor head securely onto the jug. Ensure it is properly seated to prevent leaks and ensure safe operation.
4. **Placement:** Position the soy milk maker on a stable, flat, and heat-resistant surface, away from water sources and direct heat.
5. **Power Connection:** Connect the power cord to the appliance, then plug it into a grounded 120V-60Hz electrical outlet. The appliance will emit a beep and indicator lights may flash, indicating it is in standby mode.

5. OPERATING INSTRUCTIONS

This section details how to use your Joyoung Soy Milk Maker for various functions.

General Operation Steps:

1. **Prepare Ingredients:** Measure and add your desired ingredients (e.g., soaked soybeans, nuts, grains) into the stainless steel jug.
2. **Add Water:** Fill the jug with water between the minimum (900ml) and maximum (1300ml) fill lines indicated inside the jug. Do not overfill or underfill.
3. **Secure Motor Head:** Place the motor head firmly onto the jug. Ensure it is correctly aligned and locked into position.
4. **Select Function:** Plug in the appliance. On the control panel, press the "Select" button repeatedly to cycle through the available functions (Grains, Dry/Soaked Beans, Rice Paste, Aromatic Soymilk, Porridge, Nut Milk, Juice, Rapid Soymilk). The indicator light for the selected function will illuminate.
5. **Start Program:** Once your desired function is selected, press the "Start/Control" button. The appliance will begin its operation, which typically involves heating, grinding, and cooking cycles. The process usually takes 10-20 minutes depending on the selected program.
6. **Completion:** The appliance will beep several times when the program is complete. Unplug the unit and carefully remove the motor head.
7. **Serve:** Pour the freshly prepared beverage into a serving container. Be cautious of hot contents.

Specific Functions:

- **Grains:** For preparing beverages from various grains.
- **Dry/Soaked Beans:** Specifically designed for processing soybeans, whether dry or pre-soaked. Soaking beans typically yields a smoother result.
- **Rice Paste:** For making creamy rice-based pastes or porridges.
- **Aromatic Soymilk:** A specialized program for enhanced soy milk flavor.
- **Porridge:** For cooking various types of porridge.
- **Nut Milk:** Ideal for preparing milk from almonds, walnuts, or other nuts.
- **Juice:** For blending fruits and vegetables into juice. Note: This function does not extract pulp.
- **Rapid Soymilk:** A quicker program for soy milk preparation.
- **Warming Function:** After a program is complete, or for reheating cooled beverages, press the "Warming" button. This function will maintain the beverage at a warm temperature.
- **Easy Wash:** After serving, add a small amount of water to the jug and press the "Easy Wash" button. The appliance will perform a short cleaning cycle to loosen residue, making manual cleaning easier.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and hygiene of your appliance.

1. **Immediate Cleaning:** It is highly recommended to clean the appliance immediately after each use. This prevents food residue from drying and becoming difficult to remove.
2. **Unplug:** Always unplug the soy milk maker from the power outlet before cleaning.
3. **Easy Wash Function:** For initial cleaning, add a small amount of water (up to the 900ml line) to the jug and press the "Easy Wash" button. This will help rinse the interior and blade.
4. **Manual Cleaning (Jug and Blade):** After the Easy Wash cycle or directly after use, carefully remove the motor head. Wash the stainless steel jug and the blade assembly (attached to the motor head) with warm, soapy water.

using a soft brush or sponge. Rinse thoroughly under running water.

- 5. **Motor Head Exterior:** Wipe the exterior of the motor head with a damp cloth.**Never immerse the motor head in water or place it under running water, as this can damage electrical components.**
- 6. **Drying:** Ensure all parts are completely dry before reassembling or storing the appliance.
- 7. **Storage:** Store the soy milk maker in a clean, dry place.

7. TROUBLESHOOTING

Refer to this section for common issues and their potential solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; motor head not properly seated; power outage.	Ensure power cord is securely plugged into both the appliance and the outlet. Check if the motor head is correctly placed on the jug. Verify power supply.
Indicator lights are flashing erratically.	Motor head not properly seated; internal error.	Remove and re-seat the motor head. Unplug the appliance for 1 minute, then plug it back in. If the issue persists, contact customer support.
Soy milk is not smooth enough.	Insufficient soaking time for beans; too many ingredients; incorrect function selected.	Ensure soybeans are soaked for the recommended duration (e.g., 6-8 hours). Do not exceed maximum ingredient levels. Select the appropriate function (e.g., "Dry/Soaked Beans").
Appliance is difficult to clean.	Residue has dried onto the jug or blade.	Clean the appliance immediately after use. Utilize the "Easy Wash" function. For stubborn residue, soak the jug with warm soapy water for a short period before scrubbing.
Burning smell during operation.	Overfilling; motor overheating; foreign object.	Immediately unplug the appliance. Check if the fill level exceeded the maximum line. Allow the motor to cool down. Inspect for any foreign objects. If the smell persists, discontinue use and contact support.

8. PRODUCT SPECIFICATIONS

- **Model:** DJ13U-G91
- **Brand:** JOYOUNG
- **Capacity:** 900-1300 ml
- **Input Voltage:** 120 V-60 Hz
- **Rated Power:** 1100 W
- **Motor Power:** 200 W
- **Product Dimensions:** 10.24 x 8.86 x 14.17 inches (260 x 225 x 360 mm)
- **Item Weight:** 4.84 pounds (2.2 KG)
- **Material:** 304 Food-Grade Stainless Steel Jug
- **Special Features:** Warming Function, Easy Washing, Ultra-fine Grinding Technology, Nut Milk Function
- **UPC:** 708214748533, 709161166364, 708214748540, 745780736595
- **Manufacture Year:** 2017



Figure 8.1: Product Dimensions. This diagram illustrates the approximate height, width, and depth of the Joyoung DJ13U-G91 soy milk maker in millimeters.

9. WARRANTY AND CUSTOMER SUPPORT

Your Joyoung Automatic Soy Milk Maker DJ13U-G91 comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical assistance, or any questions regarding your product, please contact Joyoung customer support. Please have your model number (DJ13U-G91) and proof of purchase ready when contacting support.

For more information, you may visit the official Joyoung website or contact your retailer.

© 2023 Joyoung. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question