

[Manuals.plus](#) /

› [Ikea](#) /

› Ikea Silent Analog Wall Clock User Manual (Model: clock4)

Ikea clock4

Ikea Silent Analog Wall Clock User Manual

Model: clock4

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Ikea Silent Analog Wall Clock, model clock4. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove exhausted batteries promptly to prevent leakage.
- Do not expose the clock to extreme temperatures or direct sunlight.
- This product is designed for indoor use only.

PACKAGE CONTENTS

- 1 x Ikea Silent Analog Wall Clock (Model: clock4)
- 1 x User Manual (this document)

Note: Batteries are not included and must be purchased separately.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one AA battery (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image: Rear view of the clock, highlighting the battery compartment and time adjustment knob.

2. Setting the Time

1. Locate the time adjustment knob on the back of the clock (usually a small wheel).
2. Gently turn the knob in either direction until the clock hands display the correct time.
3. Ensure the minute hand is aligned precisely with the minute markers for accurate timekeeping.

3. Mounting the Clock

1. Choose a suitable location on a wall for mounting. Ensure the wall material can support the clock's weight.
2. Use an appropriate wall fastener (e.g., screw, nail, or adhesive hook, not included) that can securely hold the clock.
3. Hang the clock using the integrated hanging slot on the back.
4. Verify that the clock is level and securely attached to the wall before releasing it.



Image: The Ikea wall clock displayed on a wall in a room setting.

The Ikea Silent Analog Wall Clock operates continuously once the battery is installed and the time is set. Its silent movement ensures no ticking sounds, making it suitable for quiet environments.



Image: A close-up side profile of the clock, highlighting its design and silent mechanism.

MAINTENANCE

Cleaning

- Wipe the clock surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.

Battery Replacement

- When the clock hands stop moving or the time becomes inaccurate, it is time to replace the battery.
- Follow the "Battery Installation" steps to replace the old battery with a new AA battery.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working	Battery is dead or incorrectly installed.	Replace the battery with a new one, ensuring correct polarity.
Time is inaccurate	Low battery power or hands are obstructed.	Replace the battery. Check if hands are bent or touching each other/the clock face.
Clock falls from wall	Improper mounting or inadequate fastener.	Ensure the clock is securely mounted using an appropriate fastener for your wall type.

SPECIFICATIONS

Brand: Ikea

Model: clock4

Colour: Black

Display Type: Analog

Special Feature: Silent Clock

Product Dimensions: 30W x 2H Centimeters

Power Source: Battery Powered (1x AA battery, not included)

Indoor/Outdoor Usage: Indoor

Frame Material: Aluminium, Glass, Plastic

Item Weight: 420 g

Country of Origin: Belarus

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Ikea website or contact Ikea customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit: [Ikea Customer Service \(India\)](#)

© 2023 Ikea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08GP84PNX>

More documents and user manuals: <https://manuals.plus/>