

CUSIMAX CMFS-202

CUSIMAX Meat Slicer CMFS-202 Instruction Manual

Model: CMFS-202

INTRODUCTION

Thank you for choosing the CUSIMAX Meat Slicer CMFS-202. This electric deli food slicer is designed for efficient and precise slicing of various foods, including meat, bread, and cheese. To ensure safe and optimal performance, please read this instruction manual thoroughly before operating the appliance and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- Always unplug the slicer from the power outlet before assembling, disassembling, cleaning, or when not in use.
- The blade is extremely sharp. Handle with extreme care. Never touch the blade directly with your hands.
- Keep hands and utensils away from the moving blade during operation. Always use the food carriage and food pusher.
- Ensure the slicer is placed on a stable, flat, and dry surface before use.
- Do not operate the slicer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not immerse the motor unit in water or any other liquid.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and in good condition:

- CUSIMAX Meat Slicer Unit
- 7.5-inch Removable Stainless Steel Blade
- Food Carriage
- Food Pusher
- Instruction Manual



Image: The CUSIMAX Meat Slicer CMFS-202 main unit, showing the blade, food carriage, and base.

PRODUCT OVERVIEW

Familiarize yourself with the various parts of your CUSIMAX Meat Slicer:

- **Blade:** 7.5-inch removable stainless steel blade for slicing.
- **Safety Bezel:** Protects the blade edge when not in use.
- **Food Carriage:** Platform where food is placed for slicing.
- **Food Pusher:** Holds food securely against the food carriage and protects hands.
- **Thickness Adjustment Knob:** Allows precise adjustment of slice thickness from 0-20mm.
- **Power Switch:** Controls the slicer's operation (O: OFF, I: ON, II: ENHANCED).
- **Non-Slip Feet:** Provides stability during operation.



Safety and Convenience

Before cleaning, please switch off the appliance, allow it come to complete stop and set the thickness knob to 0, then power off.

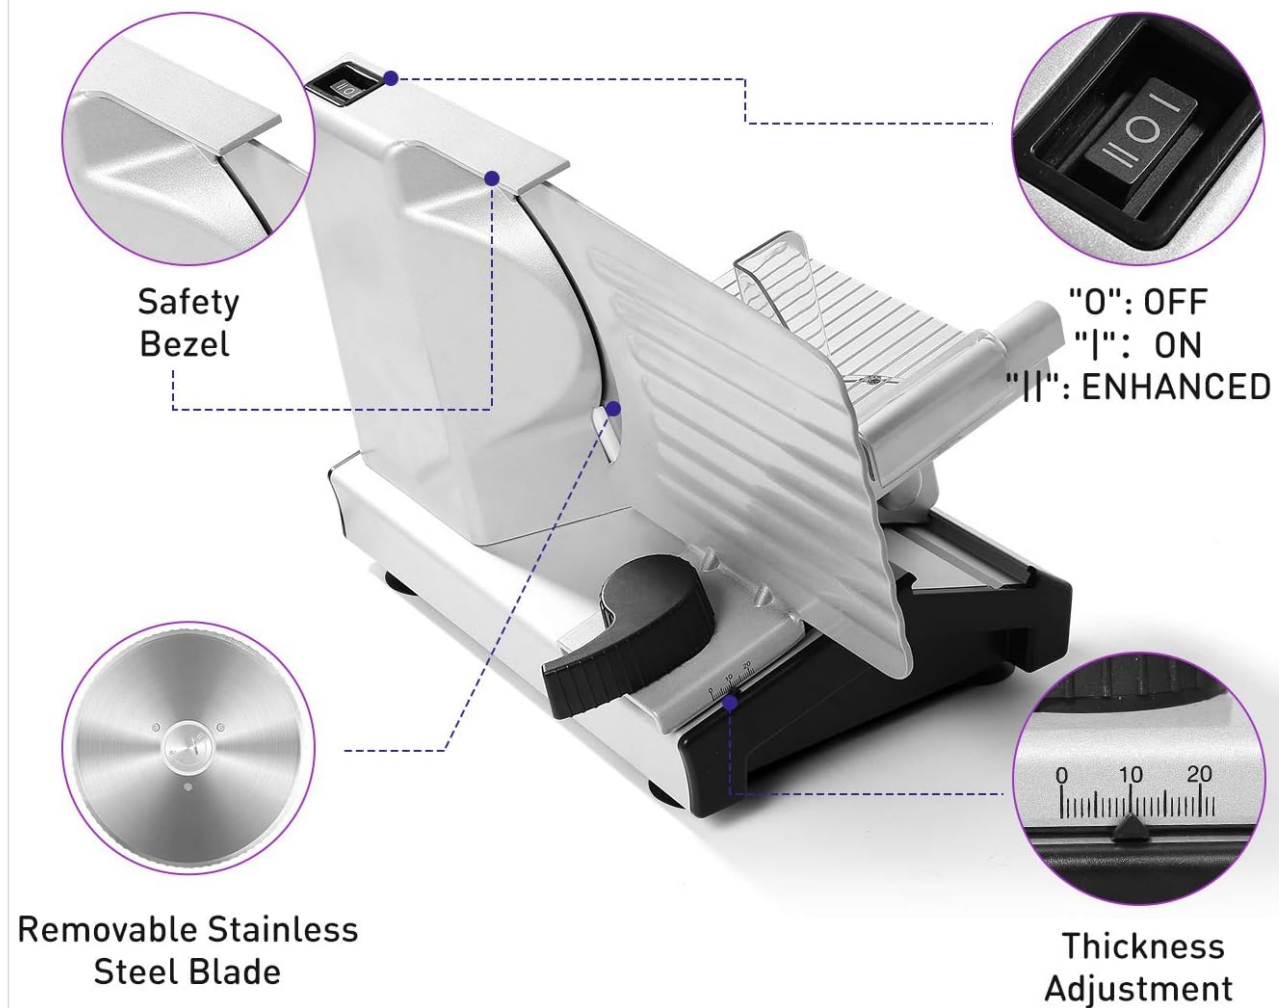


Image: A diagram highlighting the safety bezel, removable stainless steel blade, thickness adjustment knob, and power switch with 'O', 'I', 'II' settings.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Remove any protective films or packaging materials.
2. **Placement:** Place the slicer on a clean, dry, and stable countertop or table. Ensure the non-slip feet are firmly gripping the surface.
3. **Blade Installation (if removed):** Ensure the 7.5-inch stainless steel blade is securely attached. Refer to the "Maintenance and Cleaning" section for blade removal and installation instructions.
4. **Food Carriage and Pusher:** Ensure the food carriage slides smoothly and the food pusher is correctly positioned.
5. **Initial Cleaning:** Before first use, clean all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective slicing:

1. **Prepare Food:** Ensure food items are chilled and firm for best slicing results. Trim any bones or hard rinds.
2. **Adjust Thickness:** Turn the thickness adjustment knob to select your desired slice thickness (0-20mm). A higher number indicates a thicker slice.
3. **Position Food:** Place the food item firmly on the food carriage. Use the food pusher to hold the food securely against the carriage and the thickness guide plate.
4. **Power On:** Plug the slicer into a grounded electrical outlet. Set the power switch to 'I' (ON) or 'II' (ENHANCED) to start the blade.
5. **Slice:** Gently push the food carriage back and forth, guiding the food against the rotating blade. Maintain steady pressure with the food pusher.
6. **Collect Slices:** Collect the sliced food from the receiving tray (not included, use your own plate or container).
7. **Power Off:** Once slicing is complete, set the power switch to 'O' (OFF) and unplug the appliance.

0-20mm Adjustable Thickness Slicer



1mm



10mm



20mm

Image: The slicer demonstrating various thickness settings, from 1mm to 20mm, with examples of sliced meat.

To Be A Chef

- Powerful 200 watt AC motor
- Removable and retractable 7.5" stainless blade
- Blade safety guard and food pursher
- Sturdy non-slip feet
- On/Off switch for safe use
- Die-cast aluminum housing and easy to clean design

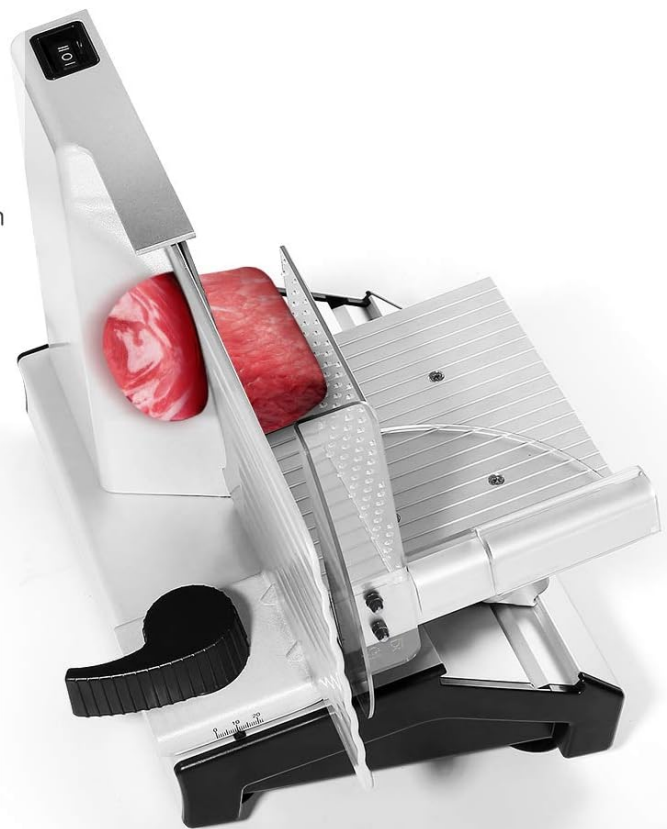


Image: The slicer actively slicing a piece of meat, with additional images showing various foods like ham, bread, and vegetables that can be sliced.

MAINTENANCE AND CLEANING

CAUTION: Always unplug the slicer before cleaning. The blade is extremely sharp.

1. **Unplug:** Ensure the slicer is unplugged from the power outlet.
2. **Set Thickness to 0:** Turn the thickness adjustment knob to '0' to retract the blade guard for safety.
3. **Remove Food Carriage:** Push the food carriage to the left and lift the button up to release and remove it.
4. **Remove Blade:** Carefully remove the blade by turning the central knob counter-clockwise. Use a cloth or glove to handle the blade.
5. **Clean Parts:** The removable stainless steel blade, food carriage, and food pusher are dishwasher safe. Alternatively, wash them with warm, soapy water and rinse thoroughly.

- 6. **Clean Main Unit:** Wipe the main unit and motor housing with a damp cloth. Do not immerse the main unit in water.
- 7. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.
- 8. **Reassemble:** Reattach the blade and food carriage in reverse order of removal. Ensure they are securely fastened.

Easy to Clean

Remove the food Carriage to clean conveniently and dishwasher safe.



Image: Instructions demonstrating how to push the food carriage to the left and lift a button to remove it for convenient cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Slicer does not turn on.	Not plugged in; power switch is off; power outage.	Ensure the slicer is securely plugged into a working outlet. Check the power switch is set to 'I' or 'II'. Verify power supply.

Problem	Possible Cause	Solution
Uneven slices.	Food not firm enough; inconsistent pressure; blade not clean.	Ensure food is well-chilled. Apply consistent pressure with the food pusher. Clean the blade and surrounding area.
Food jams or sticks to blade.	Food is too soft or warm; blade is dull or dirty.	Chill food thoroughly before slicing. Clean the blade. If the blade is dull, consider replacement.
Slicer moves during operation.	Non-slip feet not gripping; unstable surface.	Ensure the slicer is on a clean, dry, and smooth surface. Press down firmly to engage suction cups (if applicable).

SPECIFICATIONS

- **Brand:** CUSIMAX
- **Model:** CMFS-202
- **Material:** Aluminum, Plastic, Stainless Steel
- **Color:** Silver
- **Special Feature:** Electric
- **Recommended Uses:** Bread, Cheese, Meat, Vegetable
- **Product Care Instructions:** Dishwasher Safe (removable parts)
- **Blade Material:** Stainless Steel
- **Blade Shape:** Round
- **Operation Mode:** Automatic
- **Item Weight:** 9.33 pounds
- **Package Dimensions:** 16.1 x 11.1 x 11.1 inches

Cusimax 200W Electric Meat Slicer



Image: The CUSIMAX Meat Slicer with key dimensions indicated, including overall length, height, depth, and the 7.5-inch blade diameter.

WARRANTY AND SUPPORT

CUSIMAX products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official CUSIMAX website. If you encounter any issues or have questions regarding your CUSIMAX Meat Slicer, please contact CUSIMAX customer support for assistance. You can find more information and support on the [CUSIMAX Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question