

SHIMOR C9

SHIMOR C9 Mini Projector User Manual

Model: C9

1. INTRODUCTION

Thank you for purchasing the SHIMOR C9 Mini Projector. This manual provides essential information for setting up, operating, and maintaining your projector to ensure optimal performance and longevity. Please read this manual thoroughly before using the product and keep it for future reference.

1.1. What's in the Box

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- SHIMOR C9 Mini Projector
- 100-Inch Projector Screen
- Remote Control
- Power Cable
- HDMI Cable
- AV Cable
- User Manual
- Mounting Accessories (e.g., adhesive hooks for screen)



Figure 1.1: SHIMOR C9 Mini Projector and its accessories, including the projector unit, remote control, power cable, HDMI cable, AV cable, and the 100-inch projector screen.

1.2. Key Features

- High Brightness: 7500L for clear images.
- Supported Resolution: 1080P.
- Contrast Ratio: 5000:1.
- Aspect Ratio: 4:3 / 16:9.
- Built-in Dual Stereo Speakers with SRS sound system.
- Versatile Connectivity: HDMI, USB, AUX, AV, VGA, TF Card.
- Includes a 100-inch portable projector screen.



Figure 1.2: The SHIMOR C9 Mini Projector shown alongside the included 100-inch projector screen, illustrating its capability to display content from popular streaming services and media devices.

2. SAFETY INSTRUCTIONS

Please read and follow all safety instructions to prevent injury or damage to the projector.

- Do not look directly into the projector lens when the lamp is on.
- Do not place the projector in an unstable position where it could fall.
- Avoid placing the projector in areas with high humidity, dust, or extreme temperatures.
- Ensure proper ventilation; do not block the ventilation openings.
- Use only the power adapter supplied with the projector.
- Do not attempt to repair the projector yourself. Refer all servicing to qualified personnel.
- Keep the projector away from water or other liquids.

3. PRODUCT OVERVIEW

3.1. Projector Components

Familiarize yourself with the various parts of your SHIMOR C9 Mini Projector.

- **Lens:** Projects the image onto the screen.
- **Focus Ring:** Adjusts image clarity.
- **Keystone Correction:** Corrects trapezoidal image distortion.
- **Control Panel:** Manual buttons for navigation and settings.
- **Ventilation Openings:** For heat dissipation.
- **Input Ports:** Connect external devices.
- **Built-in Speakers:** Provide audio output.

3.2. Input/Output Ports

The SHIMOR C9 Mini Projector offers a variety of ports for connecting different devices.



Figure 3.1: Overview of the projector's input ports including VGA, USB, HDMI, TF (MicroSD), AV, and AUX, along with examples of compatible devices such as TV sticks, TV boxes, USB disks, desktop computers, Xbox/PS4, Blu-ray DVD players, phones/iPads/PCs, and external speakers.

4. SETUP

4.1. Placement

Choose a flat, stable surface for the projector. For optimal viewing, place the projector directly in front of the screen or wall. The projection distance will affect the image size.

4.2. Power Connection

1. Connect the power cable to the projector's power input port.
2. Plug the other end of the power cable into a power outlet.
3. The power indicator light on the projector will illuminate.

4.3. Focus and Keystone Correction

After powering on the projector, adjust the image for clarity and proper shape.

- **Focus:** Rotate the focus ring on the projector lens until the image appears sharp and clear.
- **Keystone Correction:** If the projected image appears trapezoidal (wider at the top or bottom), use the keystone correction dial or digital keystone setting in the menu to adjust it into a rectangular shape.

4.4. Connecting External Devices

The SHIMOR C9 Mini Projector supports various connection methods for different devices.

4.4.1. HDMI Connection (Recommended for best quality)

1. Connect one end of the HDMI cable to the HDMI port on your projector.
2. Connect the other end of the HDMI cable to the HDMI output port on your device (e.g., laptop, game console, TV stick, DVD player).
3. Select the corresponding HDMI input source on the projector.

4.4.2. USB Connection

1. Insert a USB flash drive into the USB port on the projector.
2. Select 'USB' as the input source.
3. Navigate through the files to play media.

4.4.3. AV Connection

1. Connect the AV cable to the AV port on the projector.
2. Connect the yellow, white, and red plugs to the corresponding output ports on your device (e.g., older DVD players, VCRs).
3. Select 'AV' as the input source.

4.4.4. Smartphone Connection (HDMI Adapter Required, Not Included)

To connect your smartphone, an HDMI adapter cable (e.g., Lightning to HDMI for iOS, USB-C to HDMI for Android) is required.

1. Connect your smartphone to the HDMI adapter.
2. Connect the HDMI adapter to the projector's HDMI port.
3. Select 'HDMI' as the input source.



How to connect the projector to the mobile phone? (Not include HDMI adapter cable)

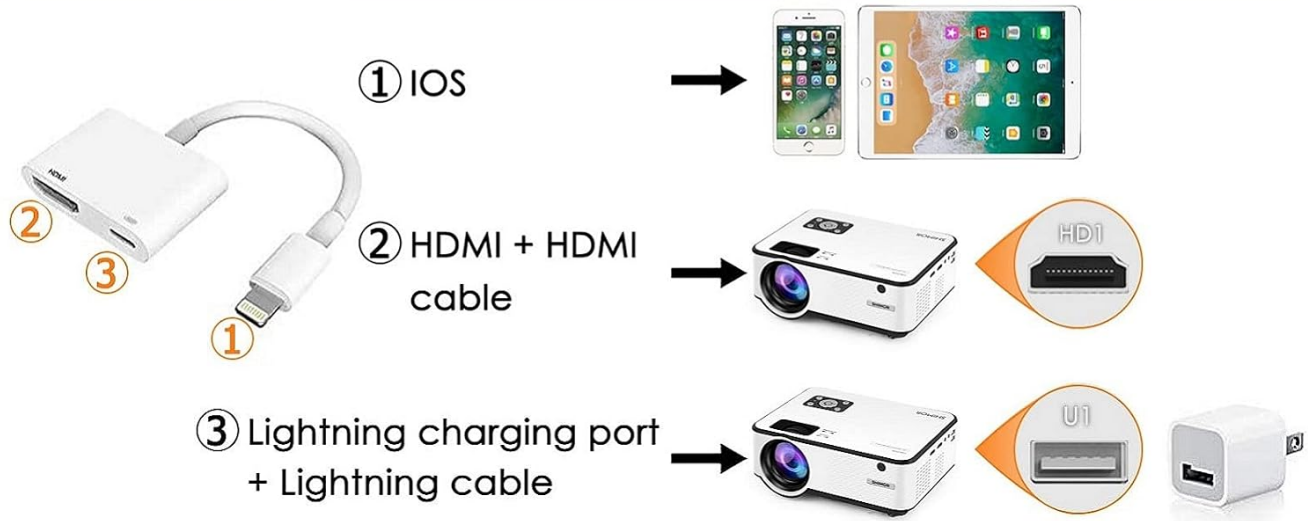


Figure 4.1: Instructions for connecting a mobile phone to the projector. This typically involves an HDMI adapter for the phone, an HDMI cable to the projector, and a power source for the adapter (if required).

4.4.5. Fire TV Stick / Roku Stick Compatibility

The projector is fully compatible with popular streaming sticks like Amazon Fire TV Stick and Roku Stick for easy access to streaming content.

Perfectly Work with Fire TV Stick,Roku Stick



Figure 4.2: The SHIMOR C9 Mini Projector seamlessly integrates with streaming devices such as the Amazon Fire TV Stick and Roku Stick, allowing users to enjoy a wide range of online content on a large screen.

5. OPERATION

5.1. Powering On/Off

- **Power On:** Press the power button on the projector or remote control. The projector will start up and display the main interface.
- **Power Off:** Press the power button again. Confirm shutdown if prompted.

5.2. Menu Navigation

Use the buttons on the projector's control panel or the remote control to navigate the on-screen menu.

- **Arrow Buttons:** Move through menu options.
- **OK/Enter Button:** Select an option or confirm a setting.
- **Back/Exit Button:** Go back to the previous menu or exit the menu.

5.3. Input Source Selection

To switch between connected devices:

1. Press the 'Source' button on the remote control or projector.
2. A list of available input sources (HDMI, USB, AV, VGA, TF) will appear.
3. Use the arrow buttons to select the desired input source and press 'OK'.

5.4. Media Playback (USB/TF Card)

When a USB drive or TF card is inserted and selected as the source, the projector will display a file browser.

- Navigate through folders and files using the arrow buttons.
- Select a file (e.g., video, photo, music) and press 'OK' to play.
- Use the remote control for playback controls (play/pause, fast forward/rewind, next/previous).

5.5. Audio Output

The projector has built-in dual stereo speakers. For enhanced audio, you can connect external speakers via the AUX port.

1. Connect a 3.5mm audio cable from the projector's AUX port to your external speakers.
2. Adjust the volume using the remote control or the projector's volume buttons.

5.6. Usage Recommendations

- For the best viewing experience, use the projector in a dark environment.
- This projector is ideal for home theater, indoor and outdoor movies, and video games.
- It is **not recommended** for professional presentations (e.g., PPT, Word, Excel documents) due to its primary design for entertainment.



Figure 5.1: A family enjoying a movie projected onto a large screen, demonstrating the projector's suitability for home entertainment and creating an immersive viewing experience.

6. MAINTENANCE

Regular maintenance helps prolong the life of your projector and ensures optimal performance.

6.1. Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or cloths that could scratch the lens.

6.2. Cleaning the Projector Body

Wipe the projector's exterior with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no liquid enters the ventilation openings or ports.

6.3. Ventilation

Ensure the ventilation openings are clear of dust and debris. Periodically use a can of compressed air to gently clear dust from the vents.

6.4. Storage

When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging or a protective case.

7. TROUBLESHOOTING

If you encounter issues with your projector, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No picture	Power cable not connected; Incorrect input source; Device not powered on.	Check power connection; Select correct input source; Ensure connected device is on.
Blurry image	Focus not adjusted; Keystone not adjusted; Projector too far/close.	Adjust focus ring; Adjust keystone correction; Adjust projection distance.
No sound	Volume too low; Muted; External speakers not connected properly.	Increase volume; Unmute; Check external speaker connection.
Remote control not working	Batteries low/dead; Obstruction between remote and projector; Remote sensor blocked.	Replace batteries; Remove obstructions; Ensure remote is pointed at the projector's IR sensor.
Image is trapezoidal	Projector not perpendicular to screen.	Adjust keystone correction dial/setting.

8. SPECIFICATIONS

Detailed technical specifications for the SHIMOR C9 Mini Projector.

Feature	Specification
Brand	SHIMOR
Model Number	C9
Display Resolution	1920 x 1080 (1080P Supported)
Brightness	7500 Lumens
Contrast Ratio	5000:1
Aspect Ratio	4:3 / 16:9
Connectivity Technology	HDMI, USB, VGA, AUX, AV, TF Card
Recommended Uses	Home Cinema, Outdoor Movies, Video Games

Feature	Specification
Special Feature	Portable, Built-in Dual Stereo Speakers
Item Weight	5.68 pounds
Package Dimensions	12.01 x 8.74 x 7.09 inches



Figure 8.1: Key performance indicators of the SHIMOR C9 Mini Projector, highlighting its +80% brightness, 65,000 hours lamp life, 1080P supported resolution, and up to 200-inch projection size.



Figure 8.2: A visual comparison illustrating the SHIMOR projector's superior performance with +35% brightness, Native 1280*720 resolution (supporting 1080P input), and a 5000:1 contrast ratio compared to other projectors.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact SHIMOR customer service through the retailer's platform where you purchased the product. Please have your model number (C9) and purchase details ready when contacting support.

© 2023 SHIMOR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question