

- Manuals.plus /
- › RESUXI /
- › RESUXI Hair Clippers User Manual

RESUXI B08GQ2KFZZ

RESUXI Hair Clippers User Manual

Model: B08GQ2KFZZ

INTRODUCTION

Thank you for choosing the RESUXI Hair Clippers. This professional cordless T-blade trimmer is designed for smooth, quick, and precise clipping performance on all hair types. Its high-quality, long-lasting, high-carbon enhanced self-sharpening precision stainless steel blades ensure a superior grooming experience. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair clipper.



Image: The RESUXI Hair Clipper in bronze color, accompanied by its charging cable, cleaning brush, and three guide combs, all presented next to its product box.

PRODUCT FEATURES

- **Cordless Design:** Offers freedom of movement and ease of use without being tethered by a cord.
- **High-Quality Blades:** Equipped with high-carbon enhanced self-sharpening precision stainless steel T-blades for smooth, quick, and precise clipping.
- **Attachment Guide Combs:** Includes 3 guide combs (1mm/2mm/3mm) to help achieve desired hair lengths and styles.
- **Ergonomic Design:** Exquisite and compact for a comfortable grip, allowing for free shaving and cutting from any direction.
- **Ultra-Quiet Operation:** Low DB working sound ensures a comfortable experience for users, including children and

pets.

- **Low Vibration:** Precision motor with low vibration design prevents hair clamping and damage.
- **Large Capacity Battery:** Rechargeable 1500mAh Eco Li-ion battery provides over 180 minutes of nonstop run time on a 2-hour charge.
- **LCD Display:** High-definition LCD display indicates the remaining power, signaling when to recharge.



Image: Detailed view of the RESUXI Hair Clipper highlighting its stainless steel blades, sharp teeth, 10W powerful motor, metal engraving body, USB port, and LED display.

SAFETY INFORMATION

[GENERAL WARNING]

- Keep the appliance dry. Do not use near water or in wet conditions.
- Do not disassemble the product. For repairs, contact qualified service personnel.
- Keep out of reach of children.
- Ensure the charging voltage matches the product specifications.

- Avoid dropping or subjecting the clipper to strong impacts.
- Unplug the clipper before cleaning or maintenance.

SETUP

1. **Unboxing:** Carefully remove all components from the packaging. Verify that all items listed in the package contents are present.
2. **Initial Charge:** Before first use, fully charge the hair clipper. Connect the USB charging cable to the clipper's USB port and plug the other end into a compatible USB adapter, computer/PC, power bank, or car charger. The LCD display will show charging progress.
3. **Blade Inspection:** Ensure the blades are clean and properly aligned. If necessary, gently clean them with the provided brush.
4. **Attach Guide Comb:** Select the desired guide comb (1mm, 2mm, or 3mm) and securely attach it to the clipper head. Ensure it clicks into place.



Image: The RESUXI Hair Clipper showing its built-in 1500mAh battery, charging time of 2 hours, and running time of 3 hours, along with various USB charging options like USB adapter, computer, power bank, and car charger.

OPERATING INSTRUCTIONS

1. **Preparation:** Ensure hair is clean and dry. For best results, comb hair in the direction of growth.
2. **Turn On:** Press the power button to turn on the hair clipper. The LCD display will illuminate.
3. **Clipping:** Gently move the clipper along your hair in the desired direction, against the grain of hair growth for a closer cut, or with the grain for blending. Use the guide combs for consistent length.
4. **Edging and Lining:** For precise edging and lining, remove the guide comb. Hold the clipper at a slight angle and carefully trace the desired lines.
5. **Turn Off:** After use, press the power button to turn off the clipper.

SHARP BLADE WITH PRECISION CUTTING FOR SPECIAL HAIRSTYLES

Safe and fast cutting
Neither hurting nor dragging



Image: A person using the RESUXI Hair Clipper to trim hair, demonstrating its application for various hairstyles and precise cutting.

MAINTENANCE

- **Cleaning Blades:** After each use, turn off the clipper and remove the guide comb. Use the provided cleaning brush to remove any loose hairs from the blades.
- **Oiling Blades:** Regularly apply a few drops of clipper oil (not included) to the blades to ensure smooth operation and prolong their lifespan. Turn the clipper on for a few seconds to distribute the oil.
- **Storage:** Store the clipper in a dry, cool place, away from direct sunlight and moisture. Keep the blade cover on when not in use.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge when the LCD display indicates low power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on	Low battery; Power button not pressed firmly	Charge the clipper; Press the power button firmly until it activates.
Blades pulling hair or cutting poorly	Blades are dull, dirty, or not oiled; Hair is not clean/dry	Clean and oil the blades; Ensure hair is clean and dry before clipping.
Clipper making unusual noise	Blades need oiling; Internal issue	Apply clipper oil to blades; If noise persists, contact customer support.
Battery not charging	Faulty cable/adaptor; Improper connection	Try a different USB cable or adaptor; Ensure secure connection.

SPECIFICATIONS

Brand: RESUXI

Model: B08GQ2KFZZ

Product Dimensions: 2 x 3.7 x 7.6 inches

Item Weight: 14.11 ounces (0.4 Kilograms)

Battery: 1 Lithium Ion battery (included)

Charging Time: Approximately 2 hours

Run Time: Over 180 minutes (3 hours)

Blade Material: High-carbon enhanced self-sharpening precision stainless steel

Included Accessories: 3 attachment guide combs (1mm/2mm/3mm), USB charging cable, cleaning brush.

WARRANTY AND SUPPORT

RESUXI is committed to providing high-quality products and excellent customer service. If you encounter any problems with your RESUXI Hair Clippers, please do not hesitate to contact our customer service team. We are dedicated to providing a satisfactory solution.

For support, please refer to the contact information provided with your purchase or visit the official RESUXI store on Amazon: [RESUXI Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08GQ2KFZZ>

More documents and user manuals: <https://manuals.plus/>