

[Manuals.plus](#) /

› [Deerma](#) /

› Deerma Wired Steam Mop ZQ610 User Manual

Deerma ZQ610

Deerma Wired Steam Mop ZQ610 User Manual

Multifunctional Floor Steamer with Detachable Handheld Steam Cleaner

1. INTRODUCTION

Thank you for choosing the Deerma Wired Steam Mop ZQ610. This multifunctional steam cleaner is designed to provide efficient and chemical-free cleaning for various surfaces in your home. With its detachable handheld unit and multiple attachments, it offers versatile cleaning solutions for floors, kitchen surfaces, windows, furniture, and even clothes. Please read this user manual thoroughly before operating the appliance to ensure safe and effective use. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not leave the steam mop unattended while it is plugged in or operating.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this may damage the appliance or create hazardous fumes.
- Keep the appliance out of reach of children and pets.
- Do not direct steam at people, animals, or electrical appliances.
- Always unplug the steam mop before filling, emptying, or cleaning.
- Ensure the power cord is not damaged or tangled during use.
- Allow the appliance to cool down completely before storing.

3. PRODUCT COMPONENTS

The Deerma ZQ610 comes with several components and attachments for various cleaning tasks. Familiarize yourself with each part:



Figure 3.1: Overview of the Deerma ZQ610 Steam Mop and its various configurations, including the main unit, extension pole, and different cleaning heads.



Figure 3.2: Key features of the steam mop, highlighting its steam flow rate of 20g/min, energy efficiency, and 230ml tank capacity.



Figure 3.3: The squeegee attachment, ideal for cleaning windows and other smooth surfaces.



Figure 3.4: The brass brush attachment, suitable for tough grime on durable surfaces like oven grates.



Figure 3.5: The scrubbing brush attachment, useful for cleaning grout and stubborn spots.

Included Components: Nozzle, Cleaning Pad, Measuring Cup, Brass Brush, Squeegee, Nylon Brush, Hose, Mop Pad, Funnel, Extension Tube, Towel Sleeve, Plastic Brush, Grout Brush, User Manual.

4. SETUP

Before first use, ensure all components are present and undamaged. Assembly is straightforward and varies depending on the desired cleaning mode.

4.1 Filling the Water Tank

1. Ensure the steam mop is unplugged.
2. Locate the water tank cap on the main unit.
3. Open the cap and use the provided measuring cup and funnel to fill the tank with up to 230ml of distilled or demineralized water. Do not overfill.
4. Securely close the water tank cap.

4.2 Assembling for Floor Cleaning (Mop Mode)

1. Attach the extension tube to the main handheld unit until it clicks into place.
2. Connect the mop head to the bottom of the extension tube.

3. Attach a clean mop pad to the bottom of the mop head. The mop pad is secured by a foot release mechanism for easy attachment and removal.



Figure 4.1: The mop head features a convenient foot-operated release for attaching and detaching cleaning pads.

4.3 Assembling for Handheld Cleaning

For handheld cleaning, detach the extension tube from the main unit. Select the appropriate attachment (e.g., nozzle, brush, squeegee) and connect it directly to the main unit or via the flexible hose if needed.

5. OPERATING INSTRUCTIONS

The Deerma ZQ610 is designed for ease of use. Follow these steps for effective cleaning:

5.1 Powering On and Heating Up

1. Once assembled and filled with water, plug the power cord into a grounded electrical outlet.
2. The indicator light will illuminate, indicating the unit is heating up. The steam mop heats up quickly, typically within 20 seconds.
3. When the indicator light turns solid (or changes color as per specific model indication), the steam mop is ready for use.

5.2 Using the Steam Mop (Floor Cleaning)

For floor cleaning, gently push the mop head back and forth over the surface. Steam will be released automatically. The high temperature steam (up to 105°C) helps to sanitize and clean various floor types including tiles, hardwood, and laminate.

150 °C Steam Faster Drying With **Heated** Cleaning

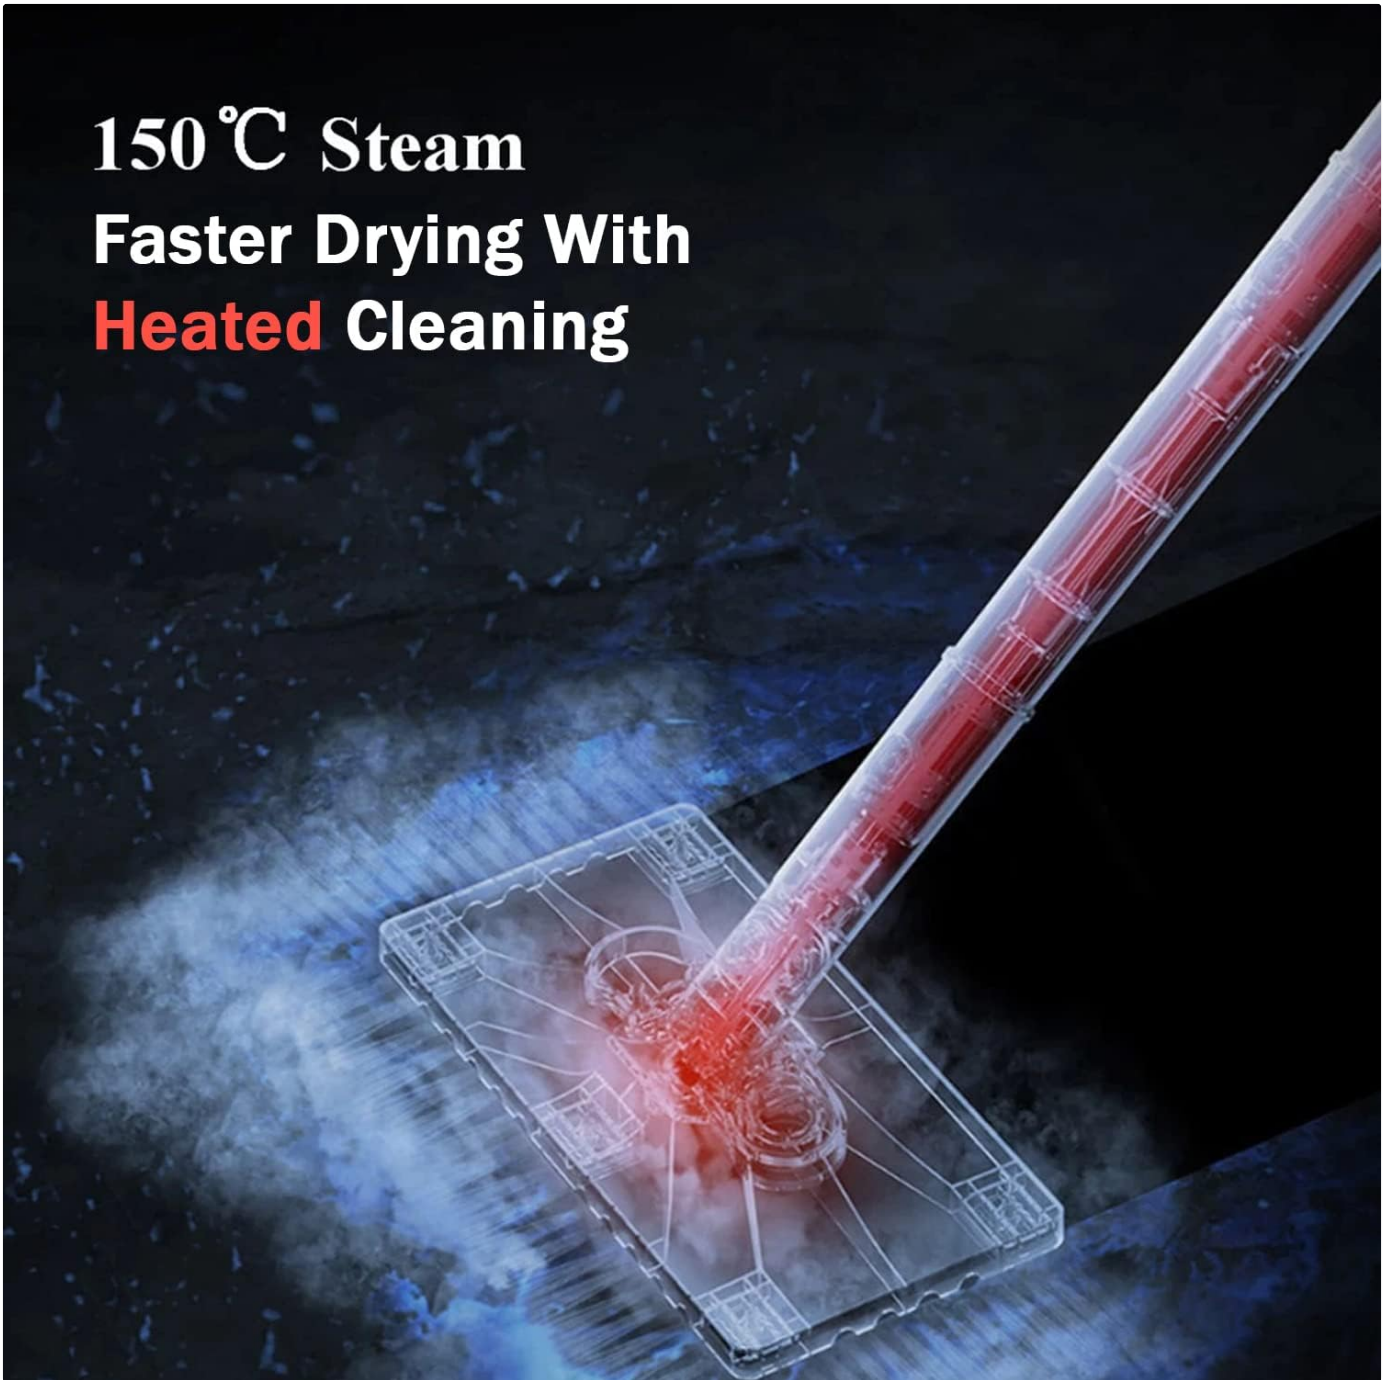


Figure 5.1: The steam mop in action, demonstrating its heated cleaning capability for floors.



Figure 5.2: The steam mop is effective on multiple floor surfaces, including hardwood, laminate, tile, and carpet.

5.3 Using the Handheld Steam Cleaner

The detachable handheld unit allows for targeted cleaning. Attach the desired accessory and direct the steam towards the area to be cleaned. This mode is ideal for:

- **Kitchen Surfaces:** Use the brush attachments for stovetops, sinks, and countertops.
- **Windows and Glass:** Attach the squeegee for streak-free cleaning.
- **Furniture and Fabrics:** Use the towel sleeve over the nozzle for refreshing upholstery and clothes.



Hand-Held Garment Steamer

Figure 5.3: The handheld unit can be used as a garment steamer to refresh clothes and fabrics.



Figure 5.4: The versatile steamer can clean various surfaces, including glass, floors, and fabrics.

5.4 Official Product Video

Your browser does not support the video tag.

Video 5.1: Official product video demonstrating the Deerma Multifunctional Steam Mop ZQ610 in various cleaning scenarios, showcasing its versatility and ease of use.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Deerma Steam Mop.

6.1 Cleaning the Mop Pads and Attachments

- After each use, remove the mop pad and wash it. Mop pads are typically machine washable.

- Clean all attachments (brushes, squeegee, etc.) with water and mild soap as needed. Rinse thoroughly and allow to air dry.

6.2 Descaling the Water Tank

If you notice reduced steam output or mineral buildup, descaling may be necessary. This is less frequent if distilled water is consistently used.

1. Unplug the appliance and ensure it is completely cool.
2. Empty any remaining water from the tank.
3. Mix a solution of 1 part white vinegar to 2 parts water.
4. Pour the solution into the water tank and let it sit for 30 minutes to an hour.
5. Empty the solution and rinse the tank thoroughly with fresh water several times.
6. Run a tank of plain water through the steamer to flush out any residual vinegar.

6.3 Storage

Store the steam mop in a cool, dry place. Ensure the water tank is empty before storage. The detachable design allows for compact storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam produced	Water tank empty; Not plugged in; Not heated up; Mineral buildup.	Fill water tank; Plug in securely; Wait for indicator light; Descale the unit.
Low steam output	Mineral buildup; Insufficient water.	Descale the unit; Refill water tank.
Water leaking from unit	Water tank cap not secured; Overfilled tank; Incorrect attachment.	Ensure cap is tight; Do not overfill; Check attachment is correctly fitted.
Mop pad not staying on	Pad worn out; Not properly attached.	Replace mop pad; Ensure pad is correctly aligned and secured with the foot release.

8. SPECIFICATIONS

- Model:** ZQ610
- Brand:** Deerma
- Power:** 1700 Watts
- Water Tank Volume:** 230 Milliliters
- Maximum Temperature:** 105 Degrees Celsius

Item Weight: 450 Grams (main unit) / 15.9 ounces

Product Dimensions: 17.32 x 15.75 x 8.66 inches (assembled)

Power Source: Wired Electric

Surface Recommendation: Sinks, Floor, Windows, Doors, Tiles, Carpet, Hard Floor

Special Feature: Detachable Handheld Steam Cleaner

9. WARRANTY AND SUPPORT

Deerma products are manufactured to the highest quality standards. For warranty information, product support, or to purchase replacement parts and accessories, please visit the official Deerma website or contact their customer service department.

Official Deerma Store: [Visit the Deerma Store on Amazon](#)

Please retain your proof of purchase for warranty claims.

© 2023 Deerma. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08GR59DPF>

More documents and user manuals: **<https://manuals.plus/>**