

[Manuals.plus](#) /

› [Satisfyer](#) /

› Satisfyer Pro 2 Next Generation Air Pulse Stimulator User Manual

Satisfyer Satisfyer Pro 2 Next Generation Air Pulse Stimulator

Satisfyer Pro 2 Next Generation Air Pulse Stimulator User Manual

Brand: Satisfyer

Model: Pro 2 Next Generation Air Pulse

INTRODUCTION

The Satisfyer Pro 2 Next Generation Air Pulse Stimulator is an innovative device designed for clitoral stimulation. It utilizes advanced Air Pulse technology to deliver intense, contact-free sensations, enhancing pleasure. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your device to ensure optimal performance and longevity.



Image: The Satisfyer Pro 2 Next Generation Air Pulse Stimulator alongside its retail packaging. The device is rose gold with a white silicone head.

Key Features:

- **Air Pulse Technology:** Provides contact-free clitoral stimulation with intense pressure waves.
- **Dual Motors:** Features 2 independent and silent motors for versatile stimulation.
- **Multiple Intensities:** Offers 11 pressure wave intensities and 10 vibration modes for personalized pleasure.
- **Waterproof Design (IPX7):** Fully submersible, allowing for use in the bath or shower and easy cleaning.
- **Body-Safe Material:** Constructed from hypoallergenic surgical silicone and ABS plastic.
- **Rechargeable:** Convenient magnetic USB charging.



Image: An illustration showing the Satisfyer Pro 2 with icons representing its key features: pressure waves and contact-free stimulation, hypoallergenic silicone, and IPX7 waterproof protection.

SETUP

Initial Charging:

1. Before first use, fully charge your Satisfyer Pro 2.
2. Locate the magnetic charging contacts on the device.
3. Connect the included magnetic USB charging cable to the device, ensuring a secure connection.
4. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
5. The indicator light on the device will illuminate or flash to indicate charging. Charging typically takes a few hours.

6. Once fully charged, the indicator light will change or turn off. Disconnect the device from the charger.

First Use Preparation:

- Before initial use and after each use, clean the device thoroughly.
- Wash the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
- Rinse thoroughly with clean water and pat dry with a lint-free cloth.
- Ensure the device is completely dry before storage or charging.

OPERATING INSTRUCTIONS

Powering On/Off:

- To turn the device **ON**, press and hold the power button (usually the smaller, circular button) for a few seconds until the device vibrates or the indicator light illuminates.
- To turn the device **OFF**, press and hold the power button again for a few seconds until the device stops.

Adjusting Intensity:

- The Satisfyer Pro 2 features two main control buttons: a '+' button to increase intensity and a '-' button to decrease intensity.
- Press the '+' button to cycle through the 11 pressure wave intensities and 10 vibration modes. Each press will advance to the next intensity level or mode.
- Press the '-' button to decrease the intensity or cycle backward through the modes.
- Experiment with different intensities and modes to find what is most pleasurable for you.



Image: A top-down view of the Satisfyer Pro 2, clearly showing the oval-shaped intensity control buttons (+ and -) and the circular power button below them.

Usage Tips:

- Apply the silicone head of the device directly to the clitoris without making direct contact. The Air Pulse technology works by creating gentle pressure waves around the area.
- Use a water-based lubricant for enhanced comfort and sensation, especially if you prefer some glide.
- The device is waterproof (IPX7 rated) and can be used in the shower or bath for a different experience.

MAINTENANCE

Cleaning:

- Always clean your Satisfyer Pro 2 immediately after each use.
- Wash the device with warm water and a mild, antibacterial soap or a dedicated toy cleaner.
- Rinse thoroughly under running water, ensuring no soap residue remains.
- Dry the device completely with a soft, lint-free cloth before storing.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone and ABS materials.

Storage:

- Store your device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials (e.g., jelly, PVC) to prevent material degradation or reactions.
- Consider storing it in its original packaging or a dedicated storage pouch to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the magnetic USB cable. Ensure the charging contacts are clean and properly aligned.
Device does not charge.	Improper cable connection; faulty charger/port; dirty charging contacts.	Ensure the magnetic cable is securely connected. Try a different USB port or power adapter. Clean the charging contacts on both the device and the cable.
Weak or inconsistent stimulation.	Low battery; improper placement; silicone head obstruction.	Recharge the device. Adjust the position of the device on the clitoris. Ensure the silicone head is clean and free from debris.
Device makes unusual noises.	Internal malfunction.	Discontinue use. Contact Satisfyer customer support for assistance.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Satisfyer customer support for further assistance.

SPECIFICATIONS

Model Name	Satisfyer Pro 2 Next Generation Air Pulse
Brand	Satisfyer
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Water Resistance Level	IPX7 (Waterproof)
Power Source	Rechargeable Lithium Battery (Magnetic USB Charging)

Intensity Levels	11 Pressure Wave Intensities, 10 Vibration Modes
Manufacturer Reference	0120
ASIN	B08GR64T7F
EAN	6015911976935

Dimensions:

- **Overall Length:** Approximately 16 cm (6.3 inches)
- **Head Width:** Approximately 6 cm (2.4 inches)
- **Body Width (narrowest point):** Approximately 3 cm (1.2 inches)
- **Base Width:** Approximately 4.5 cm (1.8 inches)

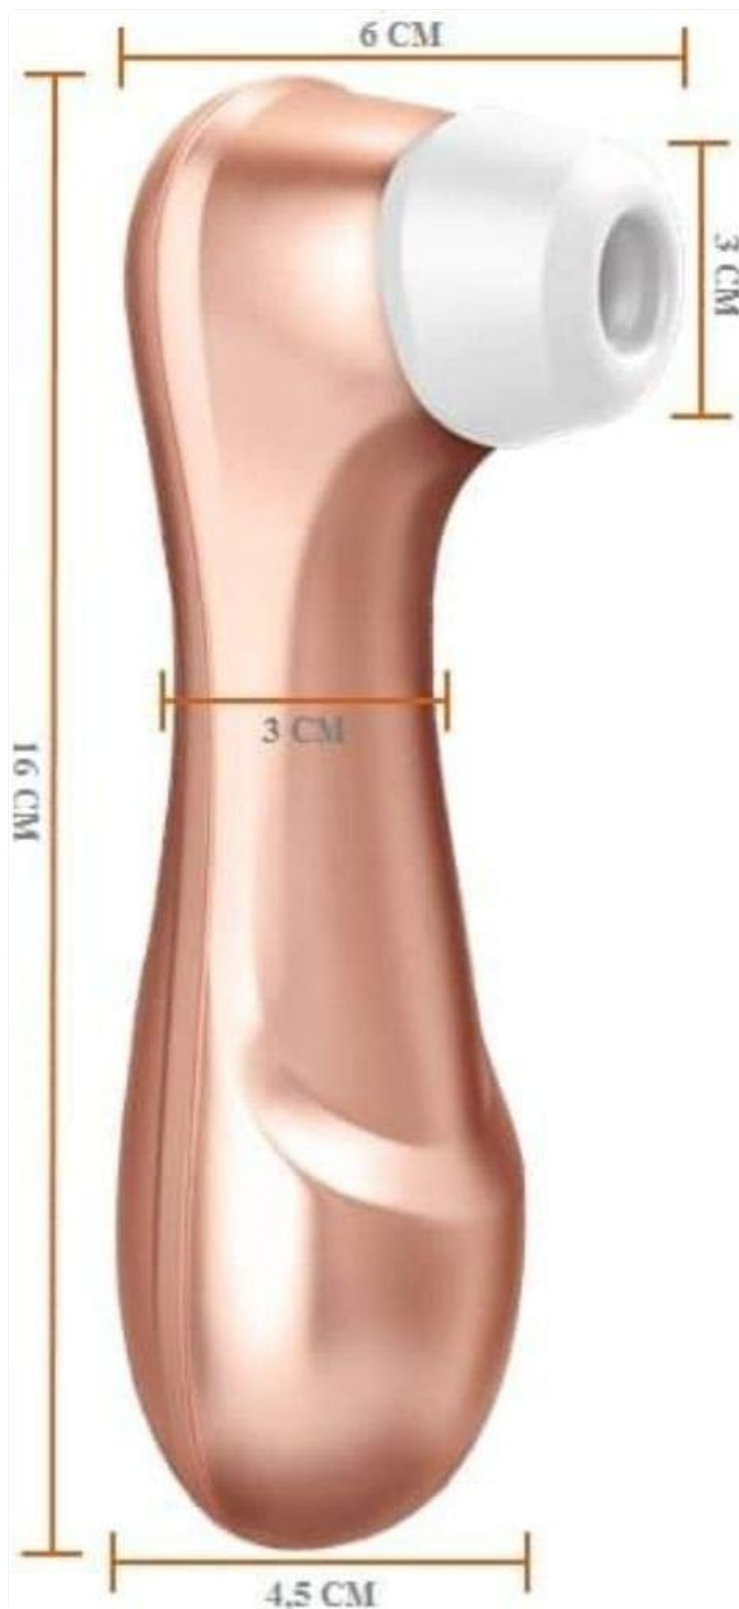


Image: A side view of the Satisfyer Pro 2, illustrating its key dimensions including overall length (16 cm), head width (6 cm), and body width (3 cm).

WARRANTY AND SUPPORT

Warranty Information:

Specific warranty terms and conditions for the Satisfyer Pro 2 Next Generation Air Pulse Stimulator are provided by the manufacturer. Please refer to the warranty card included with your product or visit the official Satisfyer website for detailed information regarding warranty coverage, duration, and claims procedures.

Customer Support:

For technical support, product inquiries, or assistance with warranty claims, please contact Satisfyer customer service through their official website or the contact information provided in your product packaging. Always provide your model number and purchase details when seeking support.

- **Official Website:** www.satisfyer.com (Please verify the exact URL from your product documentation)
- **Email Support:** Refer to the website for contact forms or email addresses.

© 2023 Satisfyer. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question