

[Manuals.plus](#) /

› [Morphy Richards](#) /

› Morphy Richards AT 402 Pop-Up Toaster User Manual

Morphy Richards AT 402

Morphy Richards AT 402 Pop-Up Toaster User Manual

Model: AT 402 (370060)

1. INTRODUCTION

Thank you for choosing the Morphy Richards AT 402 Pop-Up Toaster. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and retain them for future reference.

**Enjoy a crackling breakfast
with AT 402 Pop-Up Toaster**



Image 1.1: The Morphy Richards AT 402 Pop-Up Toaster, designed for perfect toast.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to 'off', then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not operate unattended.

3. PRODUCT COMPONENTS

Familiarize yourself with the key parts of your Morphy Richards AT 402 Pop-Up Toaster:

- **Toasting Slots:** Four wide slots designed to accommodate various bread sizes.
- **Browning Control Dial:** Adjusts toast shade from light (1) to dark (7).
- **Carriage Lever:** Lowers bread into the toasting slots and initiates the toasting cycle.
- **Cancel Button:** Stops the toasting cycle at any time.
- **Reheat Button:** Warms previously toasted bread without further browning.
- **Defrost Button:** Toasts frozen bread for a longer duration.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.
- **Cool Touch Body:** Ensures safe handling during operation.



Image 3.1: Key features of the AT 402 Toaster, including wide slots and bread centering.

4. SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Dispose of packaging responsibly.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains. Ensure adequate ventilation around the toaster.
3. **First Use:** Before toasting bread for the first time, operate the toaster without bread on the highest browning setting (7) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process.
4. **Power Connection:** Ensure your power outlet is compatible with the toaster's specifications (230 Volts, 1450 Watts). Plug the 16A power 3-pin top into a suitable wall outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your pop-up toaster:

1. **Insert Bread:** Place up to four slices of bread into the toasting slots. The bread centering feature will automatically position the bread for even toasting.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 7 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust as needed for future use.
3. **Start Toasting:** Press the carriage lever down until it locks into place. The toasting cycle will begin, and the indicator light will illuminate.
4. **Automatic Pop-Up:** Once the selected browning level is reached, the toast will automatically pop up, and the toaster will switch off.
5. **Cancel Function:** To stop the toasting cycle at any time, press the 'Cancel' button.
6. **Reheat Function:** To warm up already toasted bread, insert the bread, press the carriage lever down, then press the 'Reheat' button. This cycle is shorter and does not add significant browning.

7. **Defrost Function:** To toast frozen bread, insert the bread, press the carriage lever down, then press the 'Defrost' button. This function adds extra time to the toasting cycle to thaw and then toast the bread.



Image 5.1: Browning control dial and function buttons for precise toasting.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Clean Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard accumulated crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
4. **Do Not Immerse:** Never immerse the toaster body, cord, or plug in water or any other liquid.
5. **Internal Cleaning:** Do not attempt to clean the inside of the toaster with any sharp objects or utensils, as this may damage heating elements or cause electric shock.



Image 6.1: The removable crumb tray for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

- **Toaster does not turn on:**
 - Ensure the toaster is securely plugged into a working power outlet.
 - Check if the carriage lever is fully pressed down and locked into place.
 - Verify the power supply to the outlet.
- **Toast is too light or too dark:**
 - Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
 - Note that different types of bread toast differently.
- **Toast does not pop up:**
 - Ensure the carriage lever is not obstructed.
 - If the issue persists, unplug the toaster and contact customer support.
- **Smoke coming from toaster:**
 - Immediately press the 'Cancel' button and unplug the toaster.
 - This may be due to crumbs accumulating in the bottom. Clean the crumb tray thoroughly.
 - If food is jammed, carefully remove it after unplugging and ensuring the toaster is cool.

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Morphy Richards
Model Number	370060 (AT 402)
Colour	White
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions (D x W x H)	16.4D x 41.8W x 19H Centimeters
Wattage	1450 Watts
Voltage	230 Volts
Slot Count	4
Browning Settings	7
Special Features	Cancel Function, Variable Browning Control, Reheat, Defrost, Bread Centering, Removable Crumb Tray, Cool Touch Body
Item Weight	2000 Grams
Included Components	1 unit toaster, instruction manual, warranty card



Image 8.1: Product dimensions of the AT 402 Toaster.

9. WARRANTY INFORMATION

The Morphy Richards AT 402 Pop-Up Toaster comes with a **2-year warranty on the product** from the date of

purchase. Please retain your purchase receipt and warranty card for any warranty claims. The warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.



Image 9.1: Enjoy peace of mind with the 2-year warranty.

10. CUSTOMER SUPPORT

For any queries, service requests, or further assistance, please contact Morphy Richards customer support. Refer to the contact information provided on your warranty card or visit the official Morphy Richards website.

Manufacturer Contact Information: Imported and Marketed by Bajaj Electricals Ltd, 45/47, Veer Nariman Road, Mumbai, 400001.

